## Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

## Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature,indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal,please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product,or their local government office,for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.This product should not be mixed with other commercial wastes for disposal.

ENERGY STAR

AH68-02160B

MM-DG35
MM-DG36

# PERSONAL MICRO COMPONENT SYSTEM

## user manual

imagine the possibilities

Thank you for purchasing a Samsung product.

To receive a more complete service,
please register your product at
www.samsung.com/global/register

# Safety Warnings

**CAUTION**

RISK OF ELECTRIC SHOCK.
DO NOT OPEN

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER (or BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**CLASS 1 LASER PRODUCT**
**KLASSE 1 LASER PRODUKT**
**LUOKAN 1 LASER LAITE**
**KLASS 1 LASER APPARAT**
**PRODUCTO LASER CLASE 1**

⚡ This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.

⚠ This symbol indicates important instructions accompanying the product.

**CLASS 1 LASER PRODUCT**

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

**WARNING :** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION :** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

**CAUTION**

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

## WHAT’S INCLUDED

Check for the supplied accessories below.

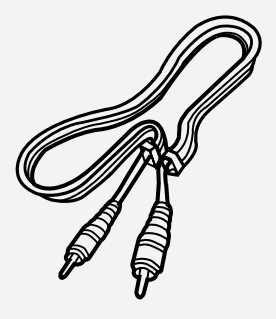

Video Cable



FM Antenna



User's Manual



Remote Control

# Precautions

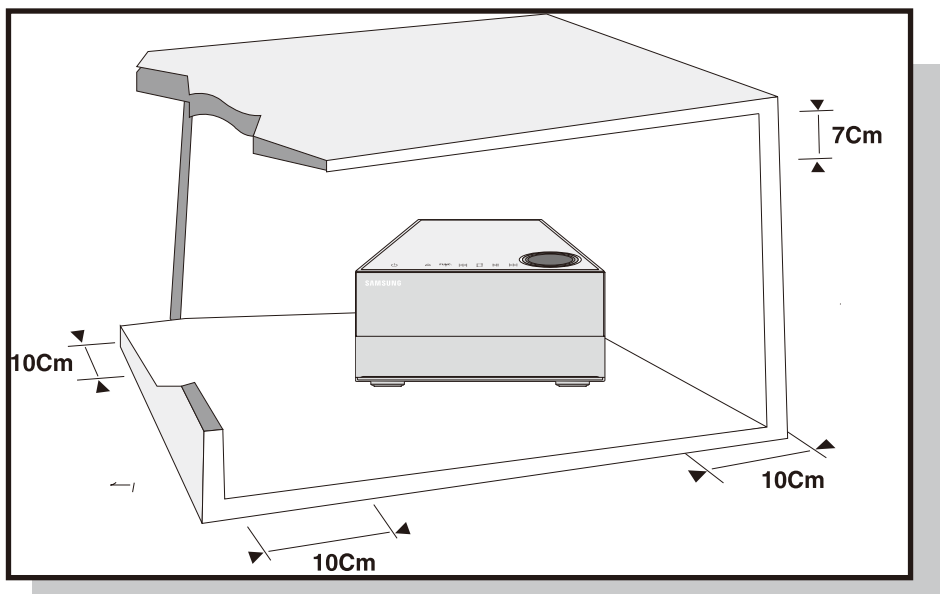

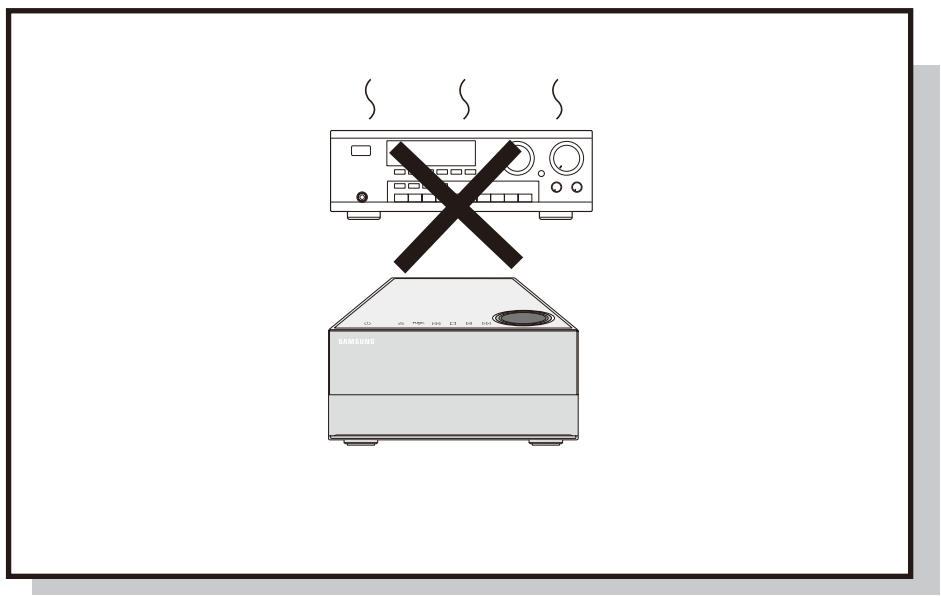

Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

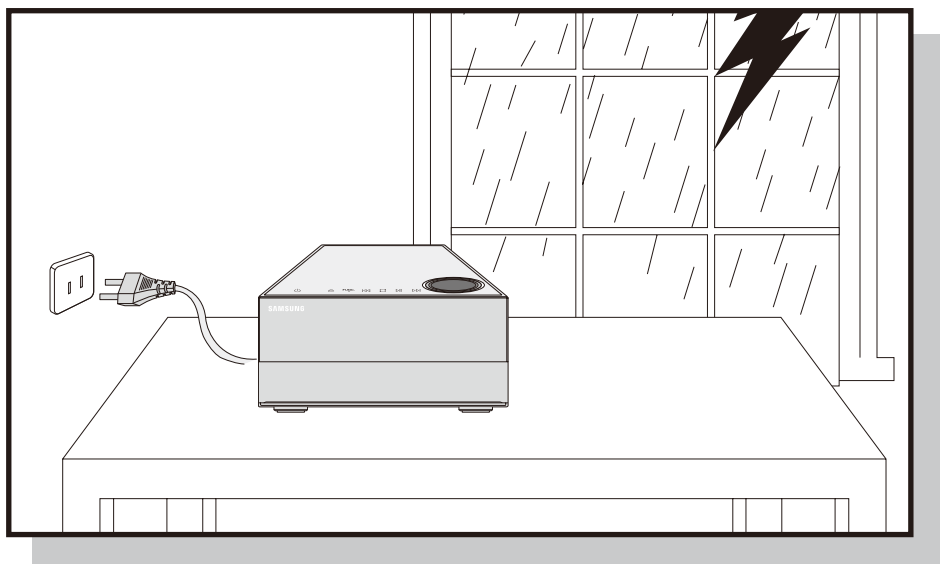

During thunderstorms, disconnect AC main plug from the wall outlet.

Voltage peaks due to lightning could damage the unit.

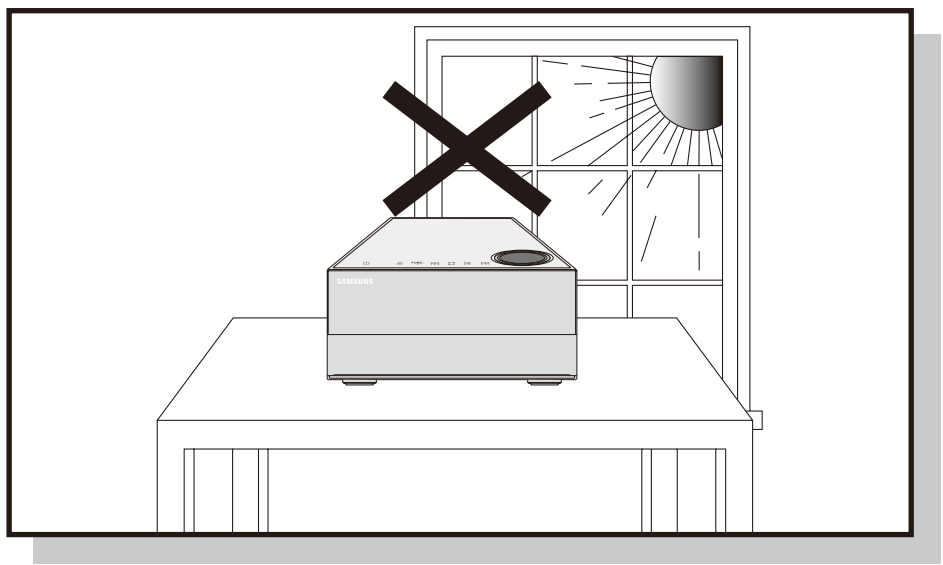

Do not expose the unit to direct sunlight or other heat sources.

This could lead to overheating and malfunction of the unit.

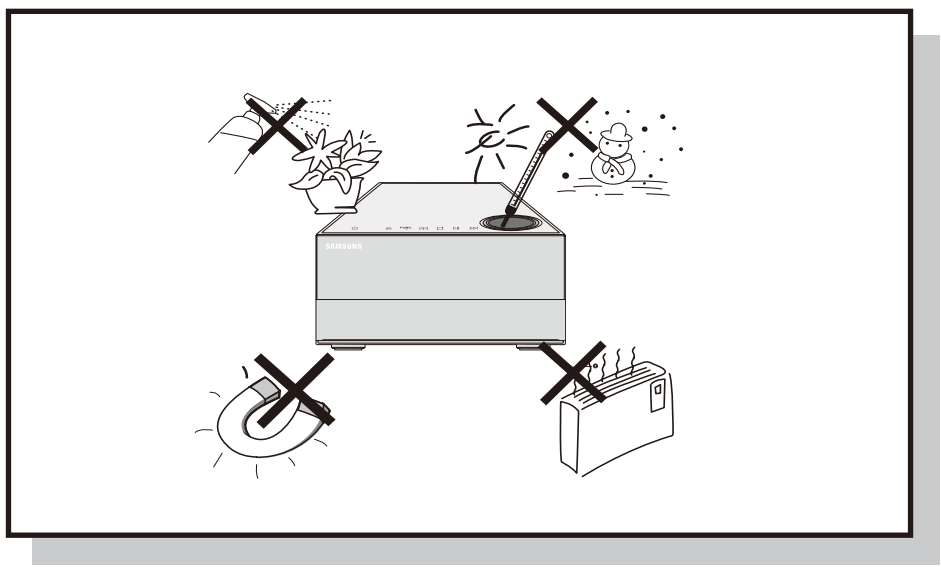

Protect the player from moisture(i.e. vases) , and excess heat(e. g.fireplace) or equipment creating strong magnetic or electric fields (i. e.speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use.

Use of this product is for personal use only.

Condensation may occur if your player or disc have been stored in cold temperatures.

If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

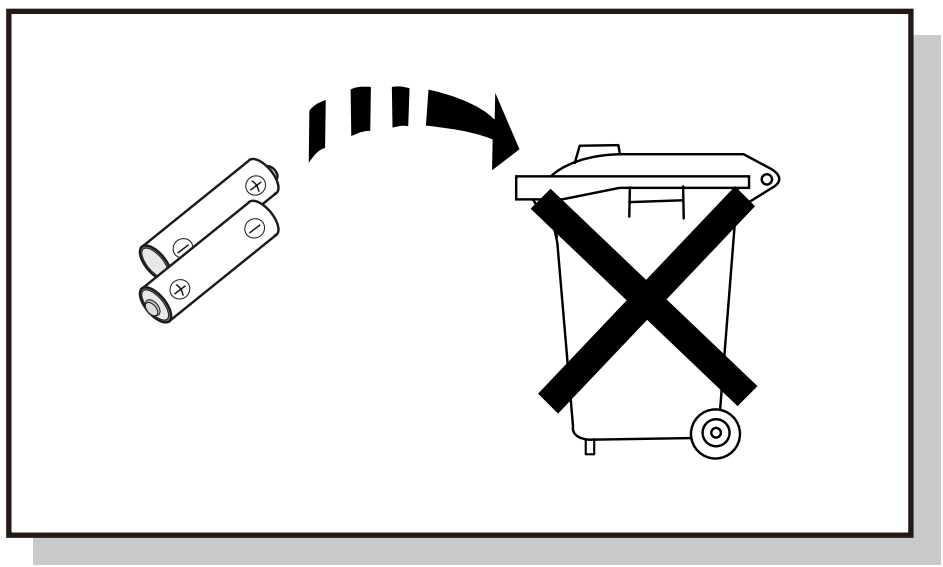

The battery used with this product contain chemicals that are harmful to the environment.

Do not dispose of batteries in the general household trash.

# Features

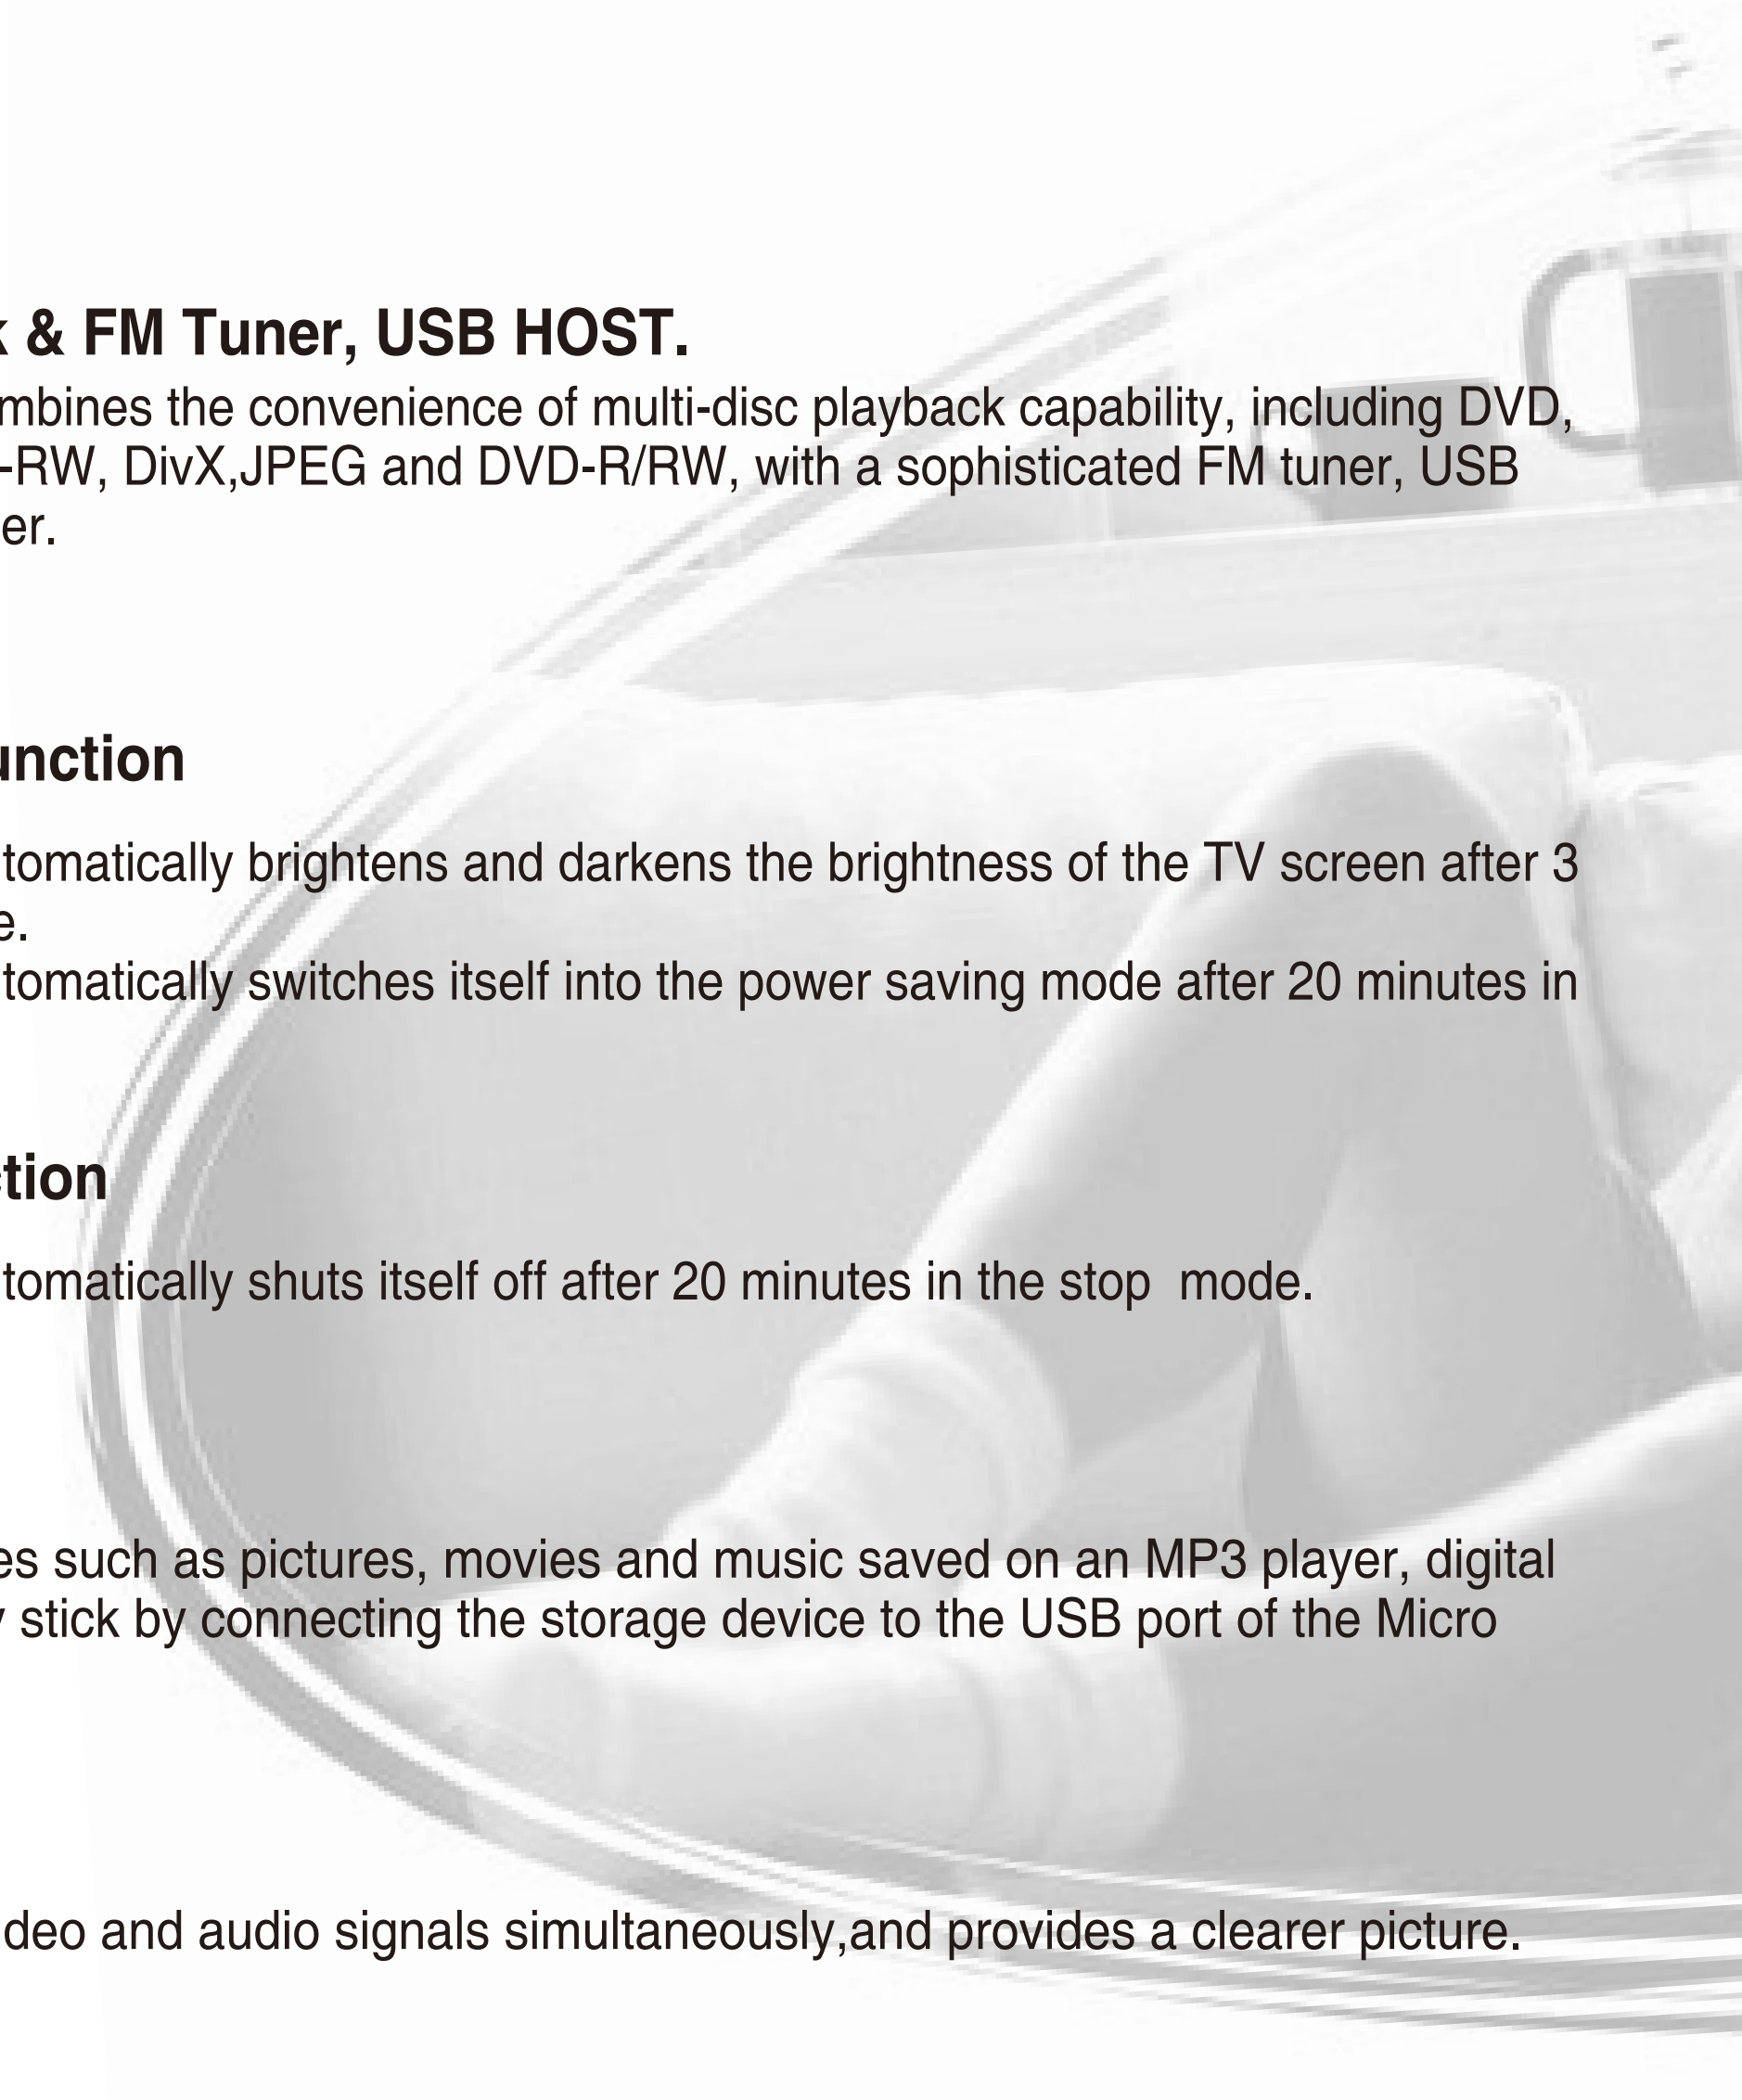

## Multi-Disc Playback & FM Tuner, USB HOST.

The MM-DG35/DG36 combines the convenience of multi-disc playback capability, including DVD, CD, MP3-CD, CD-R, CD-RW, DivX,JPEG and DVD-R/RW, with a sophisticated FM tuner, USB HOST all in a single player.

## TV Screen Saver Function

The MM-DG35/DG36 automatically brightens and darkens the brightness of the TV screen after 3 minutes in the stop mode.
The MM-DG35/DG36 automatically switches itself into the power saving mode after 20 minutes in the screen saver mode.

## Power Saving Function

The MM-DG35/DG36 automatically shuts itself off after 20 minutes in the stop mode.

## USB Host support

You can enjoy media files such as pictures, movies and music saved on an MP3 player, digital camera or USB memory stick by connecting the storage device to the USB port of the Micro Component.

## HDMI

HDMI transmits DVD video and audio signals simultaneously,and provides a clearer picture.

## Anynet+ (HDMI-CEC) Function

Anynet+ is a function that can be used to operate the main unit using a Samsung TV remote control, by connecting the Micro Component System to a SAMSUNG TV using a HDMI Cable. (This is only available with SAMSUNG TV's that support Anynet+.)

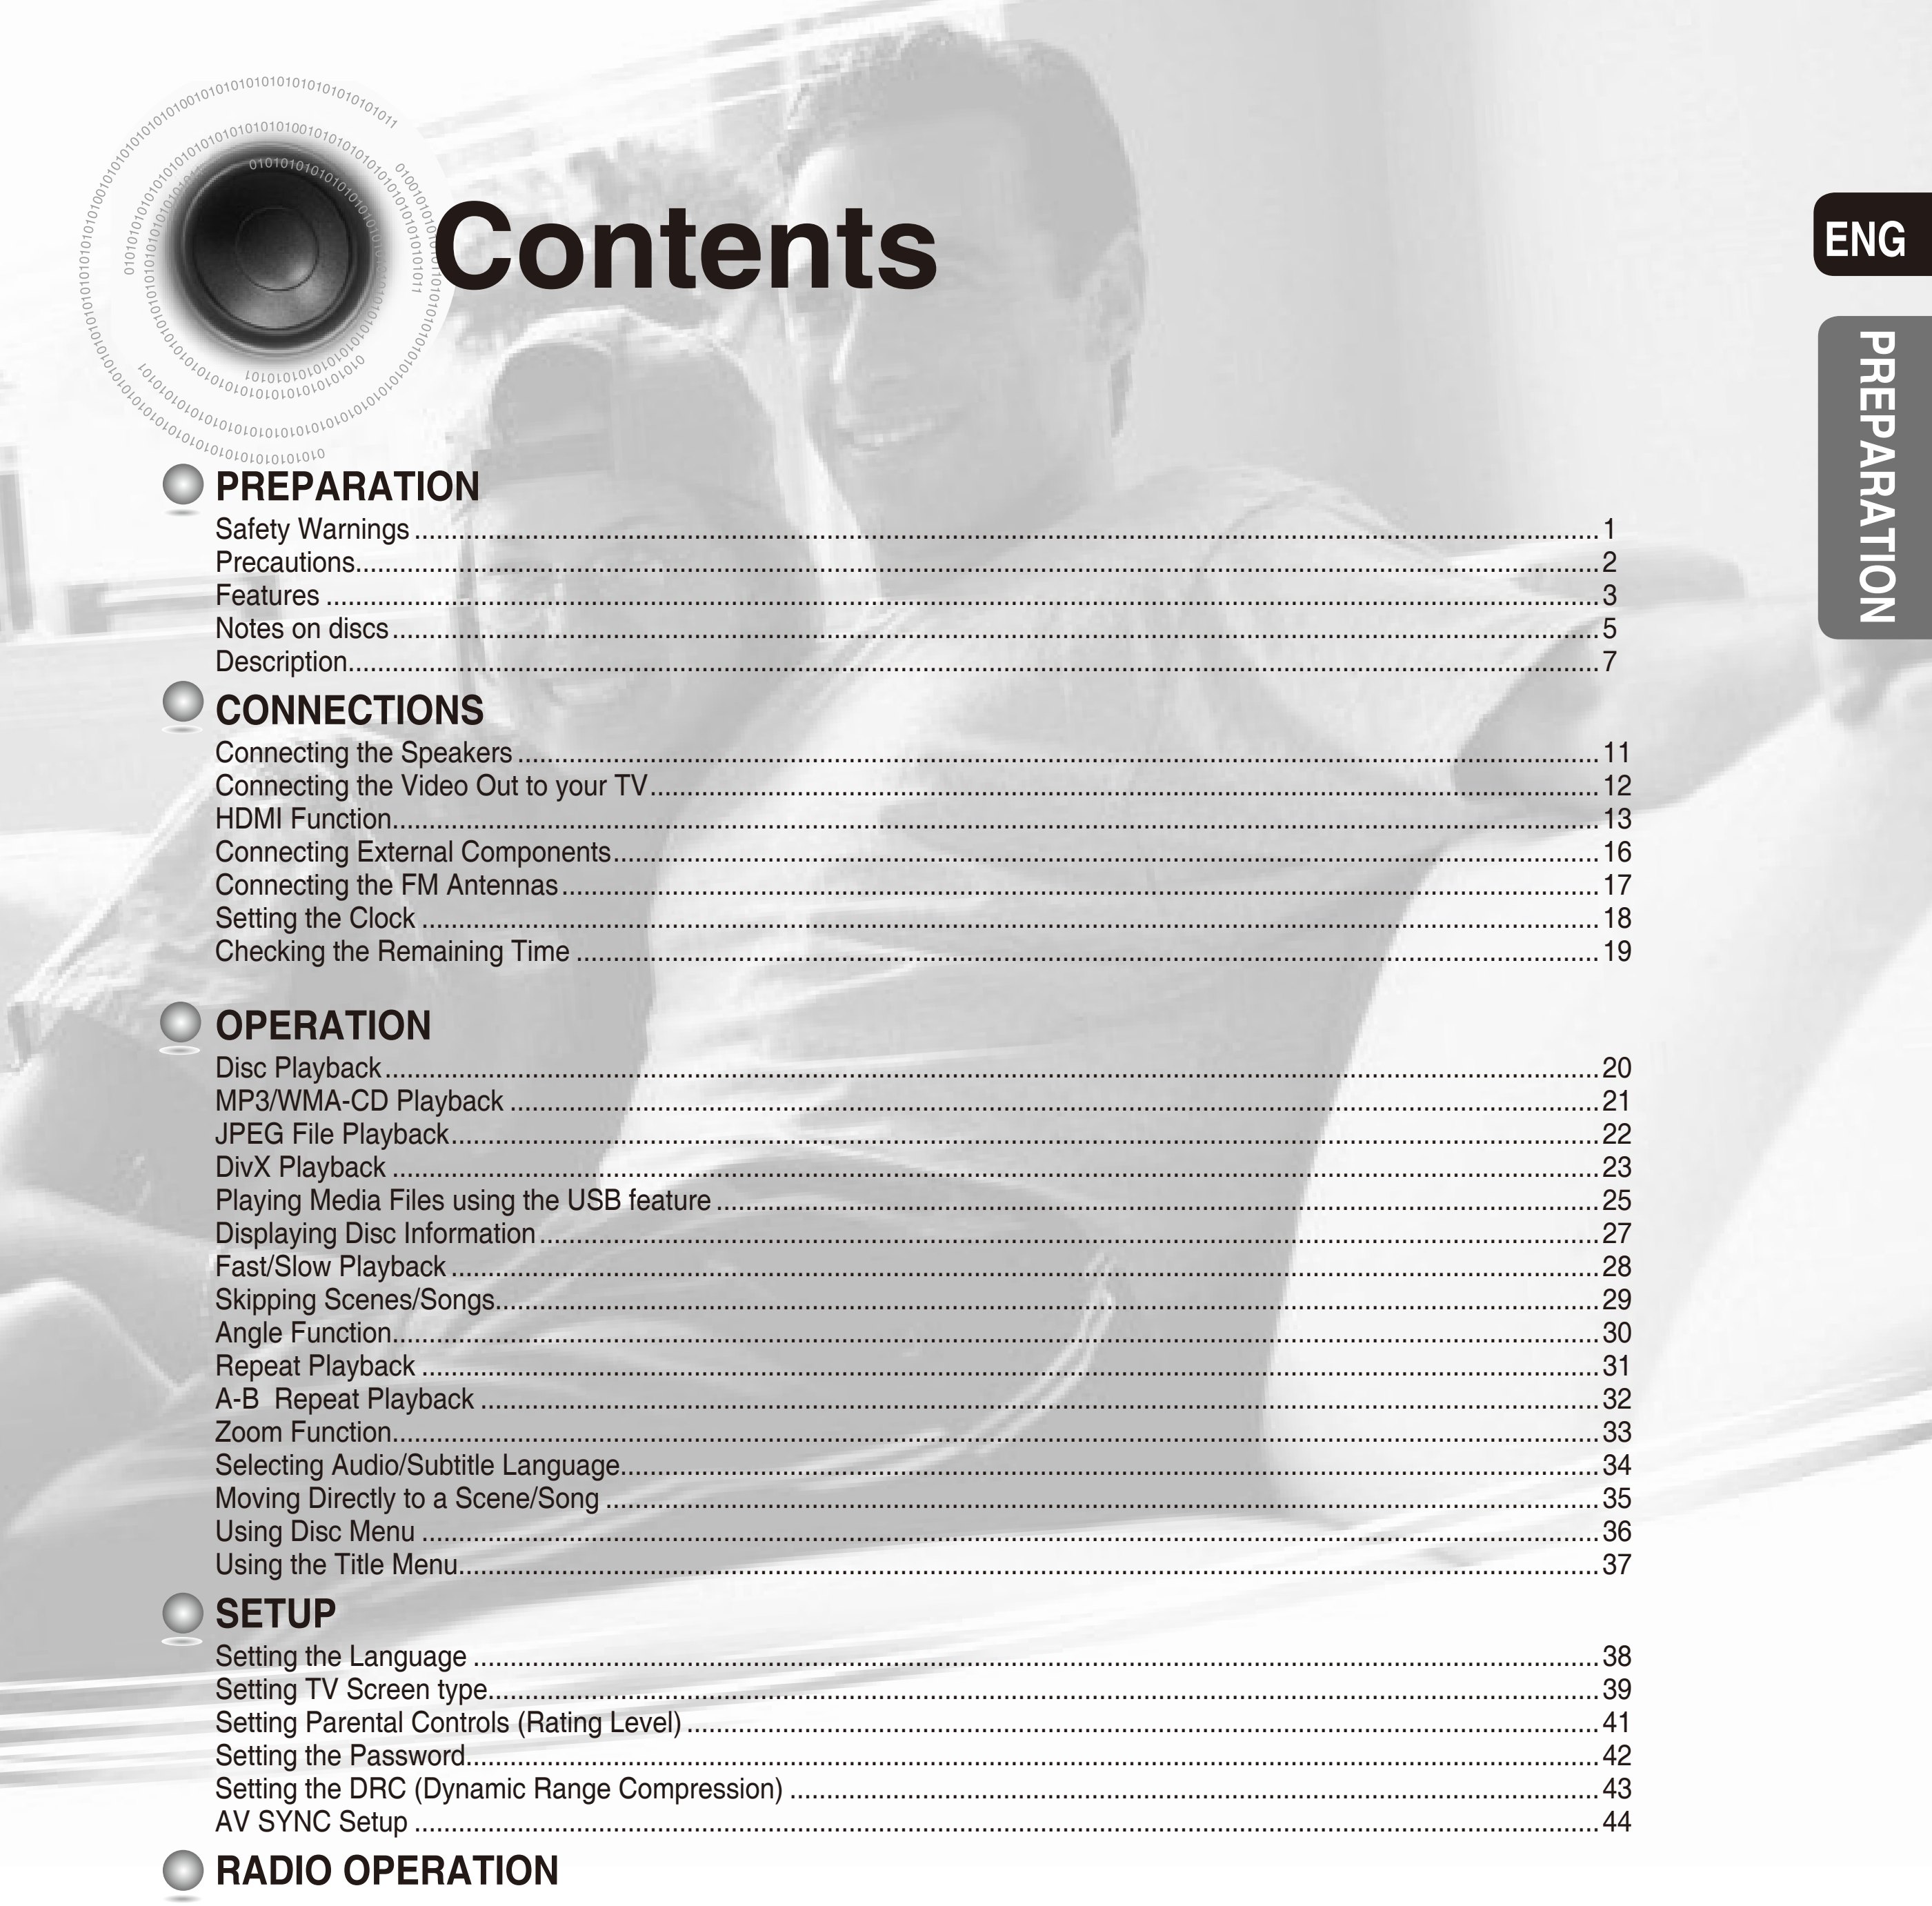

# Contents

## PREPARATION

Safety Warnings ........ 1
Precautions ........ 2
Features ........ 3
Notes on discs ........ 5
Description ........ 7

## CONNECTIONS

Connecting the Speakers ........ 11
Connecting the Video Out to your TV ........ 12
HDMI Function ........ 13
Connecting External Components ........ 16
Connecting the FM Antennas ........ 17
Setting the Clock ........ 18
Checking the Remaining Time ........ 19

## OPERATION

Disc Playback ........ 20
MP3/WMA-CD Playback ........ 21
JPEG File Playback ........ 22
DivX Playback ........ 23
Playing Media Files using the USB feature ........ 25
Displaying Disc Information ........ 27
Fast/Slow Playback ........ 28
Skipping Scenes/Songs ........ 29
Angle Function ........ 30
Repeat Playback ........ 31
A-B Repeat Playback ........ 32
Zoom Function ........ 33
Selecting Audio/Subtitle Language ........ 34
Moving Directly to a Scene/Song ........ 35
Using Disc Menu ........ 36
Using the Title Menu ........ 37

## SETUP

Setting the Language ........ 38
Setting TV Screen type ........ 39
Setting Parental Controls (Rating Level) ........ 41
Setting the Password ........ 42
Setting the DRC (Dynamic Range Compression) ........ 43
AV SYNC Setup ........ 44

## RADIO OPERATION

About RDS broadcasting ........ 45
Listening to Radio ........ 47
Presetting Stations ........ 48

## MISCELLANEOUS

CD RIPPING Function ........ 49
Timer Function ........ 50
Canceling the Timer ........ 51
Power Sound / Power Bass / Treble Level / Bass Level Function ........ 52
DSP/EQ Function ........ 53
Sleep Timer Function / Mute Function ........ 54
DEMO Function / DIMMER Function / ECO function ........ 55
Connecting Headphones ........ 56
Cautions on Handling and Storing Discs ........ 57
Before Calling for Service ........ 58
Notes on Terminology ........ 60
Specifications ........ 61

# Notes on Discs

**DVD (Digital Versatile Disc)** offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.

1 ~ 6

DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play. The Region Number for this player is given on the rear panel of the player. (Your DVD player will only play DVDs that are labeled with identical region codes.)

## Playable Discs

| Disc Type | Mark (Logo) | Recorded Signals | Disc Size | Max. Playing Time |
|---|---|---|---|---|
| DVD-VIDEO | DVD VIDEO | Audio + Video | 12cm | Approx. 240 min. (single-sided) |
| | | | | Approx. 480 min. (double-sided) |
| | | | 8cm | Approx. 80 min. (single-sided) |
| | | | | Approx. 160 min. (double-sided) |
| AUDIO-CD | COMPACT disc DIGITAL AUDIO | Audio | 12cm | 74 min. |
| | | | 8cm | 20 min. |
| DivX | DIVX | Audio + Video | 12cm | 74 min. |
| | | | 8cm | 20 min. |

## Do not use the following types of disc!

- LD, CD-G, CD-I, CD-ROM and DVD-ROM discs cannot be played on this player.
  If such discs are played, a <This disc cannot be played. Please check the disc.> message appears on the TV screen.
- DVD discs purchased abroad may not play on this player.
  If such discs are played, a <This disc cannot be played. Please check the regional code.> message appears on the TV screen.

## Copy Protection

- **Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.**
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.
  Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation.
  Reverse engineering or disassembly is prohibited.

## Disc Recording Format

### This product does not support Secure (DRM) Media files.

### CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.  Do not use CD-R discs over 700MB/80 minute as they may not be played back.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

#### CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters  (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the ".mp3" and ".MP3" extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate  (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 500 tracks can be played per CD.
- A maximum of 300 folders can be played per CD.

### CD-R JPEG Discs

- Only files with the "jpg" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters  (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.

### DVD±R/RW, CD-R/RW DivX Discs

- Software updates for incompatible formats are not supported.
  (Example : QPEL, GMC, resolution higher than 720 x 480 pixels, etc.)
- Sections with a high frame rate might not be played while playing a DivX file.

**DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified or DivX Ultra Certified device that plays DivX video.**

# Description

## —Front Panel—

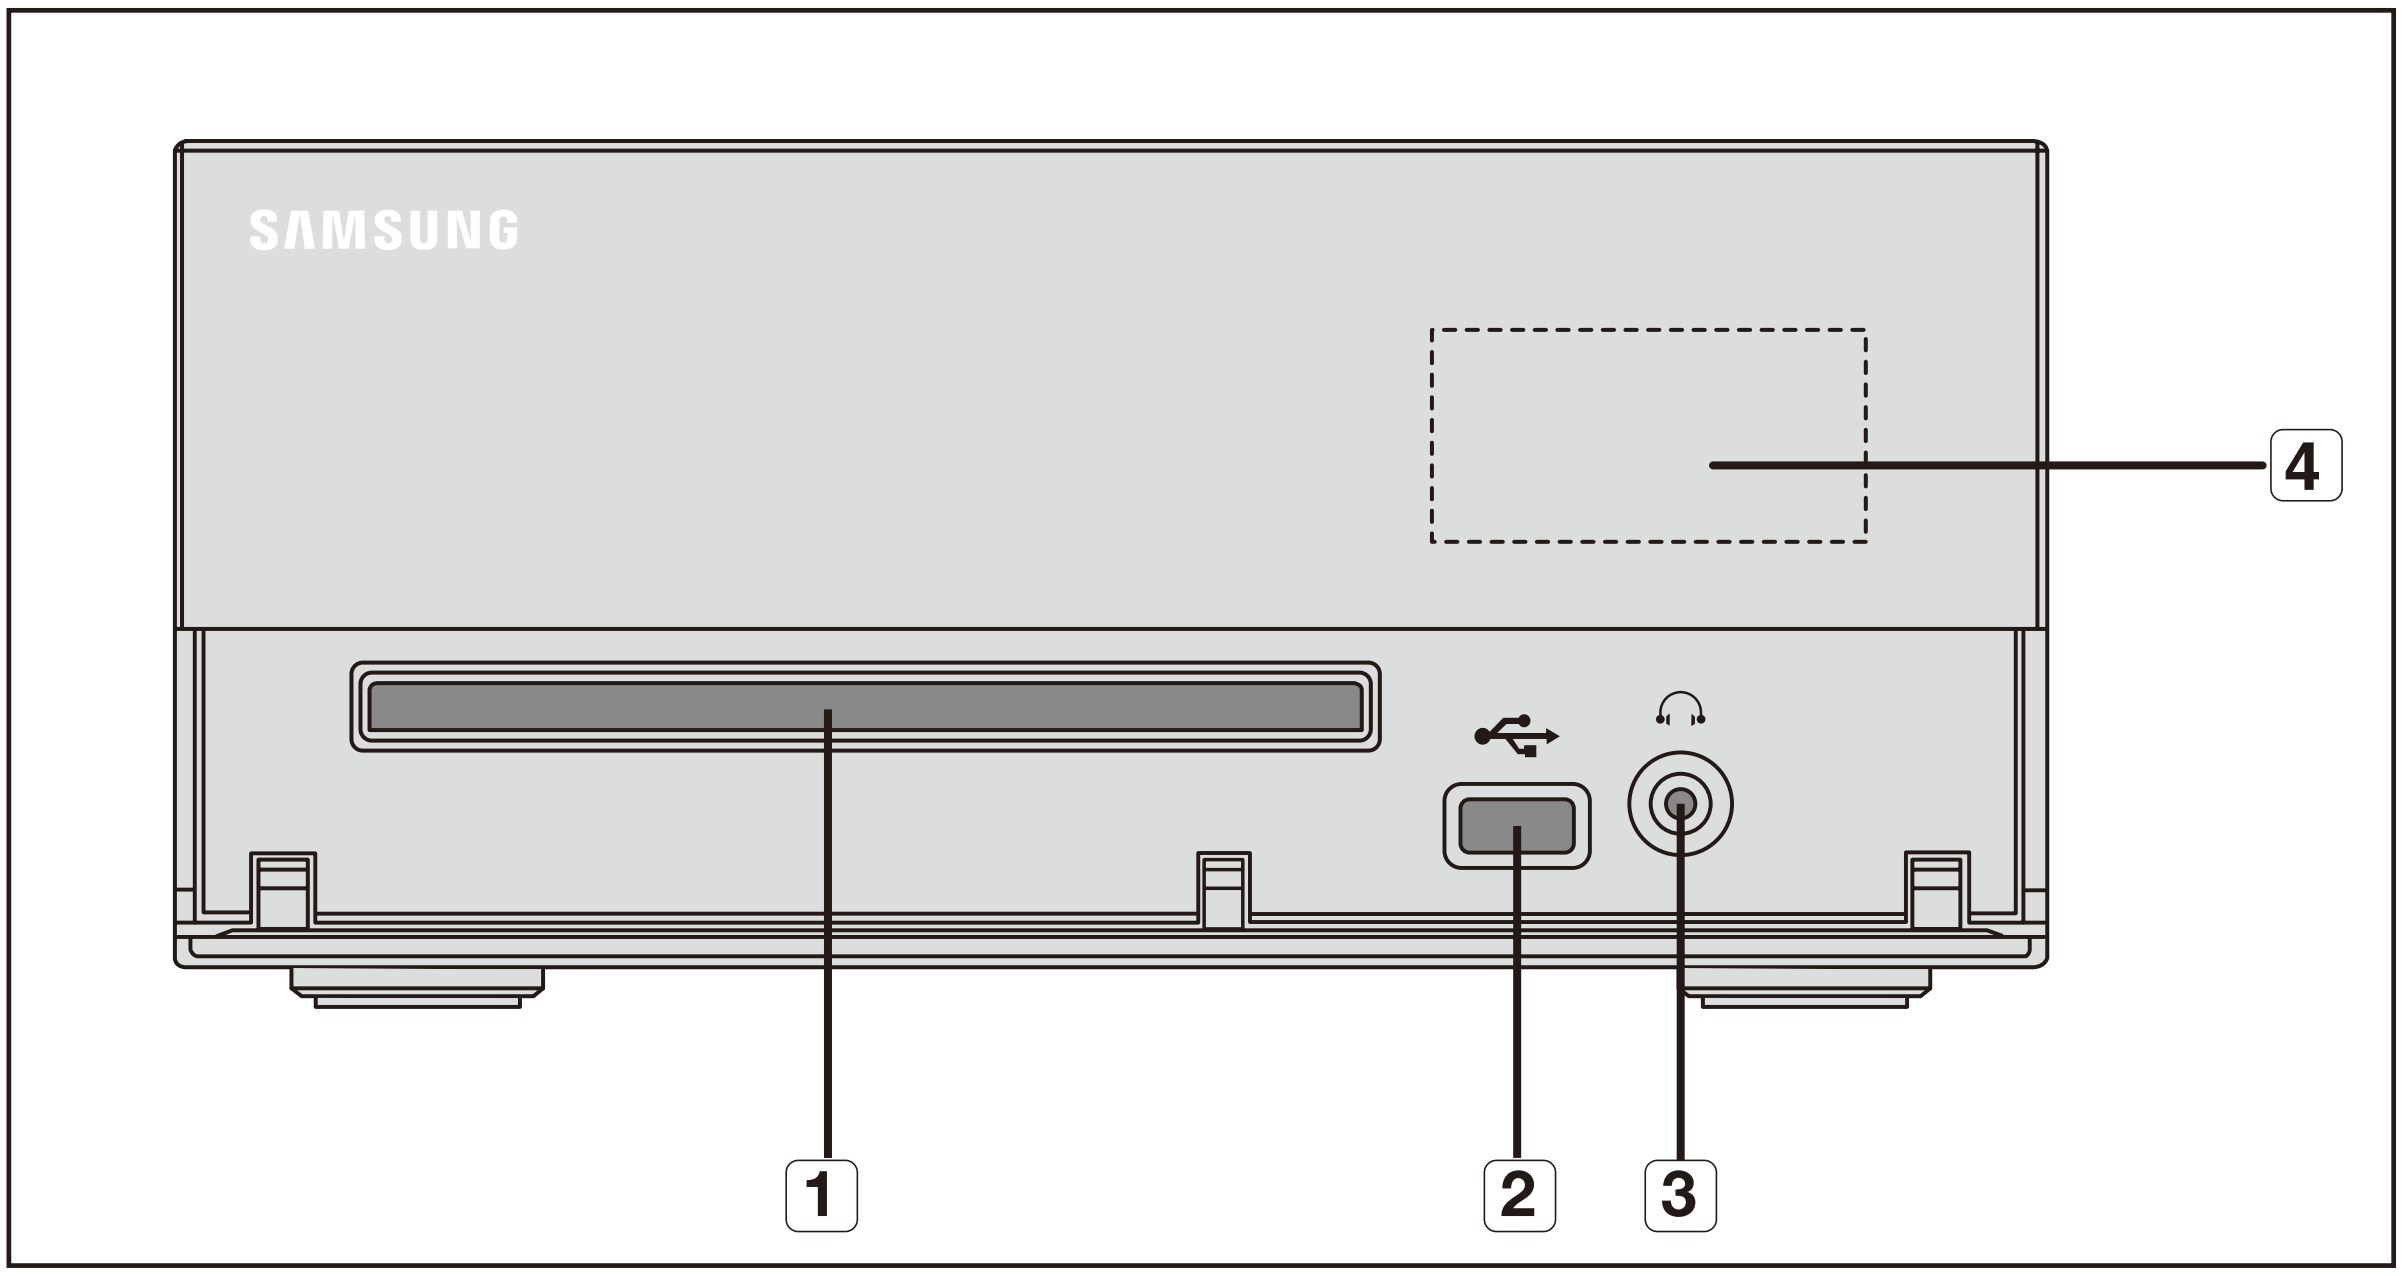

1. COMPACT DISC COMPARTMENT
2. USB JACK
3. HEADPHONE JACK
4. WINDOW DISPLAY

## —Top Panel—

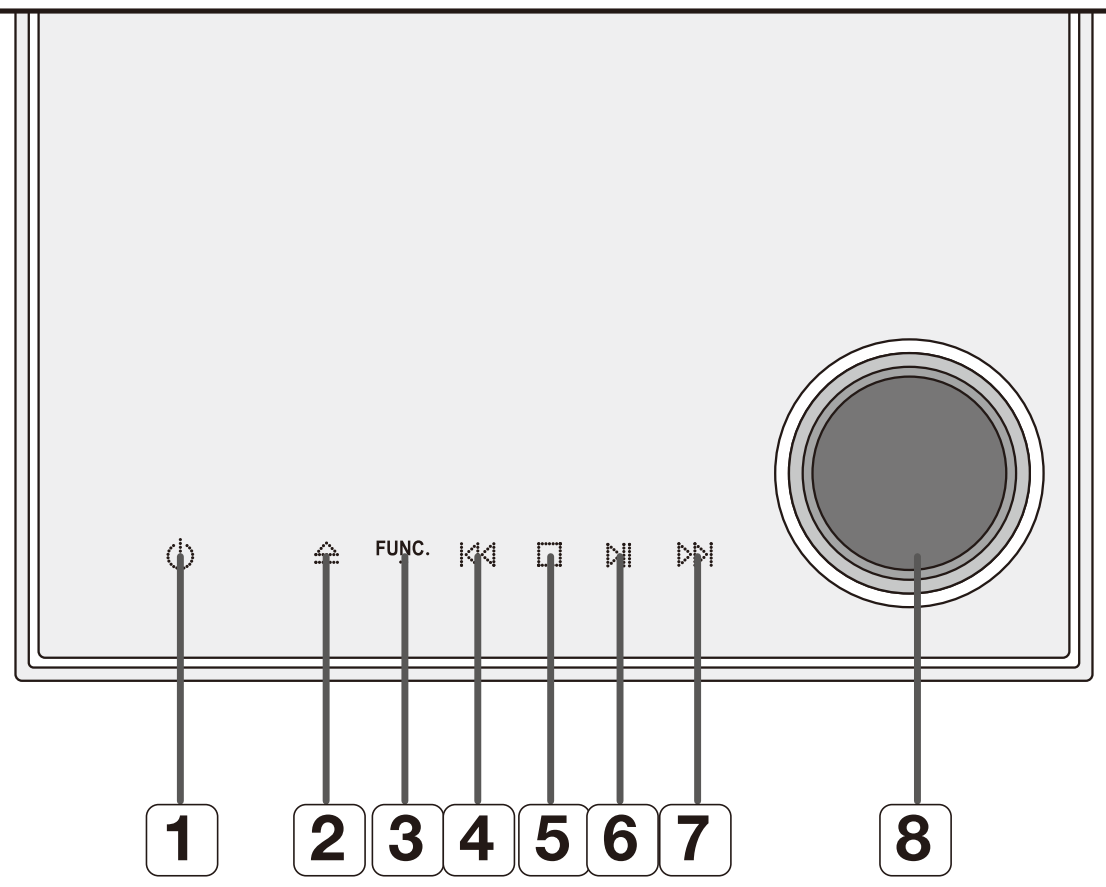

1. POWER BUTTON
2. OPEN/CLOSE BUTTON
3. FUNCTION BUTTON
4. SEARCH FUNCTION BUTTON(DOWN)
5. TUNING MODE OR STOP BUTTON
6. PLAY/PAUSE BUTTON
7. SEARCH FUNCTION BUTTON(UP)
8. VOLUME CONTROL KNOB

# —Rear Panel—

MM-DG35

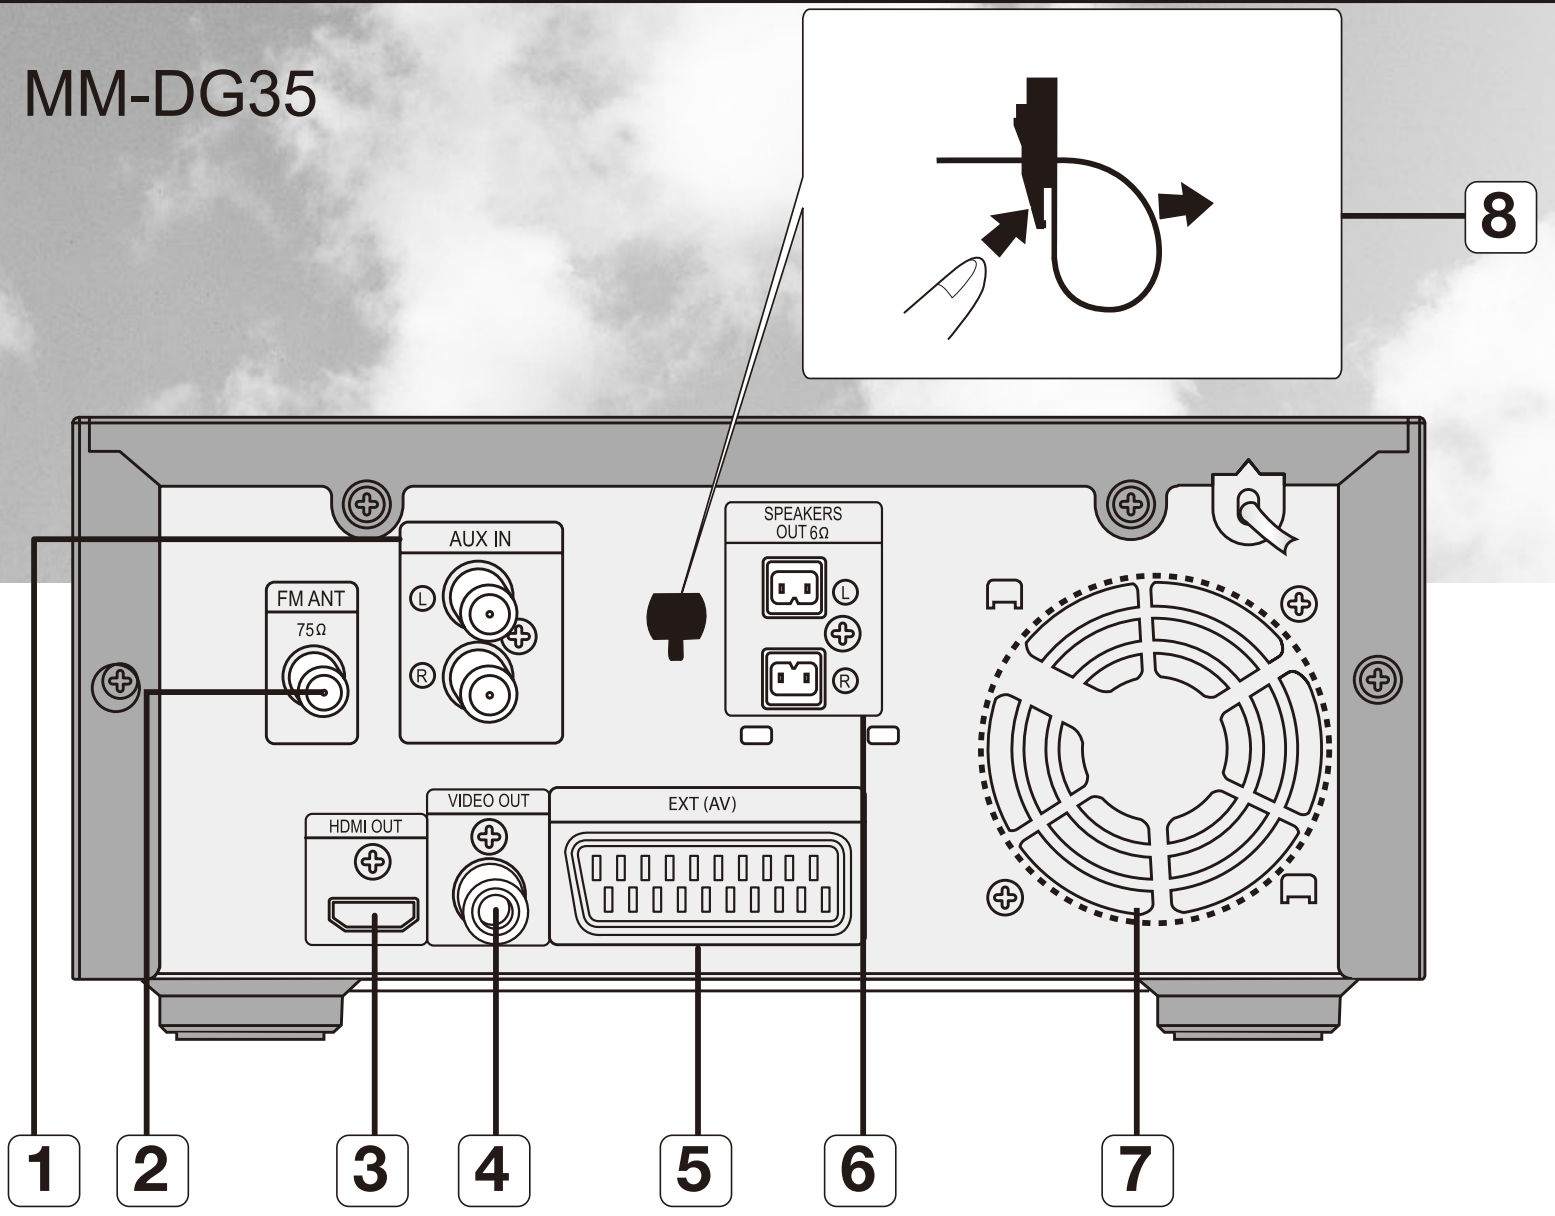
AUX IN
L
R
FM ANT
75Ω
SPEAKERS
OUT 6Ω
L
R
HDMI OUT
VIDEO OUT
EXT (AV)
1
2
3
4
5
6
7
8

1. **AUX IN**
2. **FM Antenna Connector**
3. **HDMI OUT Connector**
4. **Video Output Connector**
   Connect the TV's video input jacks (VIDEO IN) to the VIDEO OUT connector.
5. **Scart Connector**
6. **Speaker Connector Terminals**
7. **Cool Fan**
8. **Clamp-Wire (Fasten the speaker wires.)**

MM-DG36

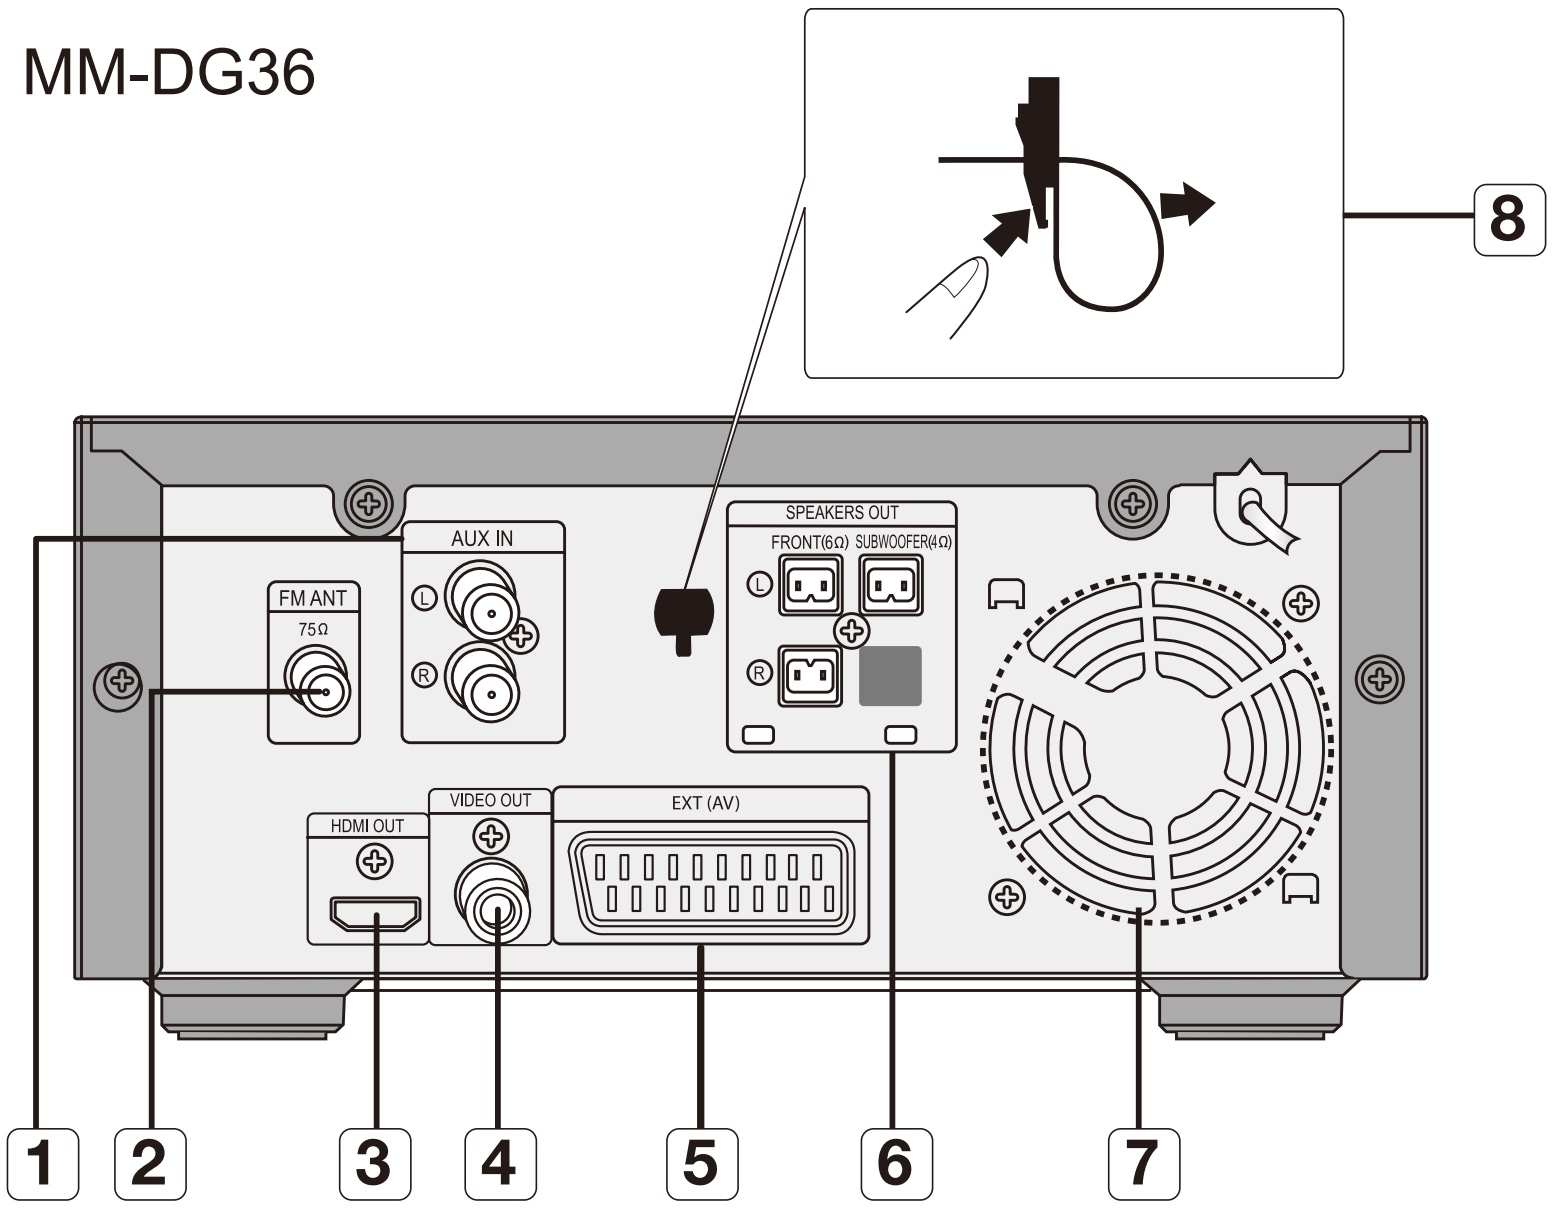
AUX IN
L
R
FM ANT
75Ω
SPEAKERS OUT
FRONT(6Ω) SUBWOOFER(4Ω)
L
R
HDMI OUT
VIDEO OUT
EXT (AV)
1
2
3
4
5
6
7
8

1. **AUX IN**
2. **FM Antenna Connector**
3. **HDMI OUT Connector**
4. **Video Output Connector**
   Connect the TV's video input jacks (VIDEO IN) to the VIDEO OUT connector.
5. **Scart Connector**
6. **Speaker Connector Terminals**
7. **Cool Fan**
8. **Clamp-Wire (Fasten the speaker wires.)**

☛ **All those pictures of Rear panel are based on MODEL:MM-DG36**
**MM-DG35: 2.0 Channel Speaker Output**
**MM-DG36: 2.1 Channel Speaker Output**

# Description

## —Remote Control—

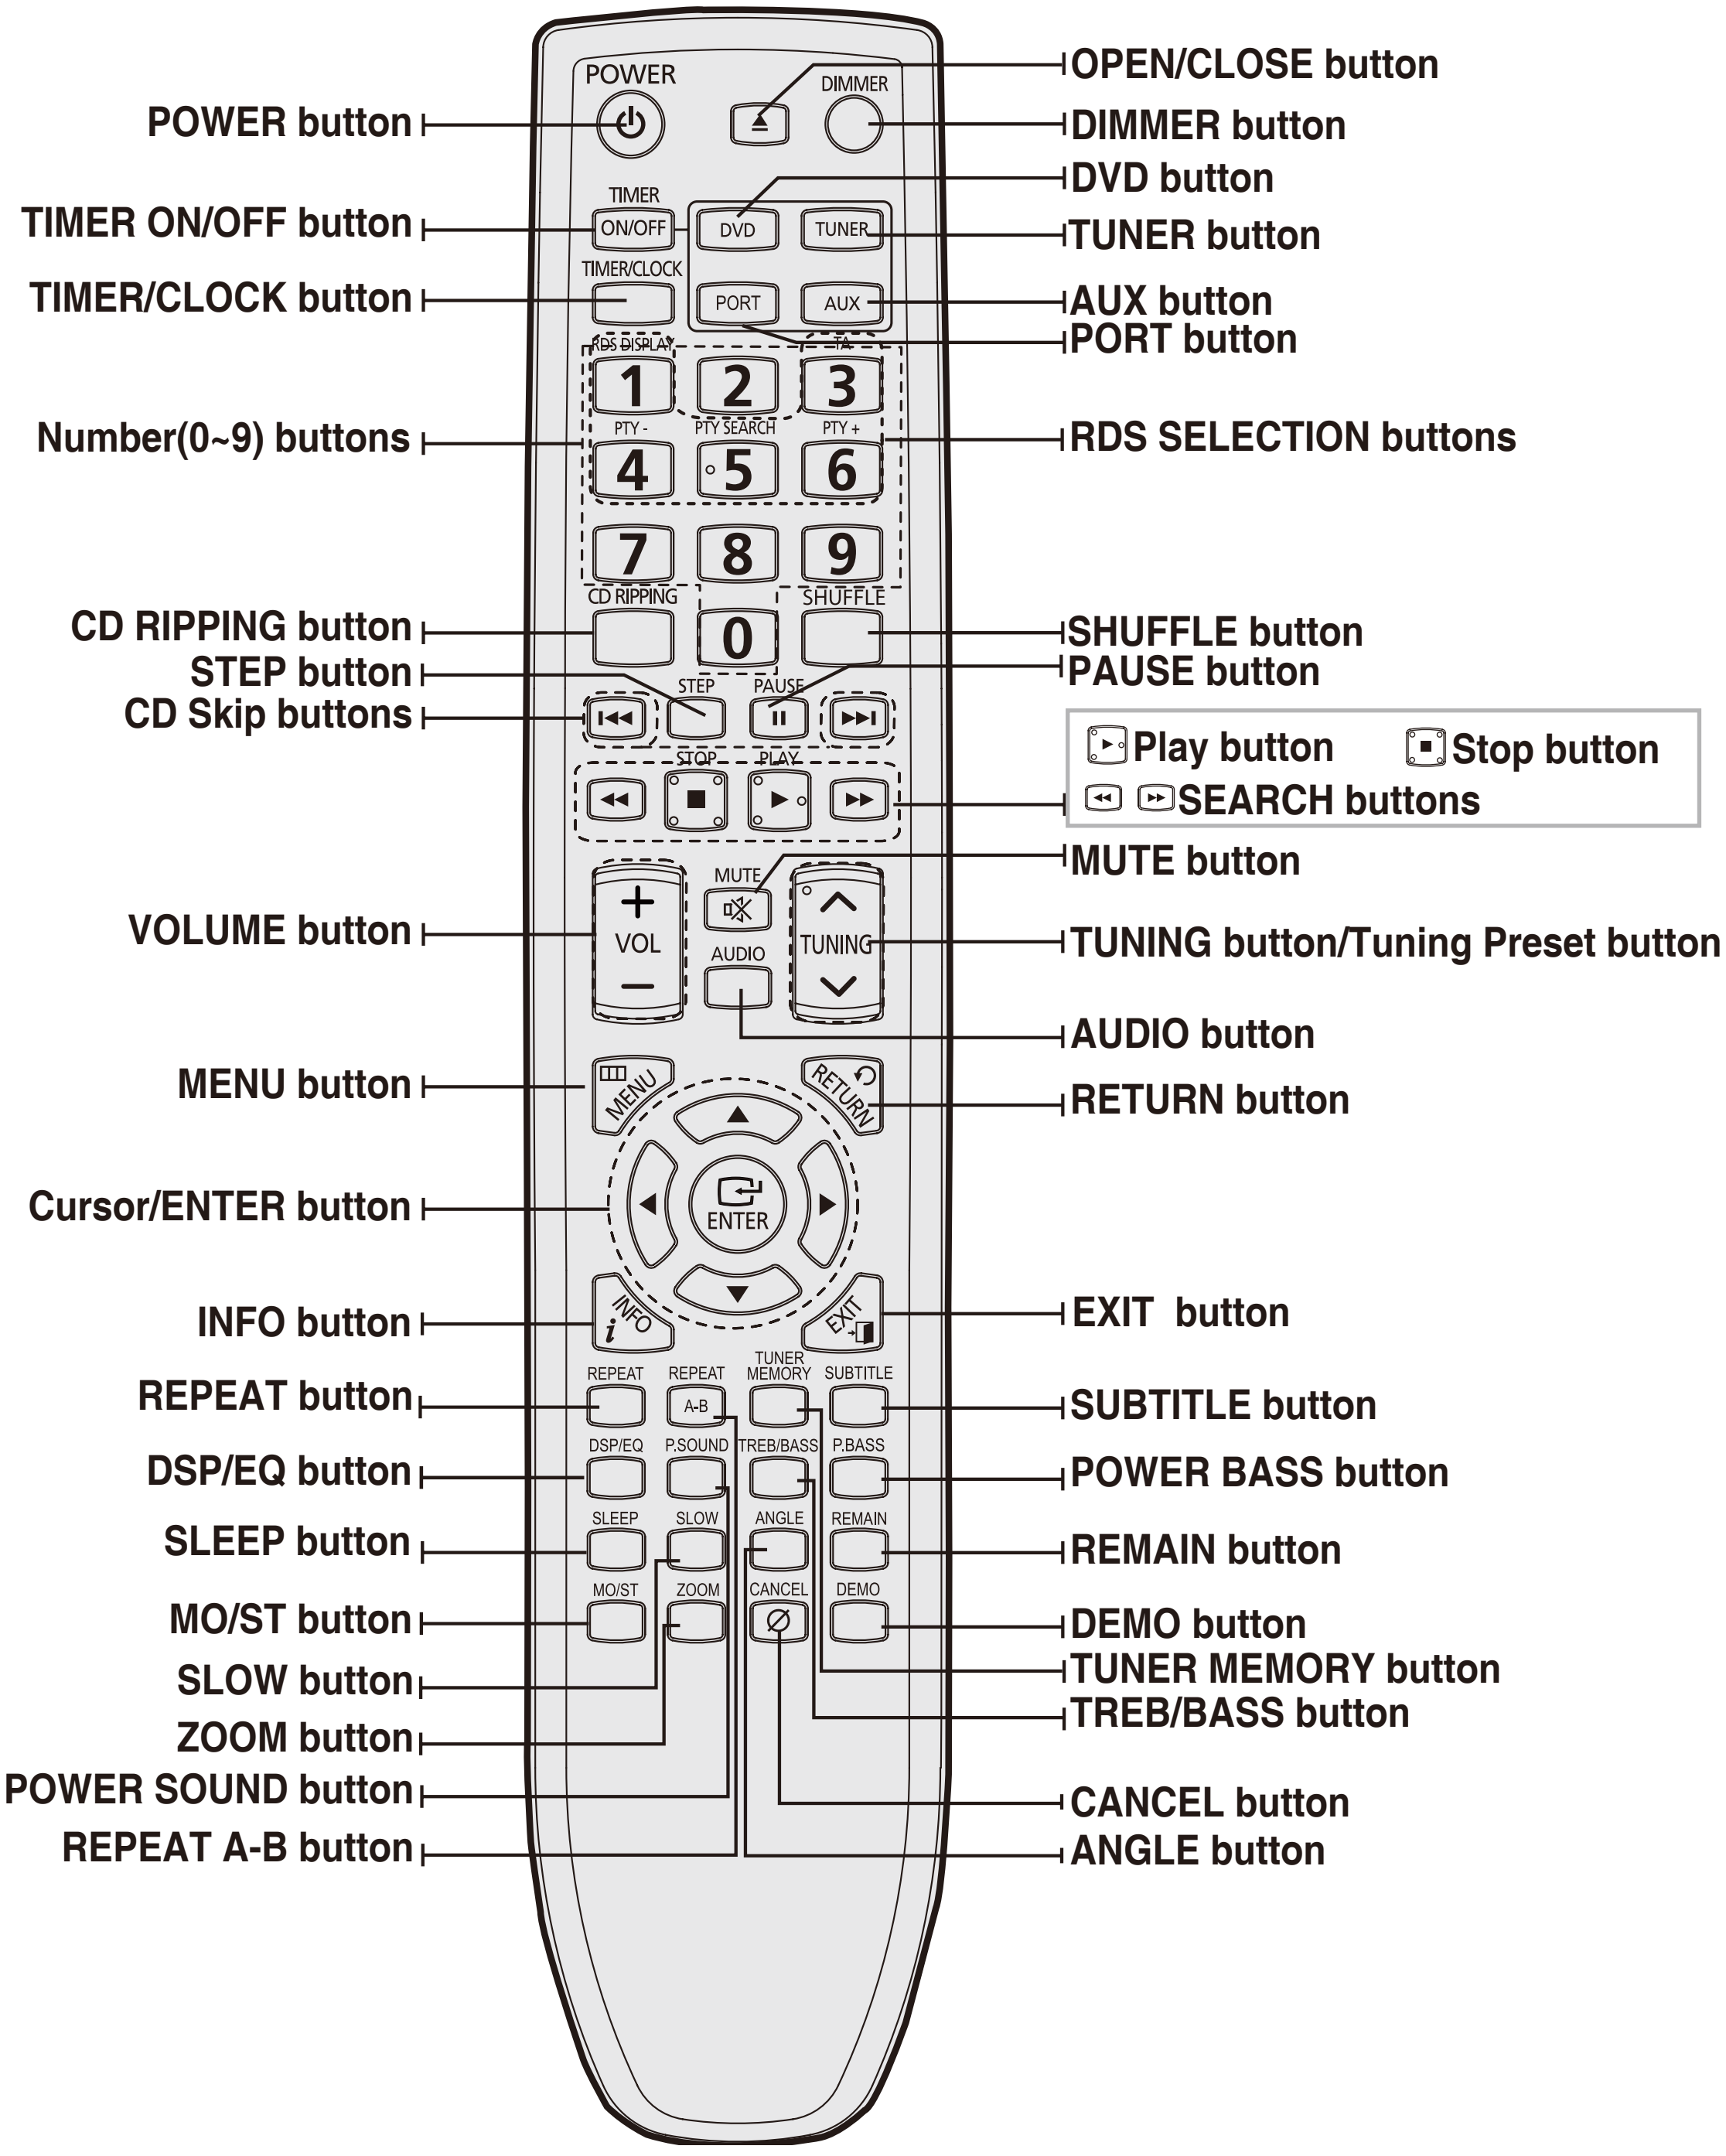
POWER button
TIMER ON/OFF button
TIMER/CLOCK button
Number(0~9) buttons
CD RIPPING button
STEP button
CD Skip buttons
VOLUME button
MENU button
Cursor/ENTER button
INFO button
REPEAT button
DSP/EQ button
SLEEP button
MO/ST button
SLOW button
ZOOM button
POWER SOUND button
REPEAT A-B button
OPEN/CLOSE button
DIMMER button
DVD button
TUNER button
AUX button
PORT button
RDS SELECTION buttons
SHUFFLE button
PAUSE button
Play button
Stop button
SEARCH buttons
MUTE button
TUNING button/Tuning Preset button
AUDIO button
RETURN button
EXIT button
SUBTITLE button
POWER BASS button
REMAIN button
DEMO button
TUNER MEMORY button
TREB/BASS button
CANCEL button
ANGLE button
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
PTY -
PTY SEARCH
PTY +
CD RIPPING
SHUFFLE
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

## Insert Remote Batteries

**1** Remove the battery cover in the direction of the arrow.

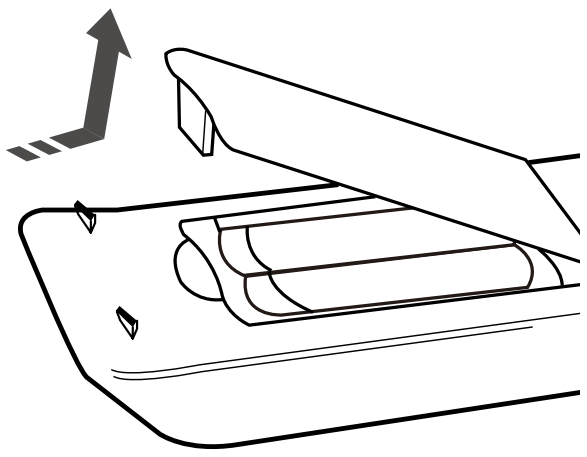

**2** Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and –).

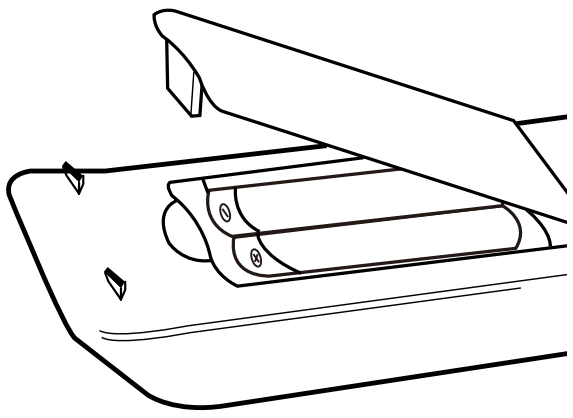

**3** Replace the battery cover.

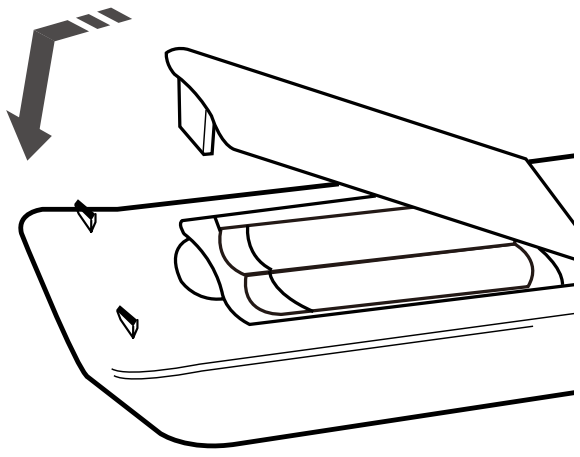

**Caution**

**Follow these precautions to avoid leaking or cracking cells:**

- Place batteries in the remote control so they match the polarity:(+) to (+)and (–)to (–).
- Use the correct type of batteries.Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

## Range of Operation of the Remote Control

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

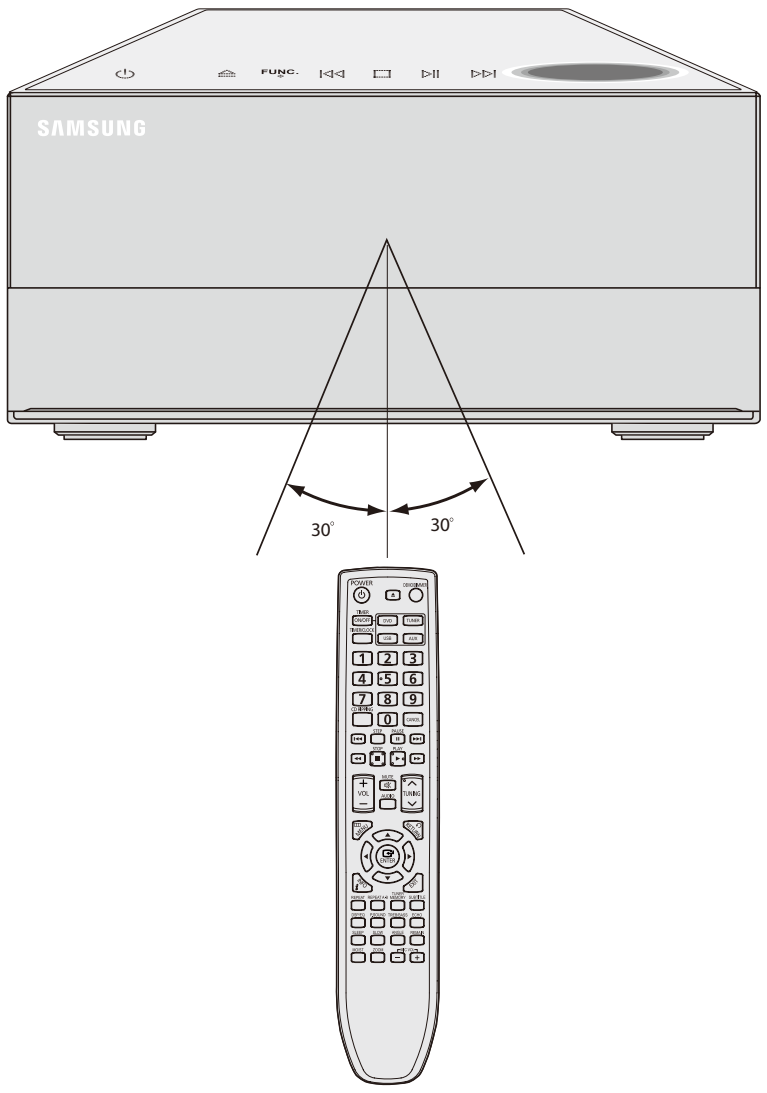

# Connecting the Speakers

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

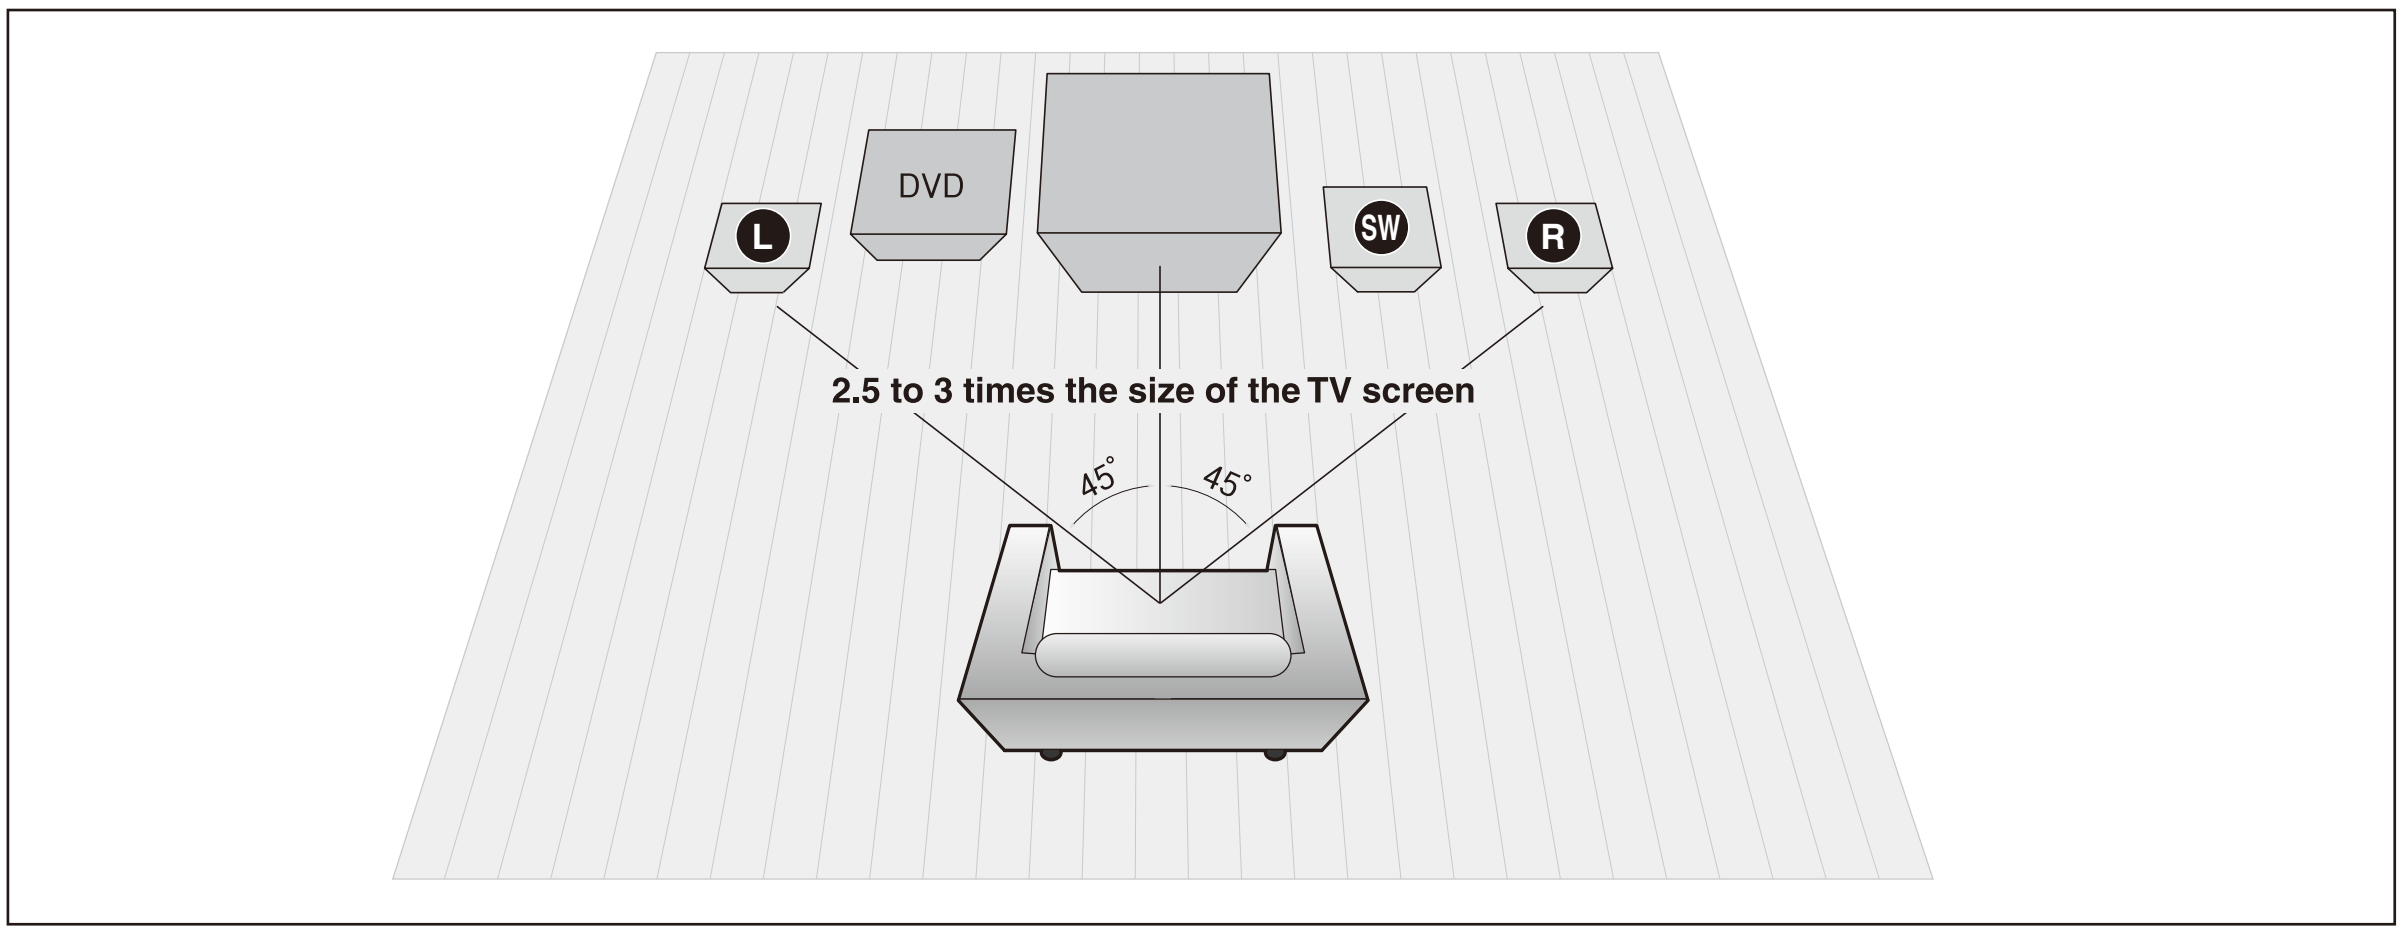

## Position of the DVD Player

- Place it on a stand or cabinet shelf, or under the TV stand.

## Front Speakers Ⓛ Ⓡ

- Place these speakers in front of your listening position, facing inwards (about 45°) toward you.
- Place the speakers so that their tweeters will be at the same height as your ear.

## Selecting the Listening Position

The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV.

Example : For 32" TVs 2~2.4m (6~8feet)
For 55" TVs 3.5~4m (11~13feet)

## Subwoofer SW

- The position of the subwoofer is not so critical.
  Place it anywhere you like.

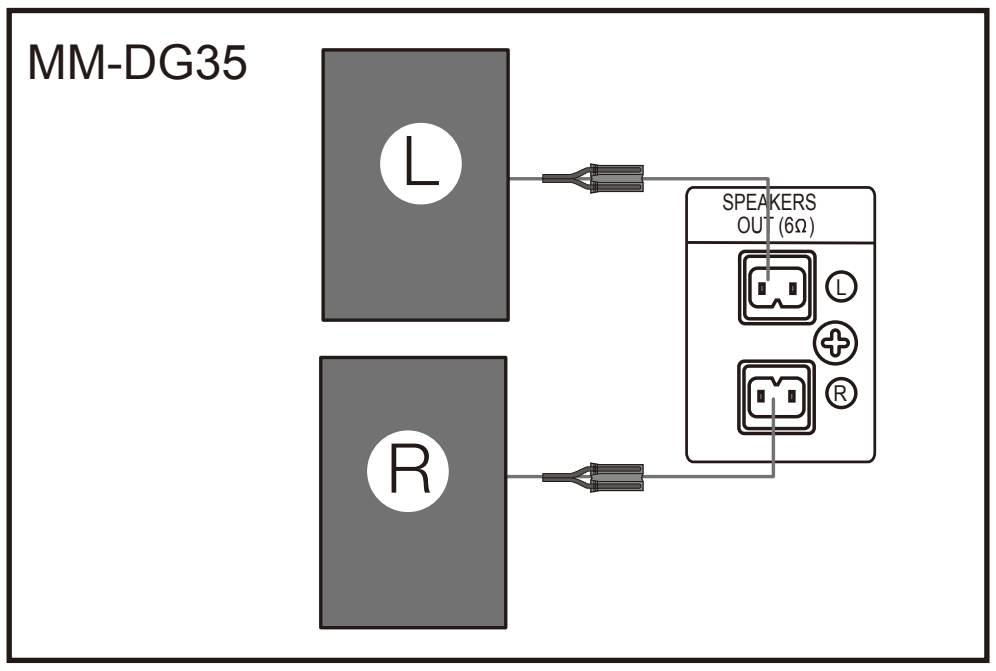

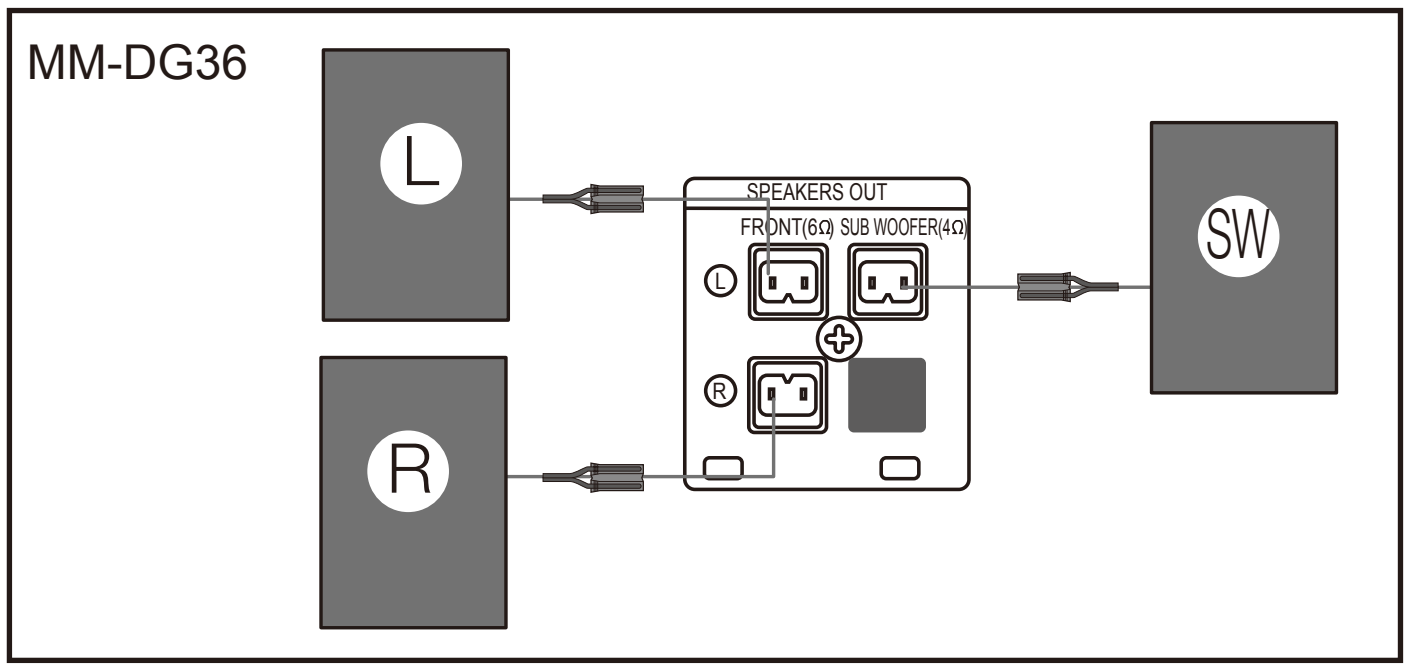

- Do not let children play with or near the speakers. They could get hurt if a speaker falls.
- Keep the speaker out of reach of children so as to prevent children from inserting their hands or alien substances into the duct (hole) of the subwoofer speaker.
- Do not hang the subwoofer on the wall through the duct (hole).

- If you place a speaker near your TV set, screen color may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.

# Connecting the Video Out to your TV

Please be sure to turn off the power and unplug the power cord before moving or installing this unit.
Please choose one video connection method.

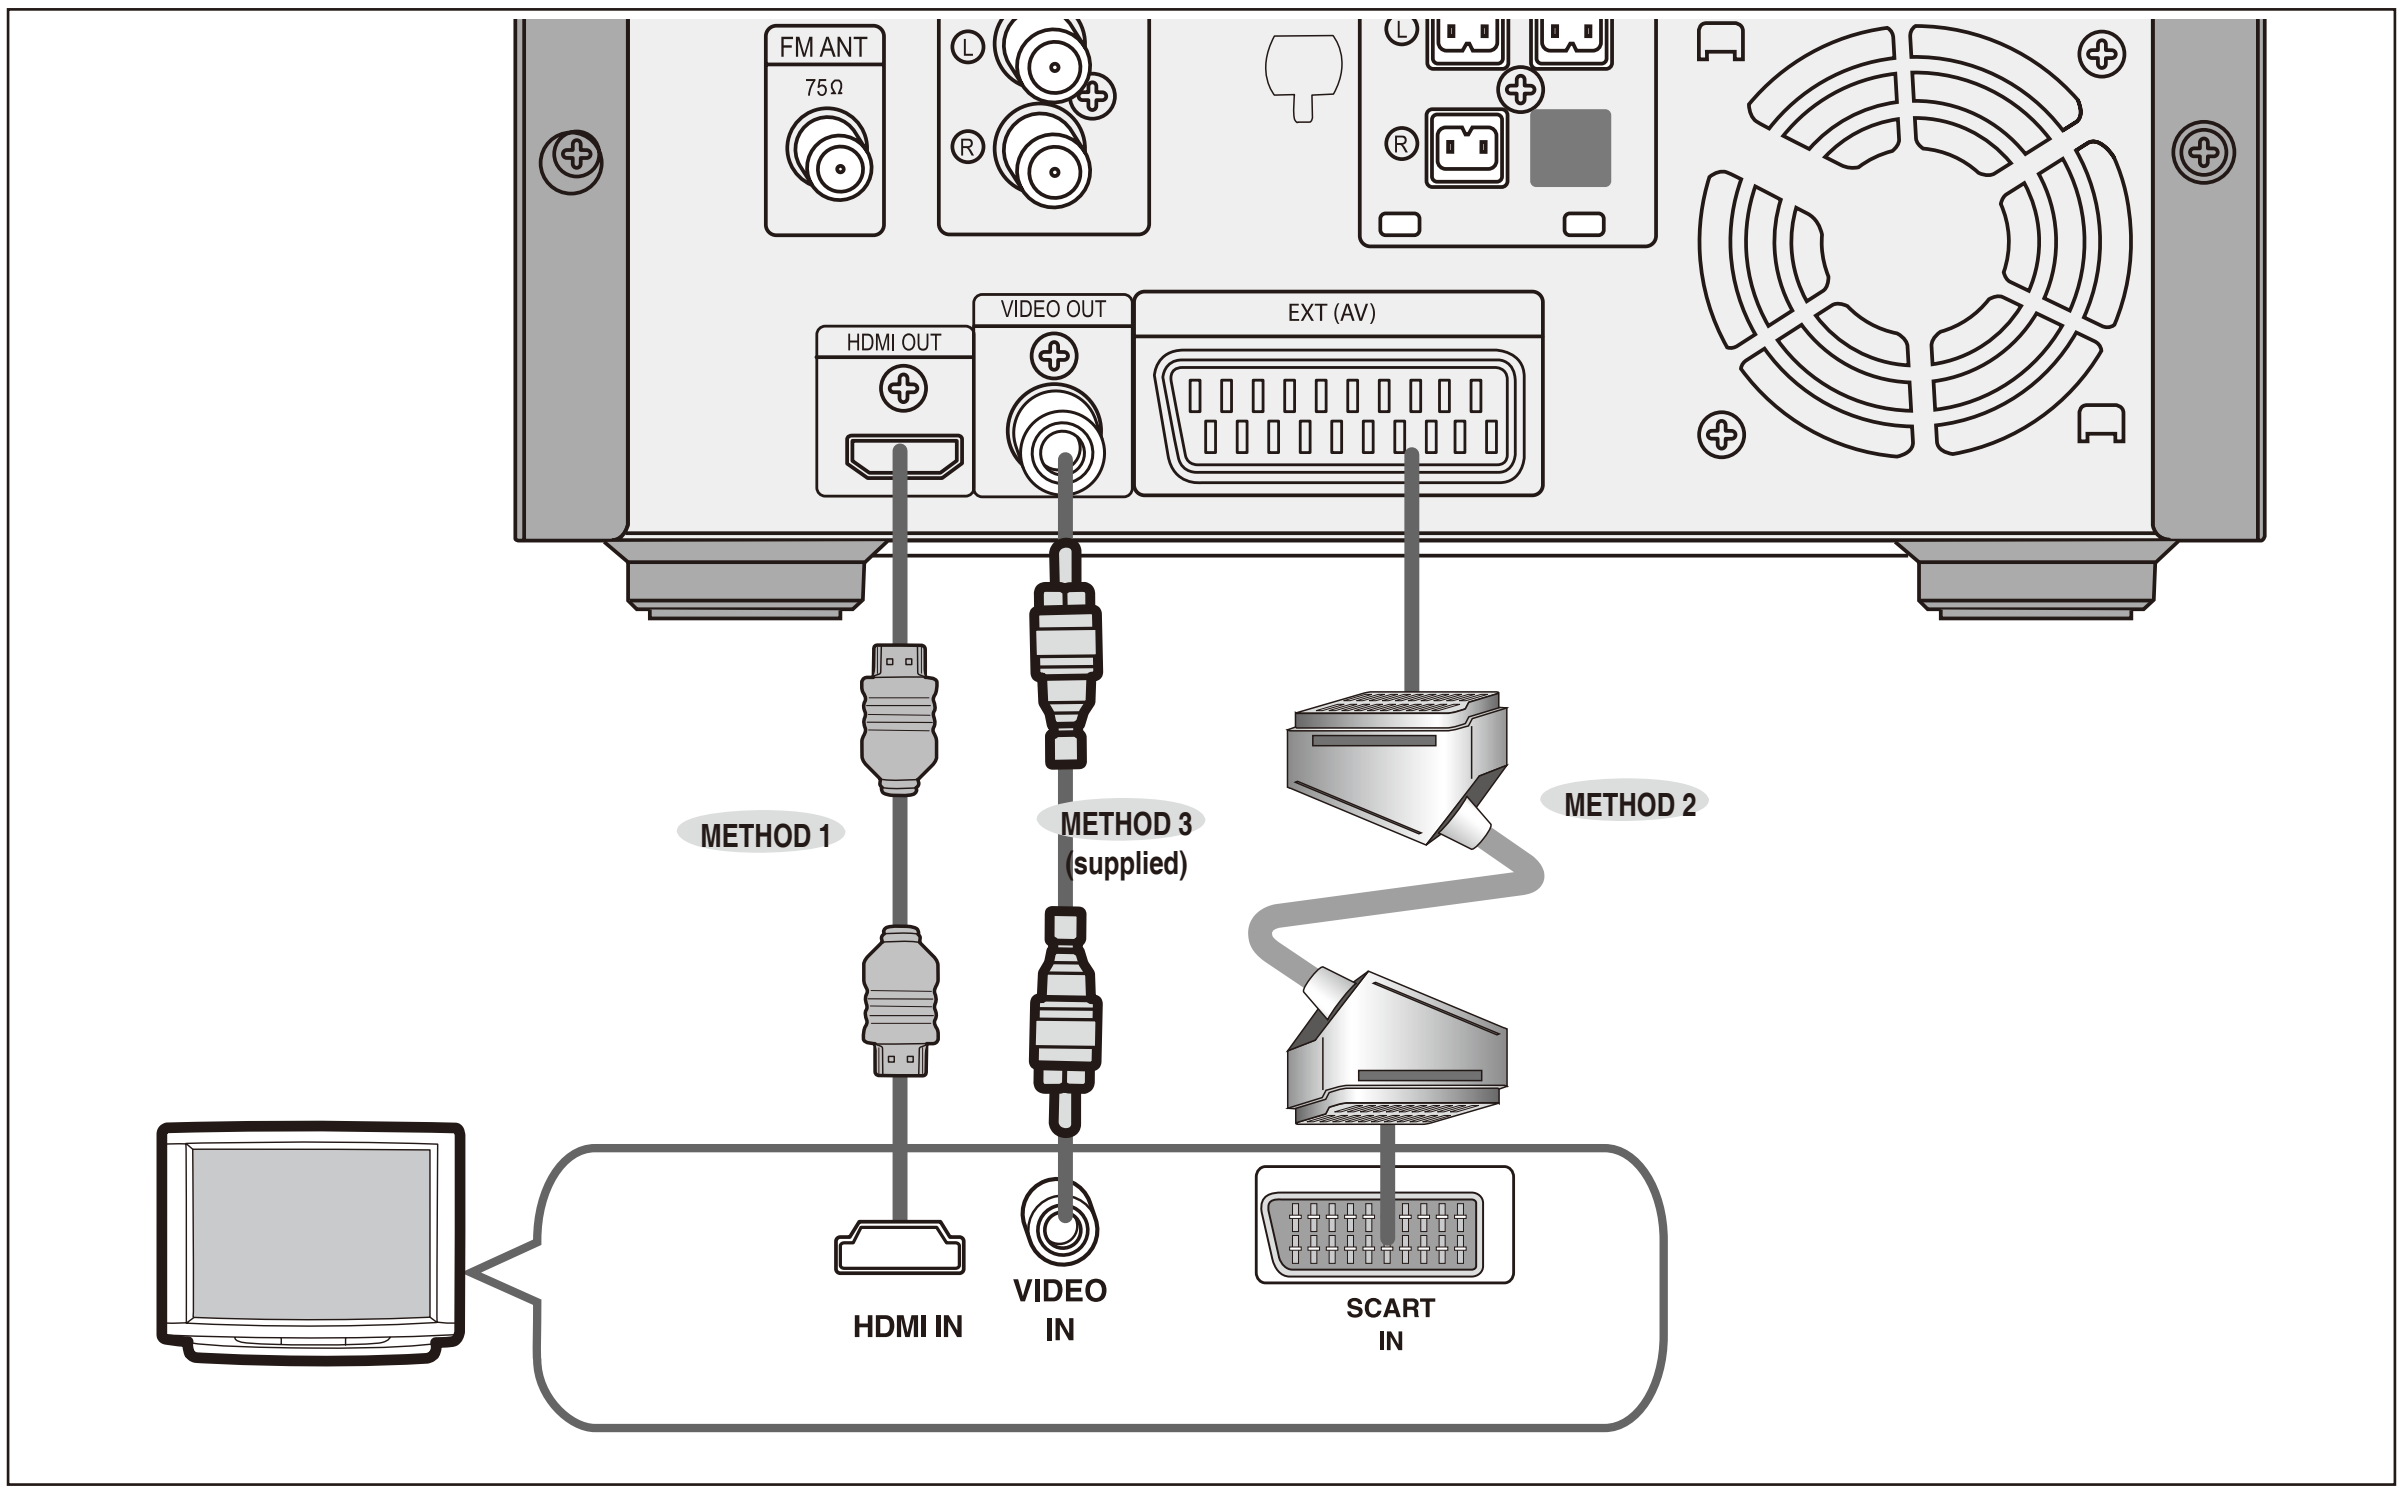

## METHOD 1 : HDMI ....... (Best Quality)

Connect the HDMI cable (not supplied) from the HDMI OUT jack on the back of the DVD Player to the HDMI IN jack on your TV.

## METHOD 2 : Scart ....... (Better Quality)

If your television is equipped with an SCART input, connect an Scart Jack (not supplied) from the AV OUT jack on the back panel of the main unit to the SCART IN jack on your television.

## METHOD 3 : Composite Video ....... (Good Quality)

Connect the supplied Video cable from the VIDEO OUT jack on the back of the DVD Player to the VIDEO IN jack on your TV.

- Resolutions available for the HDMI output are 480p/576p, 720p,1080i/1080p. See page 15 for resolution setting.
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI, Component or Composite) on your Micro Component.
  See your TV owner's manual for more information on how to select the TV's Video Input source.
- If you use an HDMI cable to connect a Samsung TV to the main unit, you can operate the Micro Component using the TV's remote control. (This is only available with SAMSUNG TV's that support Anynet+(HDMI-CEC).)
- If your TV has the Anynet+ logo, then it supports the Anynet+ function.
- If your set is connected scart jack, the TV source will auto turn to scart mode.

# HDMI Function

## HDMI Auto Detection Function

The player's video output will automatically change to HDMI mode when connecting an HDMI cable while power is on.

- **HDMI (High Definition Multimedia Interface)**
  HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.
  Using HDMI, the Micro Component System transmits a digital video and audio signal and displays a vivid picture on a TV having an HDMI input jack.
- **HDMI connection description**
  HDMI connector - Supports video and digital audio data.
  —HDMI outputs only a pure digital signal to the TV.
  —If your TV does not support HDCP (High-bandwidth Digital Content Protection), random noise appears on the screen.
- **Why does Samsung use HDMI?**
  Analogueue TV's require an Analogueue video/audio signal. However, when playing a DVD, the data transmitted to a TV is digital. Therefore either a digital-to-Analogueue converter (in the Micro Component System) or an Analogueue-to-digital converter (in the TV) is required. During this conversion, the picture quality is degraded due to noise and signal loss. HDMI technology is superior because it requires no D/A conversion and is a pure digital signal from the player to your TV.
- **What is the HDCP?**
  HDCP (High-band width Digital Content Protection) is a system for protecting DVD content outputted via HDMI from being copied. It provides a secure digital link between a video source (PC, DVD. etc) and a display device (TV, projector. etc). Content is encrypted at the source device to prevent unauthorized copies from being made.
- **What is Anynet+?**
  Anynet+ is a convenient function that offers linked operation of this unit through Samsung TV's with the Anynet+ feature.
  —If your Samsung TV has an Anynet+ logo, then it supports the Anynet+ function.
  —If you turn on the player and insert a DVD disc, the player will start playing the disc, and the TV will turn on automatically and switch to HDMI mode.
  —If you turn on the player and press the Play button with a DVD disc already inserted, the TV will immediately turn on and switch to HDMI mode.
  —Regarding more information of using **Anynet+(HDMI-CEC)**, please refer to your TV’s user manual.

## Using Anynet+(HDMI-CEC)

Anynet+ is a function that enables you to control other Samsung Devices with your Samsung TV's remote control. Anynet + can be used by connecting this Micro Component System to a SAMSUNG TV using a HDMI Cable. This is only available with SAMSUNG TV's that support Anynet+.

1. Connect the main unit of the Micro Component System to a Samsung TV with an HDMI cable. (See page 12)
2. Set the Anynet+ function on your TV.
   You can operate the Micro Component System by using the TV remote control. (Available TV buttons : ⏪, ⏹, ▶, ⏩, ▲,▼ and ◀,▶ buttons,⓪ ~ ⑨ button)

With Anynet+

You can operate this unit, power on your TV, or watch a movie by pressing the Play button on your Samsung TV's remote control.

Press the Anynet+ button on the TV remote control, select Micro Component form Select Device to connect and set the option of each item below.

- **View TV** : If Anynet+(HDMI CEC) is set to on and you select View TV, the Micro Component will automatically switch to stop mode.
- **Menu on Device** : You can access and control the Micro Component menu.
- **Device Operation** : The Micro Component disc playback information will be displayed. You can control the Disc operation of the Micro Component such as title, chapter and subtitle change.

- Receive is not available.
- When you playback CD during CEC ON, if you turn off the TV Power, the Micro Component doesn't automatically turn off the Power.

## BD Wise (Samsung products only)

You can select to use the BD Wise menu only if the Micro Component is connected to a Samsung TV that supports BD Wise using an HDMI cable.

- **What is BD Wise?**

BD Wise automatically adjusts BD Wise-compliant Samsung products to the optimal settings between them.This feature is enabled only if BD Wise-compliant Samsung products are connected to each other using an HDMI cable.

- **To use BD Wise**

1. Use an HDMI cable to connect the Micro Component to a BD Wise-compliant Samsung TV.
2. Set each BD Wise menu of the Micro Component and the Samsung TV to On, respectively.

— This will optimize the picture quality according to the content (In the disc, DVD, etc) that you want to play.
— This will also optimize the picture quality between the Micro Component and your BD Wise-compliant Samsung TV.

- If you want to change the resolution in BD Wise mode, you must set BD mode to Off in advance.
- If you set the BD Wise mode to off, the resolution of the connected TV will be adjusted to its maximum resolution automatically.
- BD Wise will be disabled if the player is connected to a device that does not support BD Wise.

# HDMI Function(continue)

**Why use HDMI (High Definition Multimedia Interface)?**

This device transmits a DVD video signal digitally without the process of converting to analog. You will get sharper digital pictures when using an HDMI connection.

## Setting the HDMI Audio

The audio signals transmitted over the HDMI Cable can be toggled ON/OFF.

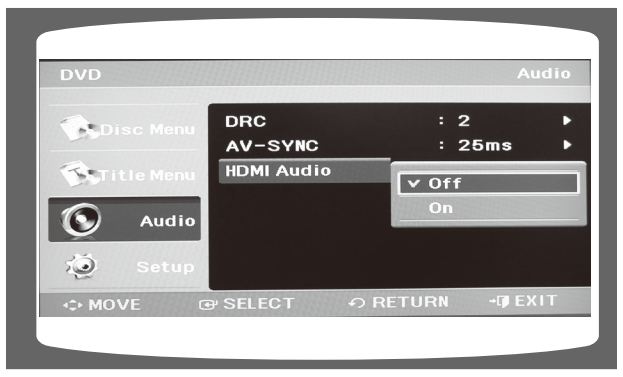

DRC : 2

AV-SYNC : 25ms

1. In Stop mode, press the **MENU** button.
2. Press the Cursor ▼ , ▲ button to move to **<Audio>** and then press the **ENTER** button.
3. Press the Cursor ▼ , ▲ button to move to **<HDMI AUDIO>** and then press the **ENTER** button.
4. Press the Cursor ▼ , ▲ button to select <ON> or <OFF> and then press the **ENTER** button.
   - ON : Both video and audio signals are transmitted over the HDMI connection cable, and audio is output through your TV speakers only.
   - OFF : Video is transmitted over the HDMI connection cable only, and audio is output through the Micro Component speakers only.

➣ Press the **RETURN** button to return to the previous level.

➣ Press the **EXIT** button to exit the setup screen.

- The default setting of this function is HDMI AUDIO OFF.
- HDMI AUDIO is automatically down-mixed to 2ch for TV speakers.
- ECHO/P.SOUND/DSP/EQ function is not available when HDMI AUDIO is ON.
- MIC output is not available while HDMI AUDIO ON.

## Setting the HDMI Resolution

The function allows the user to select the screen resolution for HDMI output.

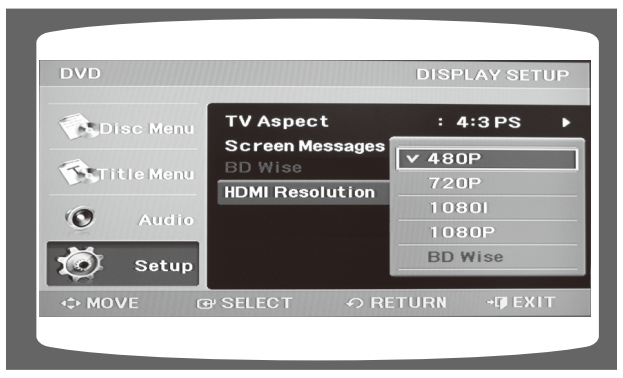

TV Aspect : 4:3 PS

1. In Stop mode, press the **MENU** button.
2. Press the Cursor ▼ , ▲ button to move to **<Setup>** and then press the **ENTER** button.
3. Press the Cursor ▼ , ▲ button to move to **<Display Setup>** and then press the **ENTER** button.
4. Press the Cursor ▼ , ▲ button to move to **<HDMI Resolution>** and then press the **ENTER** button.
5. Press the Cursor ▼ , ▲ button to select the desired item and then press the **ENTER** button.
   - Resolutions available for the HDMI output are 480p/576p, 720p, 1080i, 1080p.
   - SD(Standard Definition) resolution is 480p/576p and HD(High Definition) resolution is 720p, 1080i, 1080p.

➣ Press the **RETURN** button to return to the previous level.

➣ Press the **EXIT** button to exit the setup screen.

- If the TV does not support the configured resolution, you will not be able to see the picture properly.
- See your TV owner's manual for more information on how to select the TV's Video Input source.

# Connecting External Components

## Connecting an External Analog Component

Example: Analog signal components such as a VCR, Camcorder, and TV.

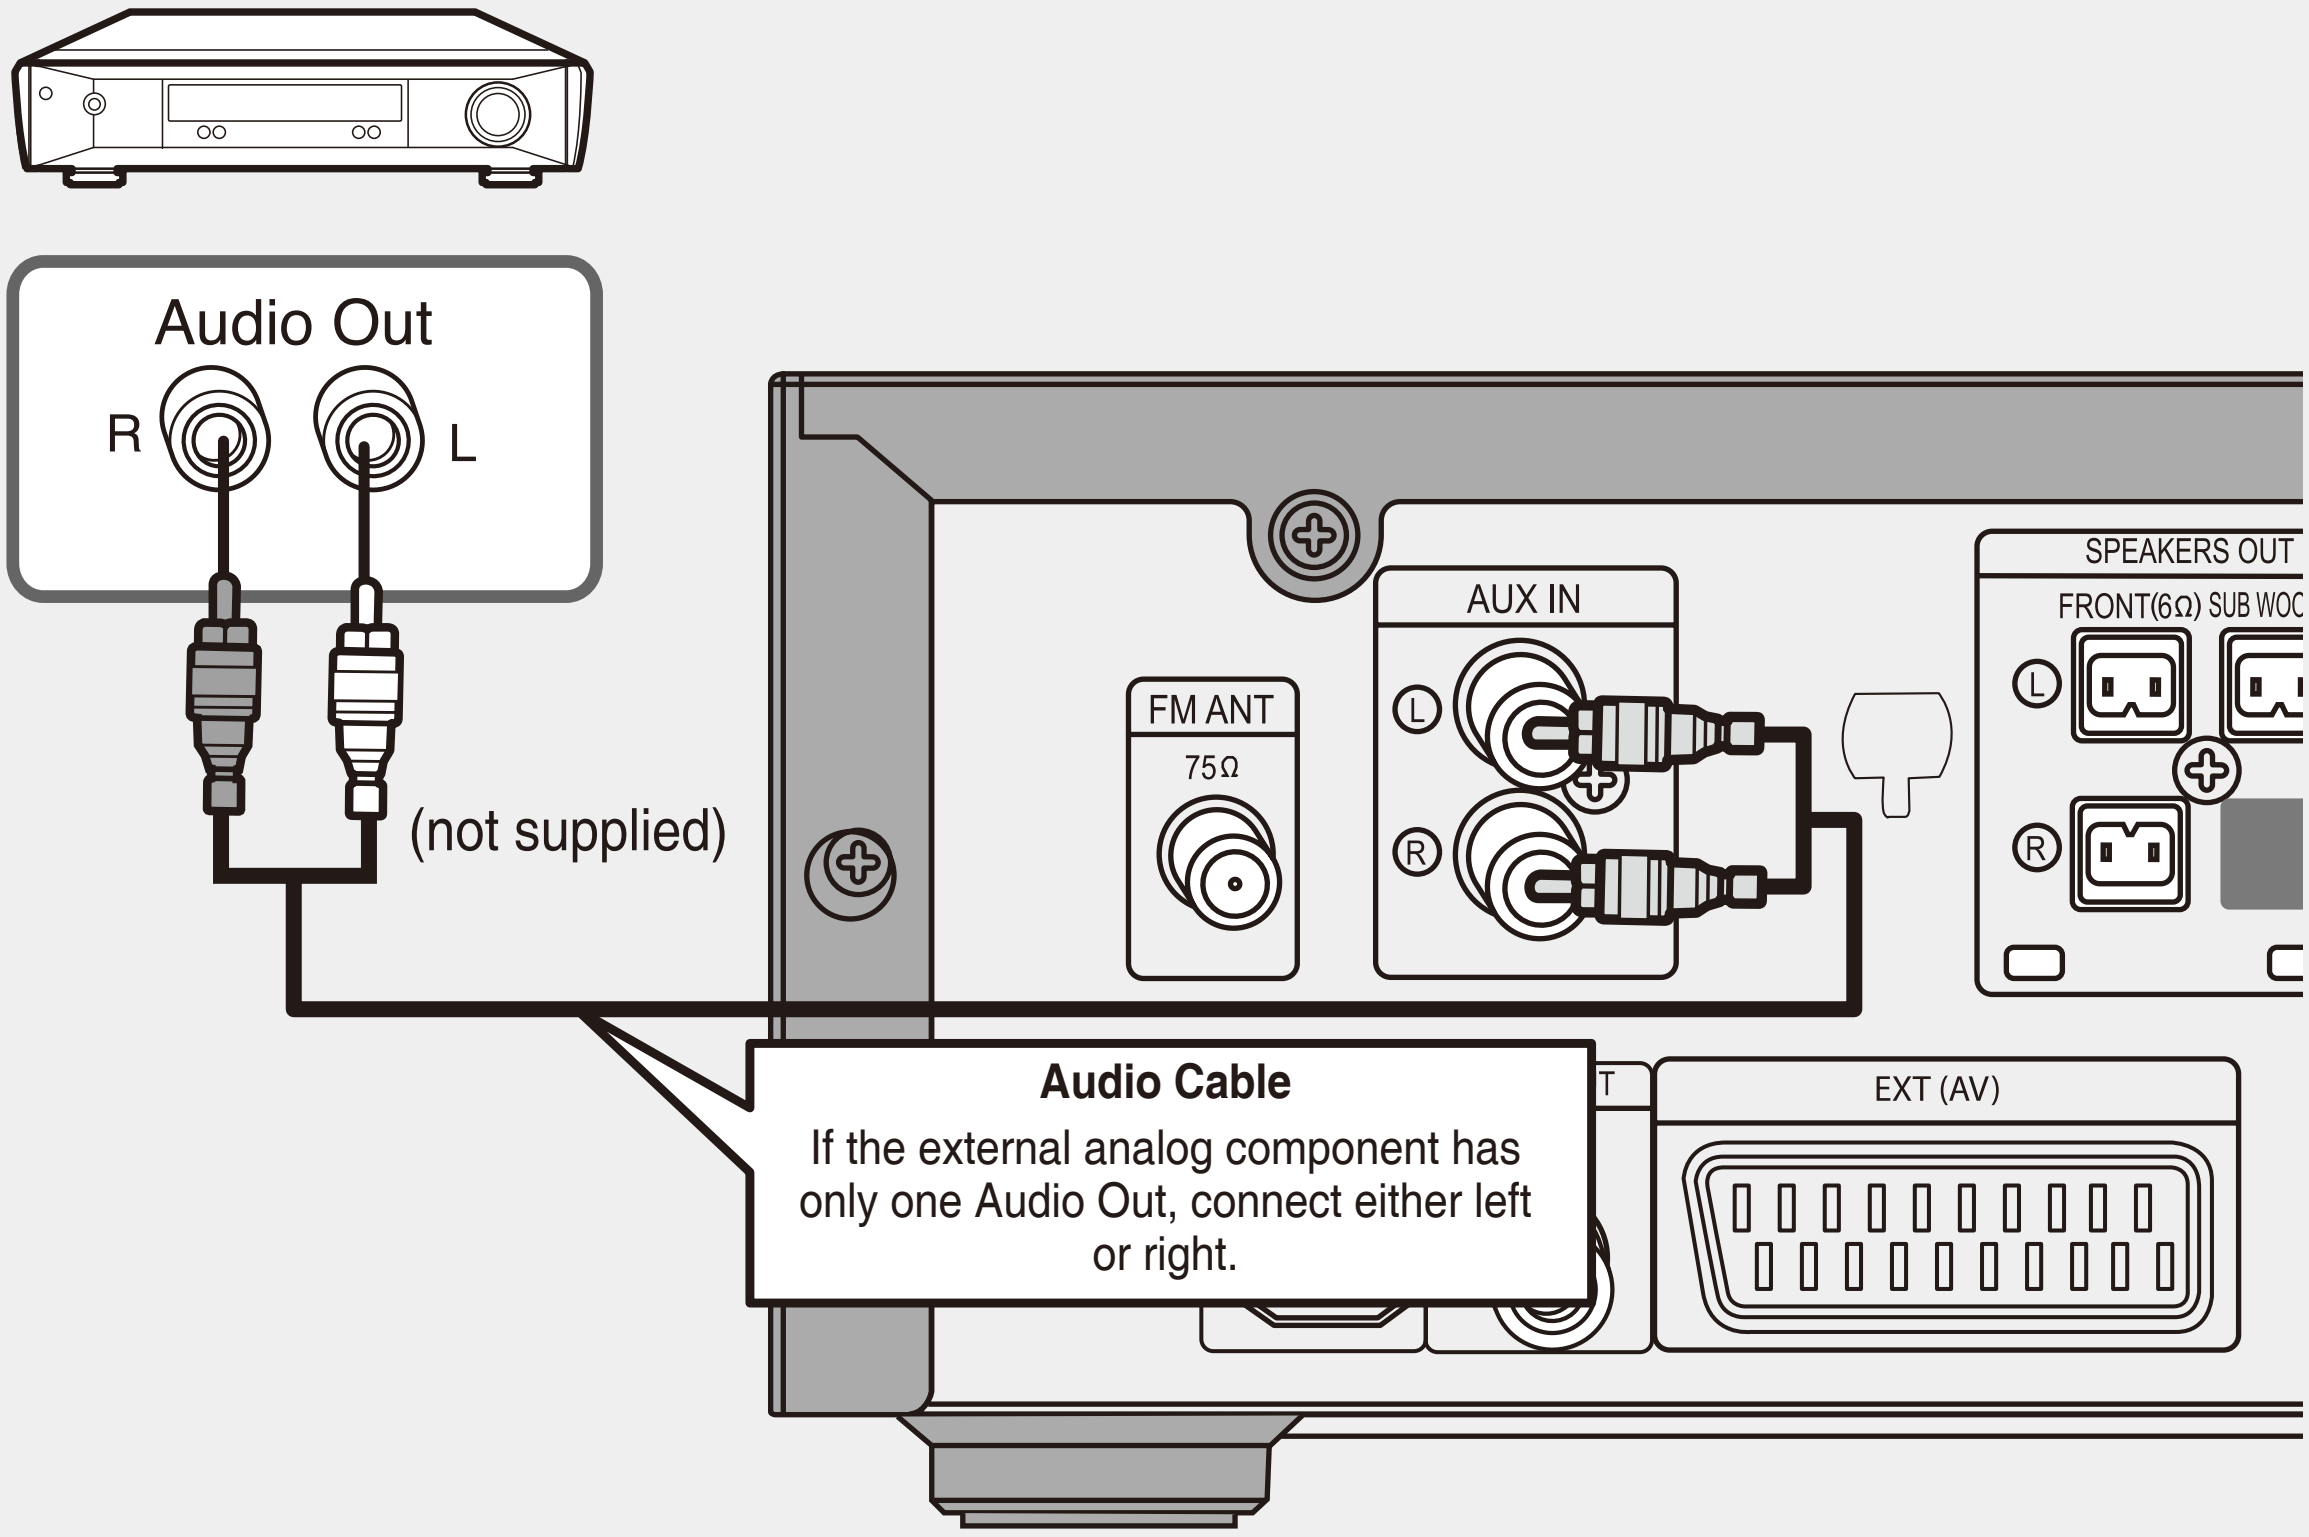
Audio Out
R
L
(not supplied)
AUX IN
L
R
FM ANT
75Ω
SPEAKERS OUT
FRONT(6Ω) SUB WOO
L
R
EXT (AV)

**Audio Cable**
If the external analog component has only one Audio Out, connect either left or right.

**1** Connect AUX IN on the player to Audio Out on the external analog component.

- Be sure to match connector colors.

**2** Press **AUX** to select AUX.

- 'AUX' appears in the display.

# Connecting the FM Antennas

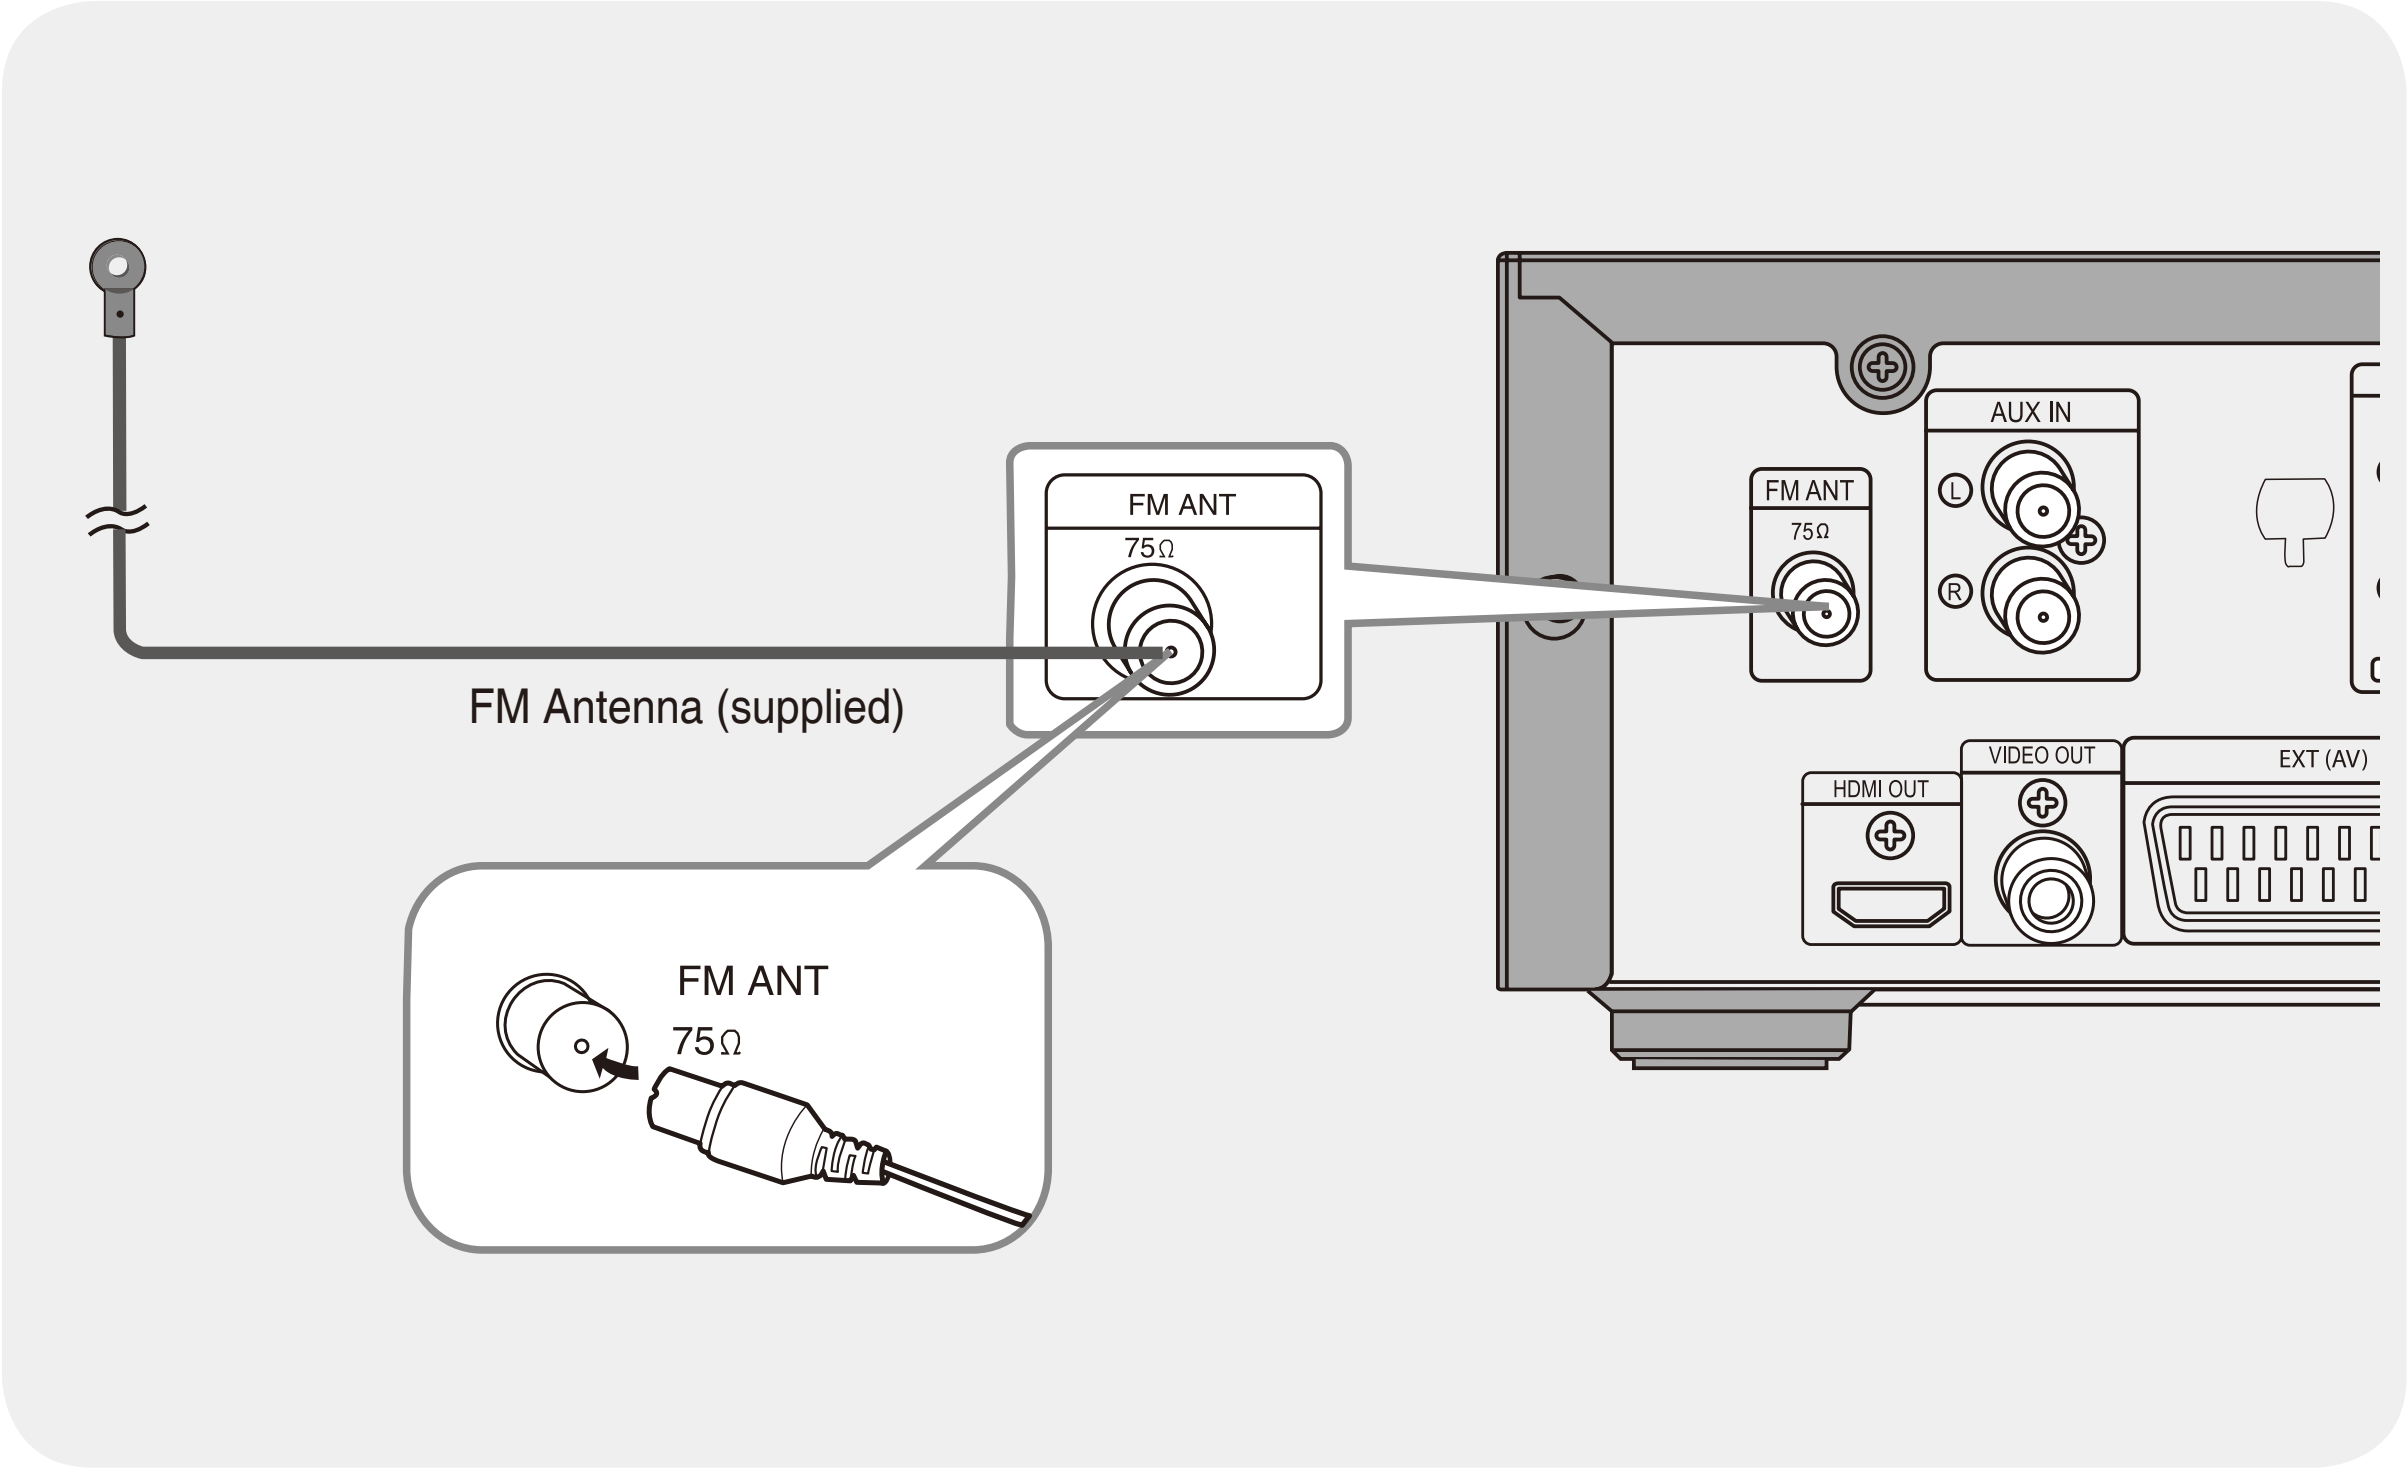
FM ANT
75Ω
FM Antenna (supplied)
FM ANT
75Ω
FM ANT
75Ω
AUX IN
L
R
HDMI OUT
VIDEO OUT
EXT (AV)

1. Connect the FM antenna supplied to the FM 75Ω COAXIAL Jack.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

**Note**

- This unit does not receive AM broadcasts.

**Cooling Fan** The cooling fan supplies cool air to the unit to prevent overheating.

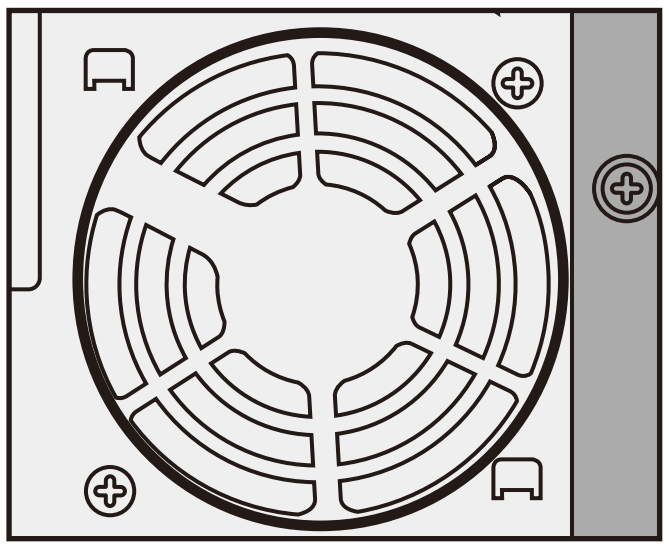

Please observe the following cautions for your safety.

- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit could rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)

# Setting the Clock

For each step, you have a few seconds to set the required options.
If you exceed this time, you must start again.

1 Switch the system on by pressing **POWER** button.

2 Press **TIMER/CLOCK** twice.

- "CLOCK" is displayed.

3 Press **ENTER**. The hour flashes.

- Increase the hours : ▶
- Decrease the hours : ◀

4 When the correct hour is displayed, press **ENTER**. The minutes flash.

- Increase the minutes : ▶
- Decrease the minutes : ◀

5 When the correct time is displayed, press **ENTER**.

- "TIMER" appears in the display.
- The current time is now set.

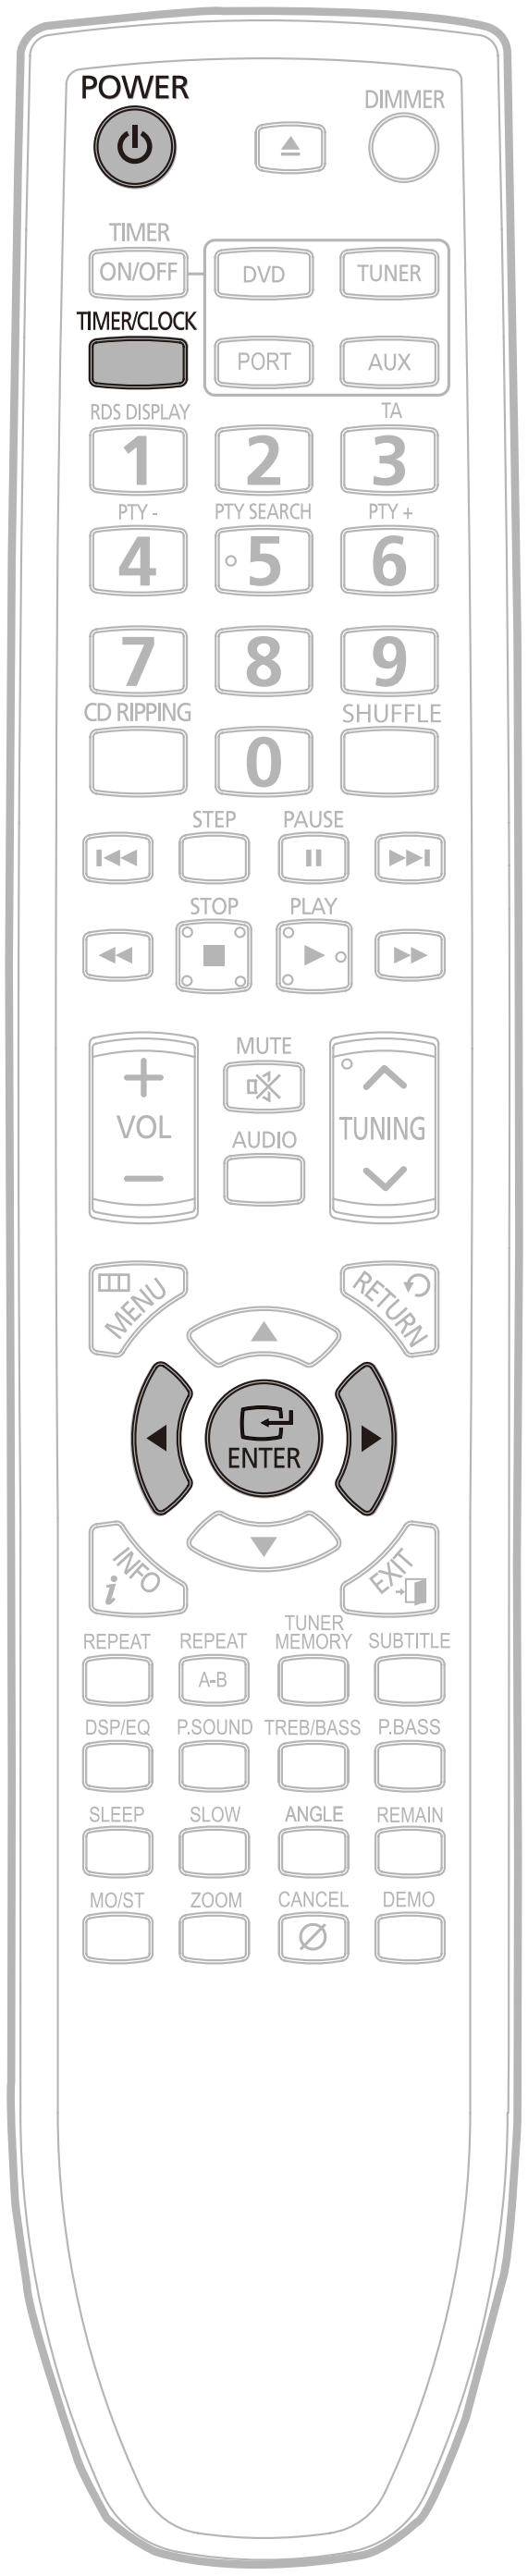
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
0
SHUFFLE
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

**Note**

- You can display the time, even when you are using another function, by pressing **TIMER/CLOCK** once.
- You can also use ⏮, ⏭ on the panel front instead of ◀ ▶ buttons in step 3,4.

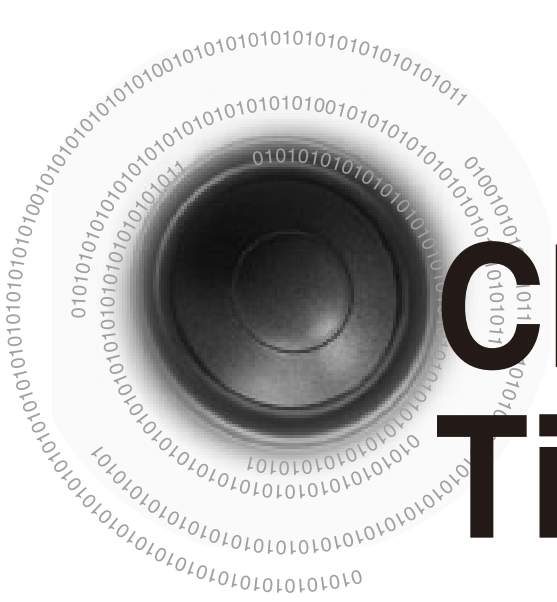

# Checking the Remaining Time

**DVD**

## 1 Press the REMAIN button.

- For checking the remaining time of a title or chapter being played.

**Each time the REMAIN button is pressed , the time is displayed as below:**

TITLE REMAIN TIME

CHAPTER REMAIN TIME

ELAPSED TIME

**CD** **MP3**

## 1 Press the REMAIN button.

- **If you press the REMAIN button, the remaining time is displayed.**
- **To cancel this function, press the REMAIN button again.**

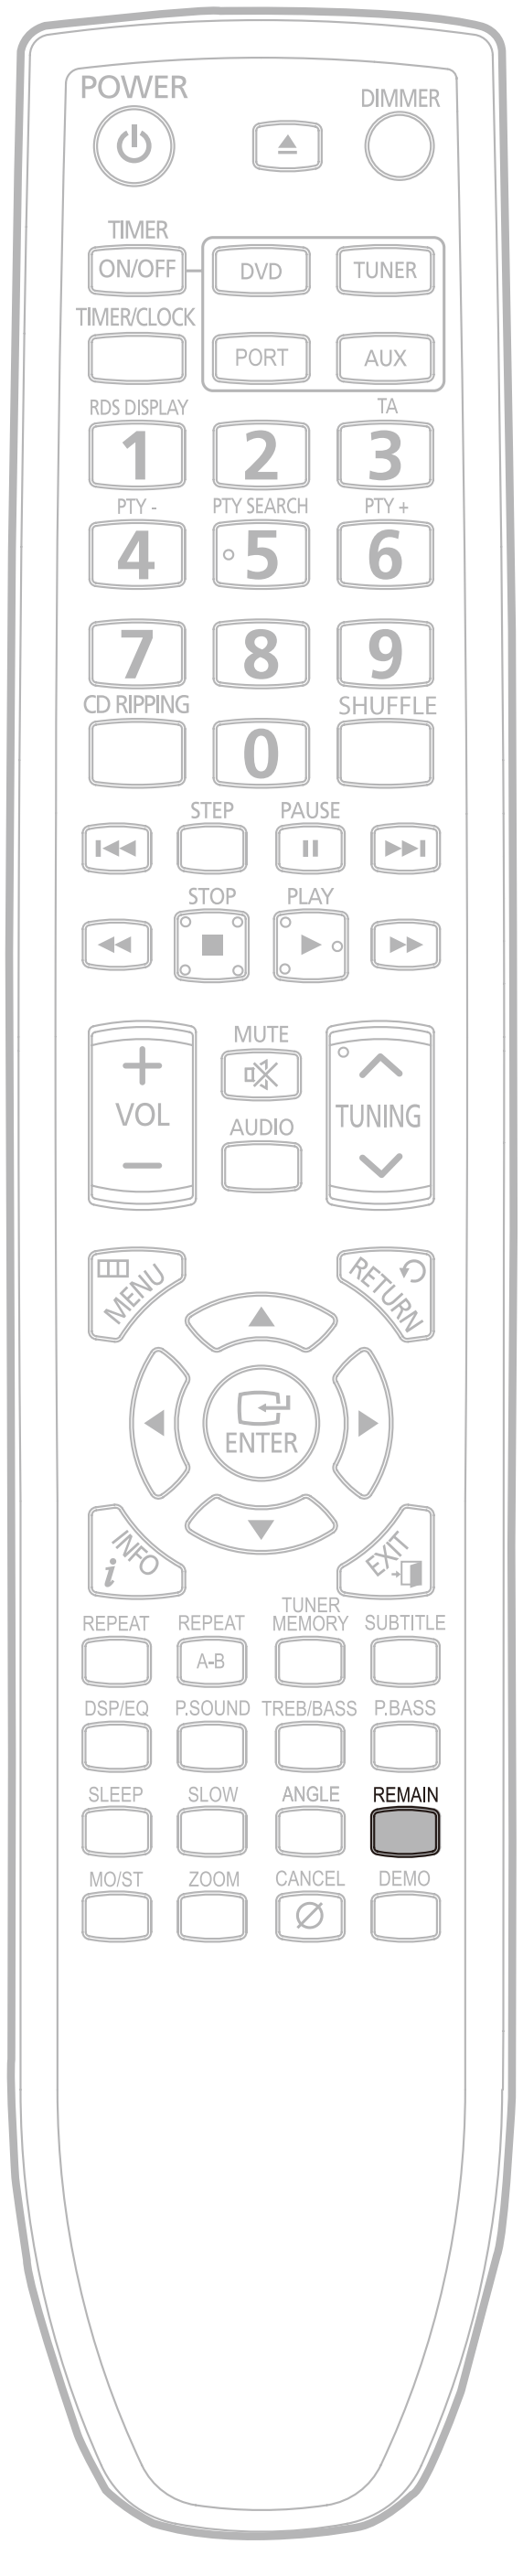
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
0
SHUFFLE
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

# Disc Playback

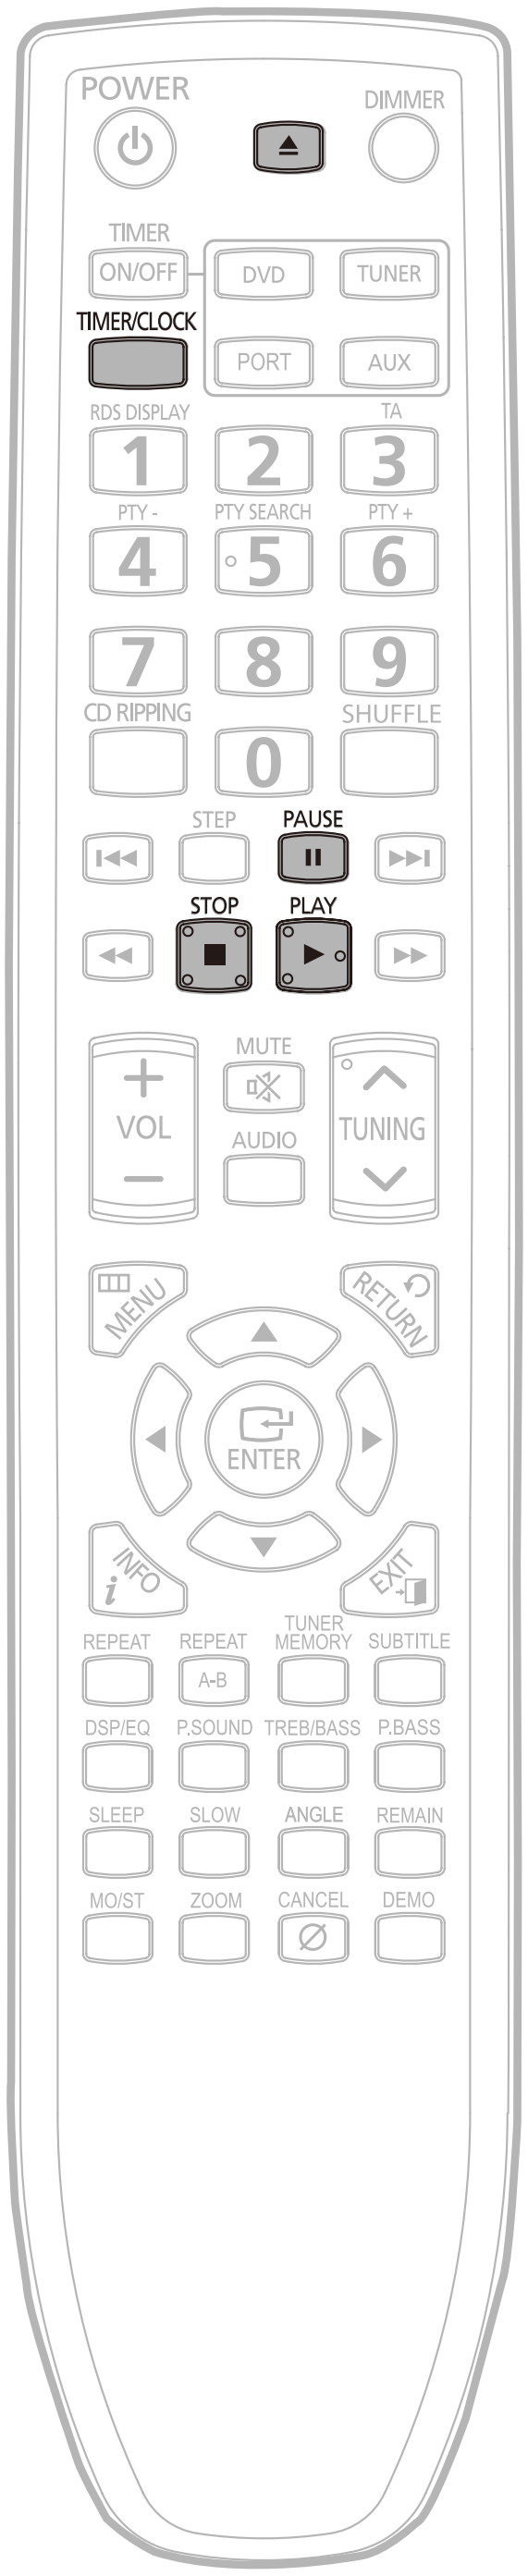
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
SHUFFLE
0
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

1 Press **OPEN/CLOSE** button to open the disc tray.

2 Load a disc.

- Place a disc gently into the tray with the disc's label facing up.

3 Press **OPEN/CLOSE** button to close the disc tray.

**Note**

- For mixed discs, the play order is as below:MP3/WMA → DIVX → JPEG.
- Depending on the content of the disc, the initial screen may appear different.
- Depending on the recording mode, some MP3-CDs cannot be played.
- For CD discs, you can press the numeric buttons to select the track, when you press the numeric buttons after 3 seconds, the playback starts automatically.
- Table of contents of a MP3-CD varies depending on the MP3 track format recorded on the disc.
- DTS Audio disc is not supported.
- DVD Audio disc is not supported.

## To stop playback, press **STOP** button during playback.

- If pressed once, the stop position will be stored in memory. If **PLAY** ( ▶ ) button is pressed, playback resumes from the stop position. (This function works only with DVDs.)
- If pressed twice, "STOP" is displayed, and if **PLAY** ( ▶ ) button is pressed, playback starts from the beginning.

## To temporarily pause playback, press **PAUSE** button during playback.

- To resume playback, press **PLAY( ▶ )** button again.

# MP3/WMA-CD Playback

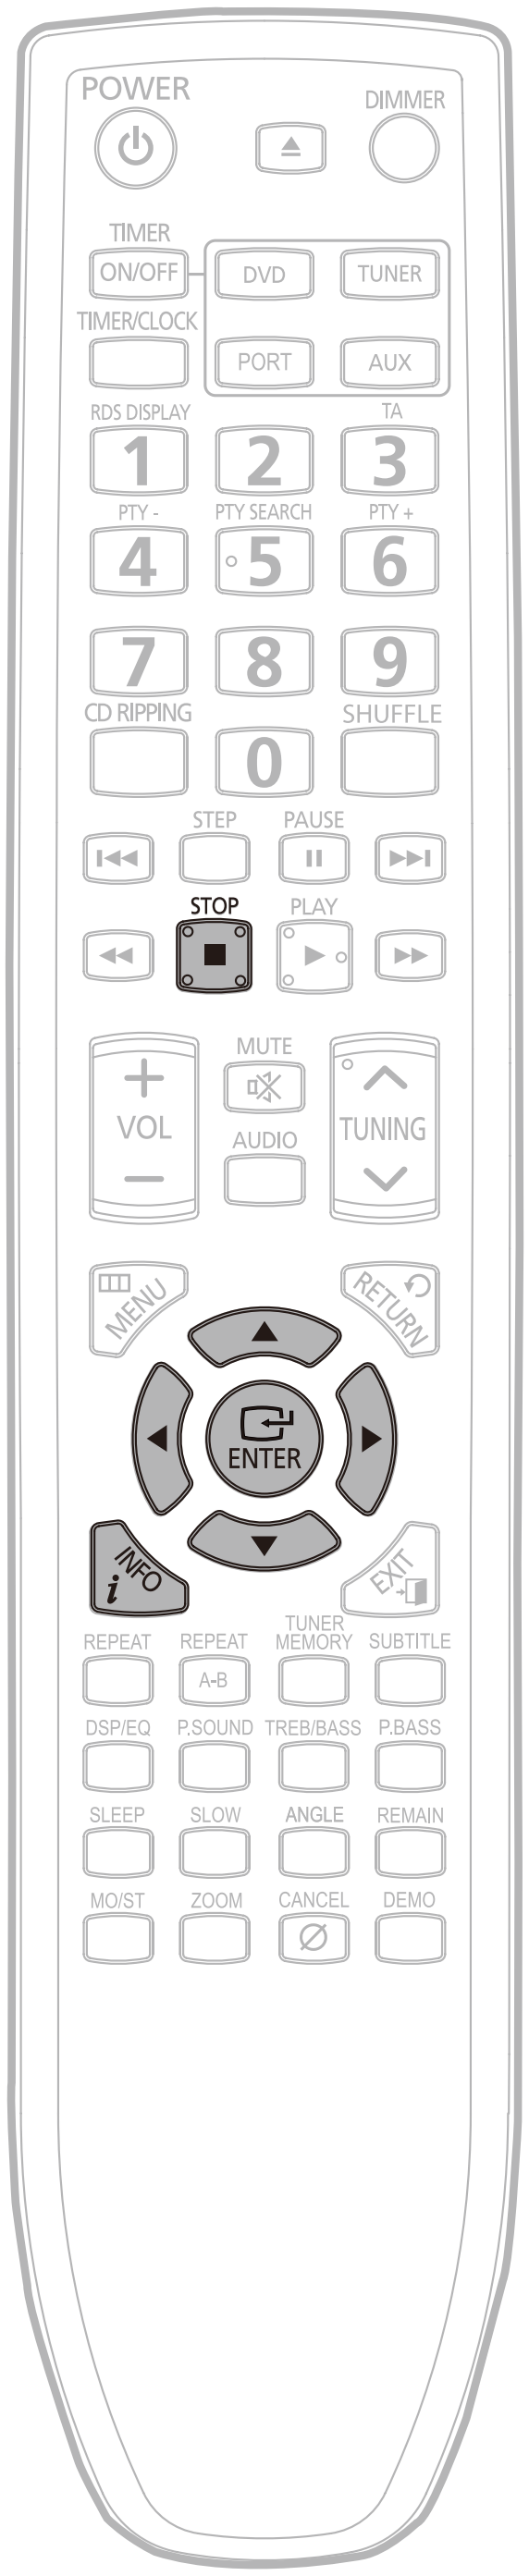
POWER
DIMMER
TIMER
ON/OFF
TIMER/CLOCK
DVD
TUNER
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
SHUFFLE
0
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

**1** Load the MP3/WMA disc.

- The MP3/WMA menu screen will appear and playback will start.
- The appearance of the menu depends on the MP3/WMA disc.
- WMA-DRM files cannot be played.

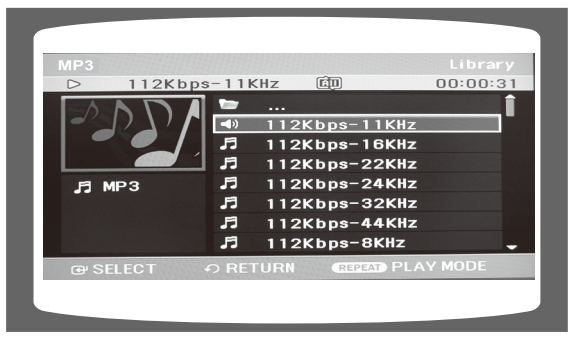
MP3
Library
112Kbps-11KHz
00:00:31
...
112Kbps-11KHz
112Kbps-16KHz
112Kbps-22KHz
112Kbps-24KHz
112Kbps-32KHz
112Kbps-44KHz
112Kbps-8KHz
MP3
SELECT
RETURN
REPEAT PLAY MODE

**2** Use ◀ ▶ ▲ ▼ to select the album, and then press the **ENTER** button.

- Use ▲ ▼ to select the track.

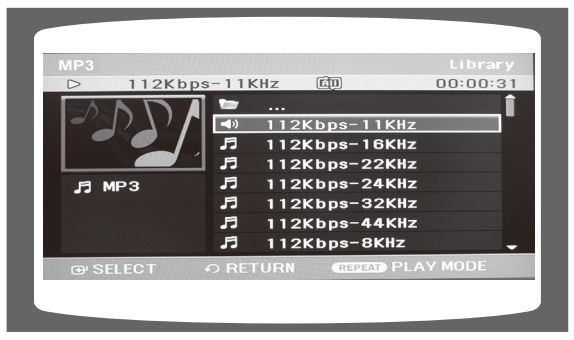
MP3
Library
112Kbps-11KHz
00:00:31
...
112Kbps-11KHz
112Kbps-16KHz
112Kbps-22KHz
112Kbps-24KHz
112Kbps-32KHz
112Kbps-44KHz
112Kbps-8KHz
MP3
SELECT
RETURN
REPEAT PLAY MODE

**3** To change the album, use ◀ ▶ ▲ ▼ to select another album in Stop mode, and then press the **ENTER** button.

- To select another album and track, repeat Steps 2 and 3 above.

**4** Press the **STOP** button to stop playback.

**Note**

- Depending on the recording mode, some MP3/WMA-CDs may not be played.
- Table of contents of a MP3-CD varies depending on the MP3/WMA track format recorded on the disc.

# JPEG File Playback JPEG

Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this DVD player.

## Rotate/Flip Function

Press Cursor ▲, ▼, ◀ , ▶ buttons during playback.

Press ▲ button, the picture will rotate as clockwise.

Press ▼ button, the picture will rotate as counter-clockwise.

Press ◀ button, it will display the previous picture.

Press ▶ button, it will display the next picture.

## Slide Show play Function

Press INFO button during playback, and then press **INFO** button or Cursor ▲, ▼ buttons to select the Slide Show Speed, the playback speed changes as follows:

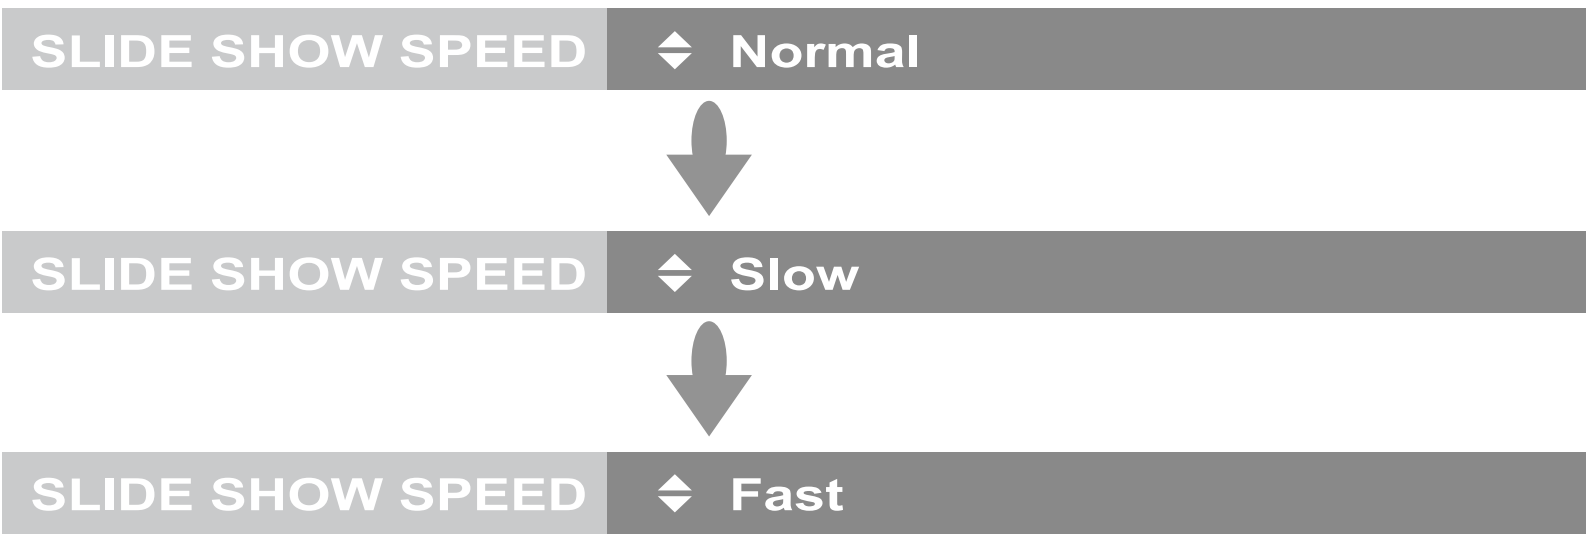

SLIDE SHOW SPEED ⬍ Normal

SLIDE SHOW SPEED ⬍ Slow

SLIDE SHOW SPEED ⬍ Fast

# DivX Playback

## Skip Forward/Back

During playback, press the ⏮, ⏭ button.

- Go to the next file whenever you press ⏭ button, if there are over 2 files in the disk.
- Go to the previous file whenever you press ⏮ button, if there are over 2 files in the disk.

## Fast playback

Press ◀◀, ▶▶ button.

- Each time the button is pressed during playback,

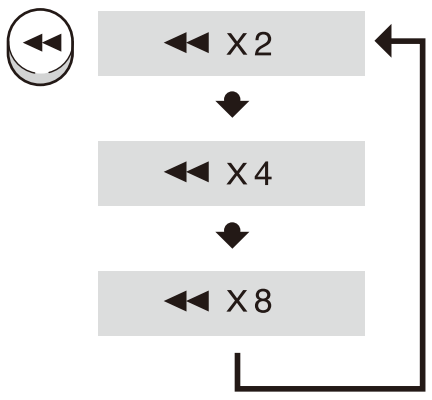

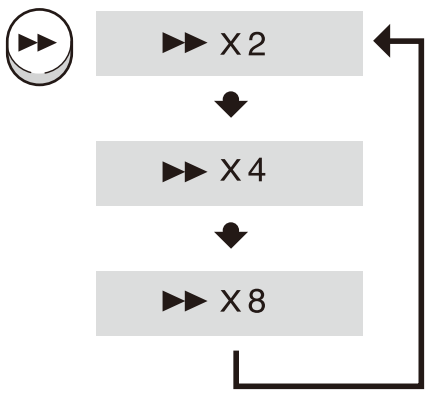

- To resume normal playback, press PLAY ( ▶ ) button.

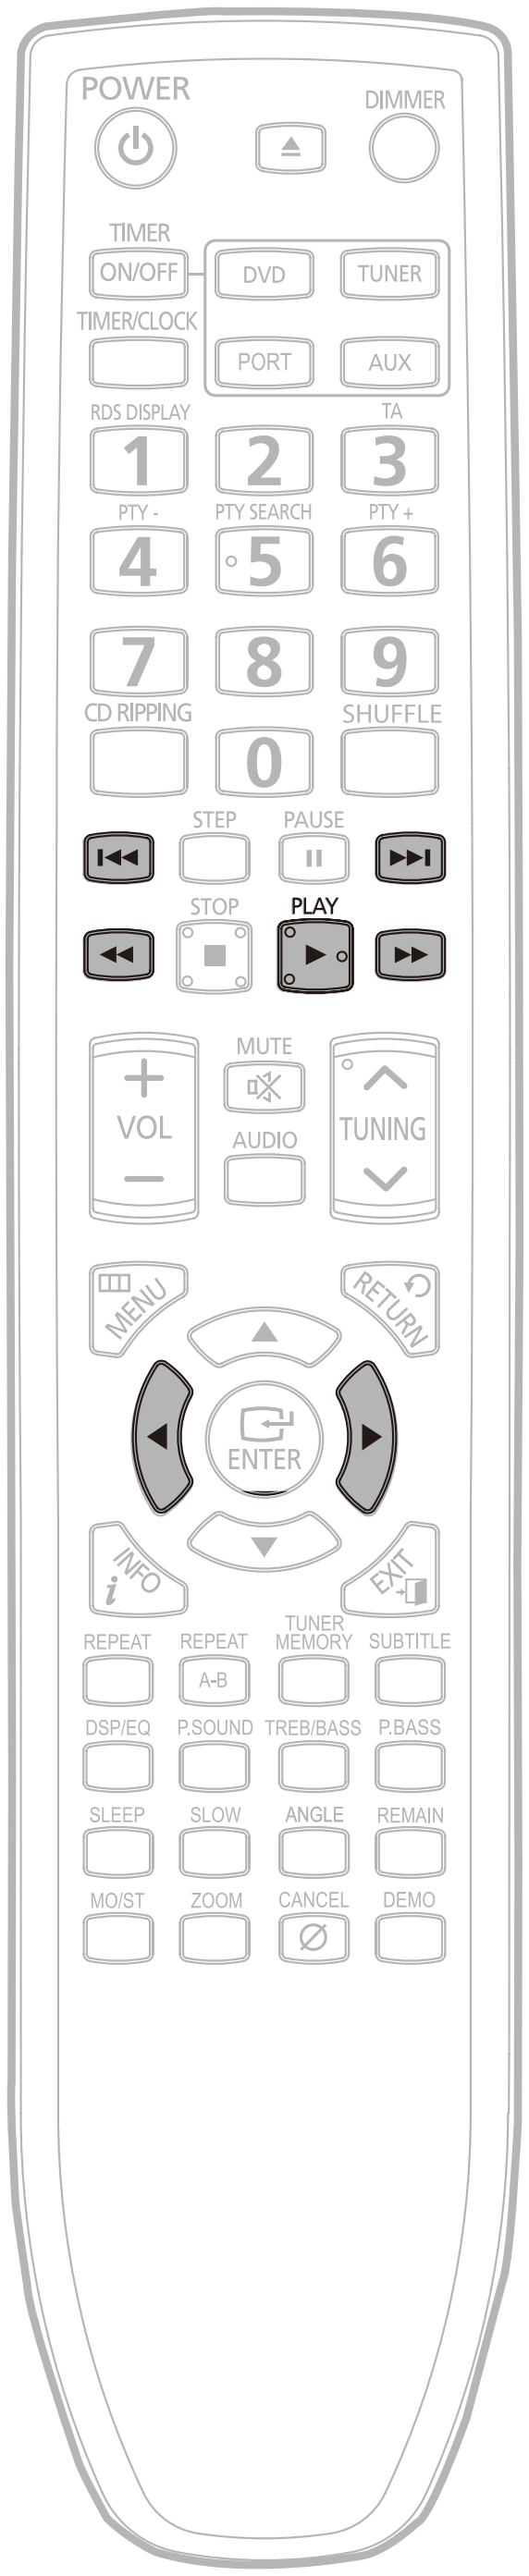
POWER
DIMMER
TIMER
ON/OFF
TIMER/CLOCK
DVD
TUNER
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
0
SHUFFLE
STEP
PAUSE
STOP
PLAY
VOL
MUTE
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

# 5 Minutes Skip function

## During playback, press the ◀ , ▶ button.

- Go to the screen 5 minutes after whenever you press ▶ button.
- Go to the screen 5 minutes earlier whenever you press ◀ button.

**Note**
- For MPG format files, 5 minute skip function is not supported.

# Audio Display

## Press the **AUDIO** button.

- If there are multiple audio tracks on a disc, you can toggle between them.
- Each time you press the button, your selection will toggle between AUDIO(OFF, 1/1, 1/2 ...).

AUDIO CH1 DOLBY DIGITAL 5.1 CH

# Subtitle Display

## Press the **SUBTITLE** button.

- Each time you press the button, your selection will changed as below:

SUBTITLE OFF
SUBTITLE KOR

- If the disc has only one subtitle file, it will be played automatically.
- Up to 8 subtitle languages are supported.

### DivX Feature Table

**DivX Supported**
**Avi** files are used to contain the audio and video data; these must be stored on CD in the ISO 9660 format.

| | | SPEC |
|---|---|---|
| VIDEO Compatibility | DivX3.11 | Up to the latest VERSION |
| AUDIO Compatibility | MP3 | CBR : 8kbps~320kbps |
| | AC3 | CBR : 32kbps~640kbps |
| | WMA | CBR1:Stereo case:48kbps~384kbps |
| | | CBR2:Mono case:64kbps~192kbps |

**MPEGs containing DivX can be divided into Video and Audio.**
- **Video compatibility** : All versions of DivX later than 3.11 (including the latest 5.1) are supported. In addition, XviD is supported.
- **Audio compatibility** : MP3s encoded at bit rates from 8kbps to 320kbps, AC3s from 32kbps to 640kbps, and WMAs from 48kbps to 384kbps are supported.
- **In addition, for subtitles, this unit will support Text format (SMI).**

**Note**
- When playing the DivX disk, you can play the file with extension of AVI only.
- Among the available DivX audio formats, DTS Audio is not supported.
- When burning a subtitle file to a CD-ROM with your PC, be sure to burn it as an SMI file.
- MPEG 1 Layer 1 (MP1) is not supported.

# Playing Media Files using the USB feature

You can connect and play files from external USB storage devices such as MP3 players, USB flash memory, etc. using the player's USB function.

## 1

Connect the USB cable.

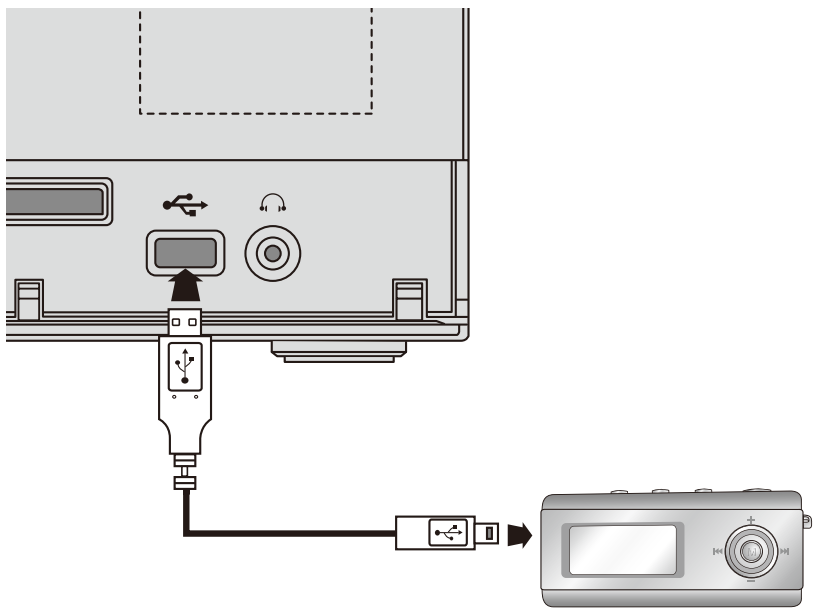

## 2

Press the **FUNC.** button on the main set or the **PORT** button on the remote control to select the USB mode.

- USB SORTING screen appears on the TV screen and the saved file is played.

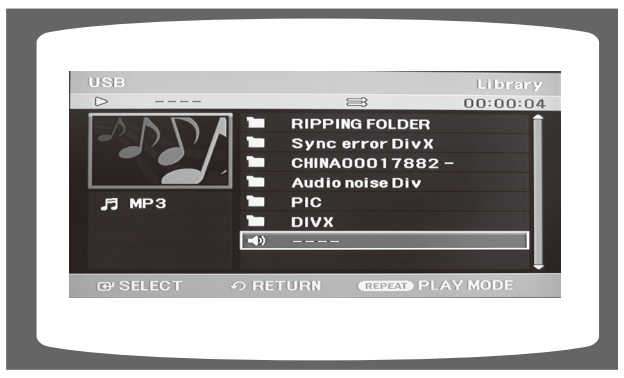
USB
Library
00:00:04
MP3
RIPPING FOLDER
Sync error DivX
CHINA00017882 –
Audio noise Div
PIC
DIVX
SELECT
RETURN
REPEAT PLAY MODE

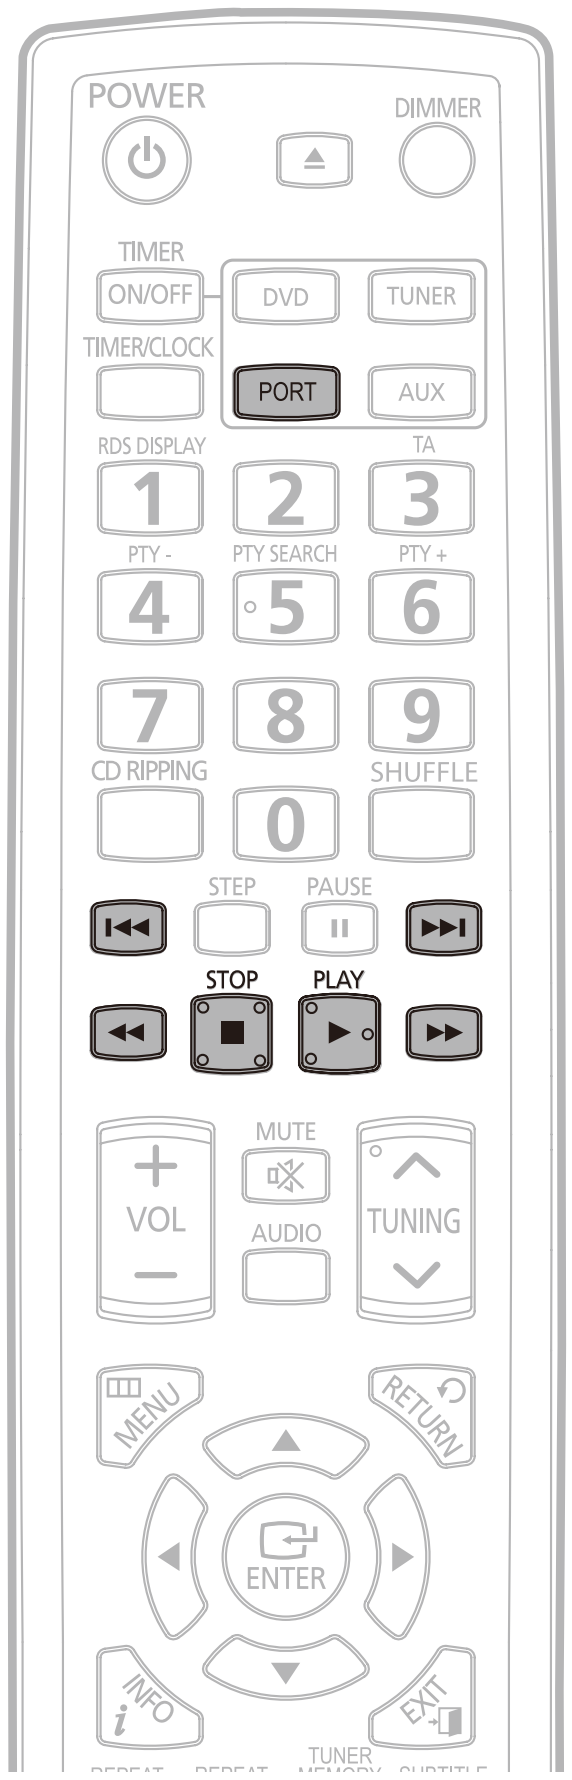
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
SHUFFLE
0
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
TUNER

To stop playback, press the **STOP** (■) button.

**Note**

- Video files (DivX, MPEG, etc.) are supported.
- To prevent the loss of data saved in the USB device, please turn the unit off or switch it to another mode before disconnecting the USB cable.
- The play order is as follow: MP3/WMA → DIVX → JPEG.

## Skip Forward/Back

During playback, press the ⏮, ⏭ button.

- When there is more than a file, when you press the ⏭ button, the next file is selected.
- When there is more than a file, when you press the ⏮ button, the previous file is selected.

## Fast playback

To play back the disc at a faster speed, press ⏪ or ⏩ button during playback.

- Each time you press either button, the playback speed will change as follows:
  ⏪x 2 → ⏪x 4 → ⏪x 8 or ⏩x 2 → ⏩x 4 → ⏩x 8
- To resume normal playback, press PLAY ( ▶ ) button.

## USB Host Specification

| | |
|---|---|
| **USB Host Specification** | • Supports USB 1.1 or USB 2.0 compliant devices.<br>• Supports devices connected using the USB A type cable.<br>• Supports UMS (USB Mass Storage Device) V1.0 compliant devices.<br>• Supports the device of which the connected drive is formatted in the FAT(FAT, FAT16, FAT32) file system. |
| **Non-compliance** | • Does not support a device that requires installing a separate driver on the PC (Windows).<br>• Does not support connection to a USB hub.<br>• A USB device that is connected using the USB extension cable may not be recognized.<br>• A USB device requiring a separate power source needs to be connected to the player with the separate power connection. |
| **Operational Limitations** | • If the connected device has multiple drives (or partitions) installed, only one drive (or partition) can be connected.<br>• A device supporting USB 1.1 alone may cause a difference in the picture quality, depending on the device. |

## Compliant Devices

1. USB Storage Device
2. MP3 Player
3. Digital Camera
4. Removable HDD
    - Removable HDDs equipped with less than 160 Gbytes are supported. Removable HDDs equipped with 160Gbytes or more may not be recognized, depending on the device.
    - If the connected device does not work due to insufficient power supply, you can use a separate power cable to supply power so that it can work properly. The connector of the USB cable may differ, depending on the manufacturer of the USB device.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader.
    - Depending on the manufacturer. the USB card reader may not be supported.
    - If you install multiple memory devices into a multi card reader, you may experience problems.

## Compliant File Formats

| Format | File name | File extension | Bit rate | Version | Pixel | Sampling Frequency |
|---|---|---|---|---|---|---|
| **Still Picture** | JPG | JPG .JPEG | – | – | 640x480 | – |
| **Music** | MP3 | .MP3 | 8~320kbps | – | – | 44.1kHz |
| | WMA | .WMA | Stereo:48~384kbps | V8 | – | 44.1kHz |
| | | | Mono:64~192kbps | | | |
| **Movie** | DivX | .AVI | 4Mbps | DivX3.11~ DivX5.1, XviD | 720x480 | 44.1KHz~48KHz |

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Does not operate with Janus enabled MTP (Media Transfer Protocol) devices.
- MPEG 1 Layer 1 (MP1) is not supported.

# Displaying Disc Information

You can view playback information on the disc on the TV screen.

## Press **INFO** button.

- Press Cursor ▲ , ▼ buttons select the desired item, and then press ENTER button to select the desired item.

**DVD**

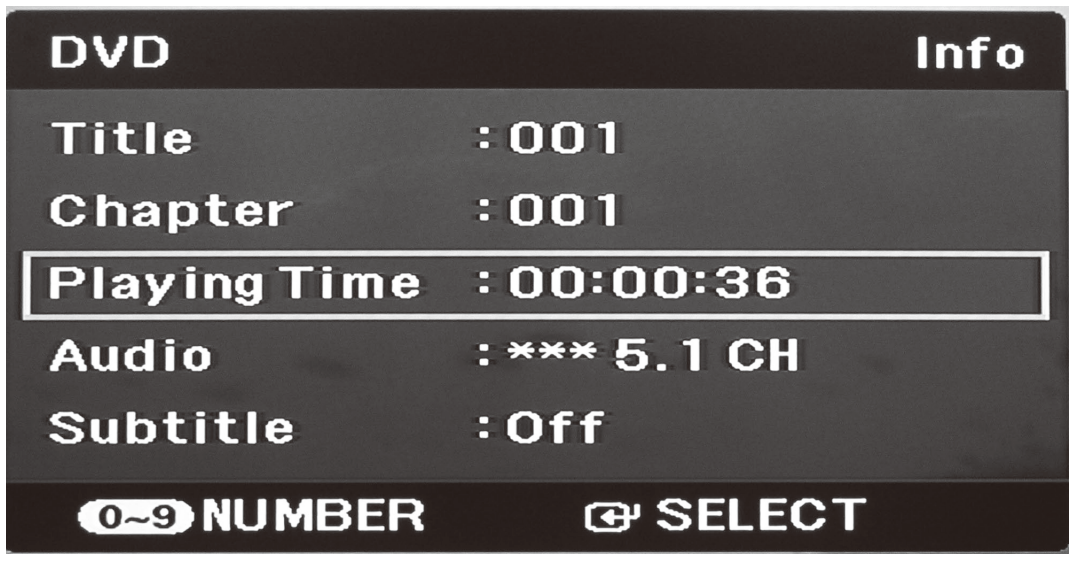

DVD Info

Title : 001

Chapter : 001

Playing Time : 00:00:36

Audio : *** 5.1 CH

Subtitle : Off

Display disappears

**DIVX**

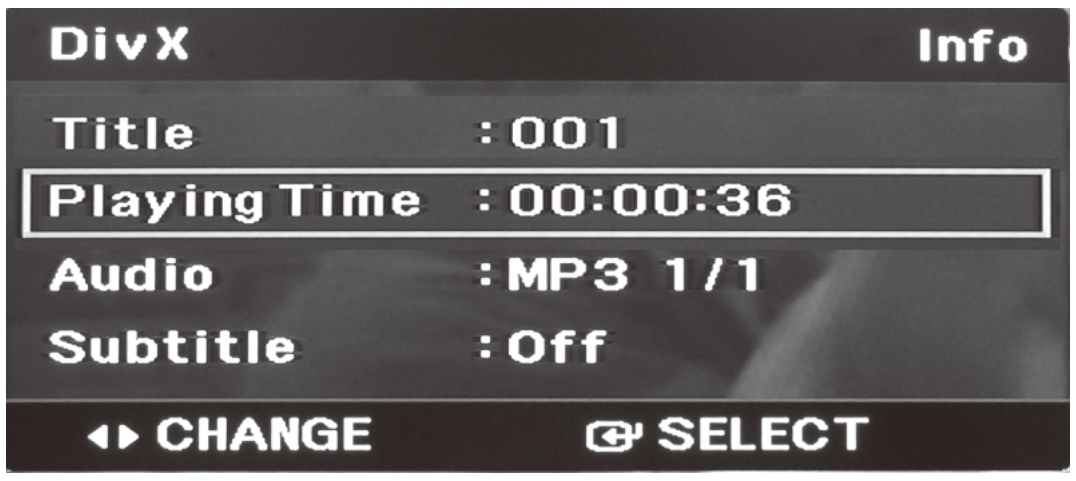

DivX Info

Title : 001

Playing Time : 00:00:36

Audio : MP3 1/1

Subtitle : Off

Display disappears

- **What is a Title?**
  A movie contained in a DVD disc.

- **What is a Chapter?**
  Each title on a DVD disc is divided into several smaller sections called "chapters".

- ∅ **appears on the TV screen!**
  If this symbol appears on the TV screen while buttons are being operated, that operation is not possible with the disc currently being played.

**Note**

- Depending on the disc, the disc information display may appear different.

# Fast/Slow Playback

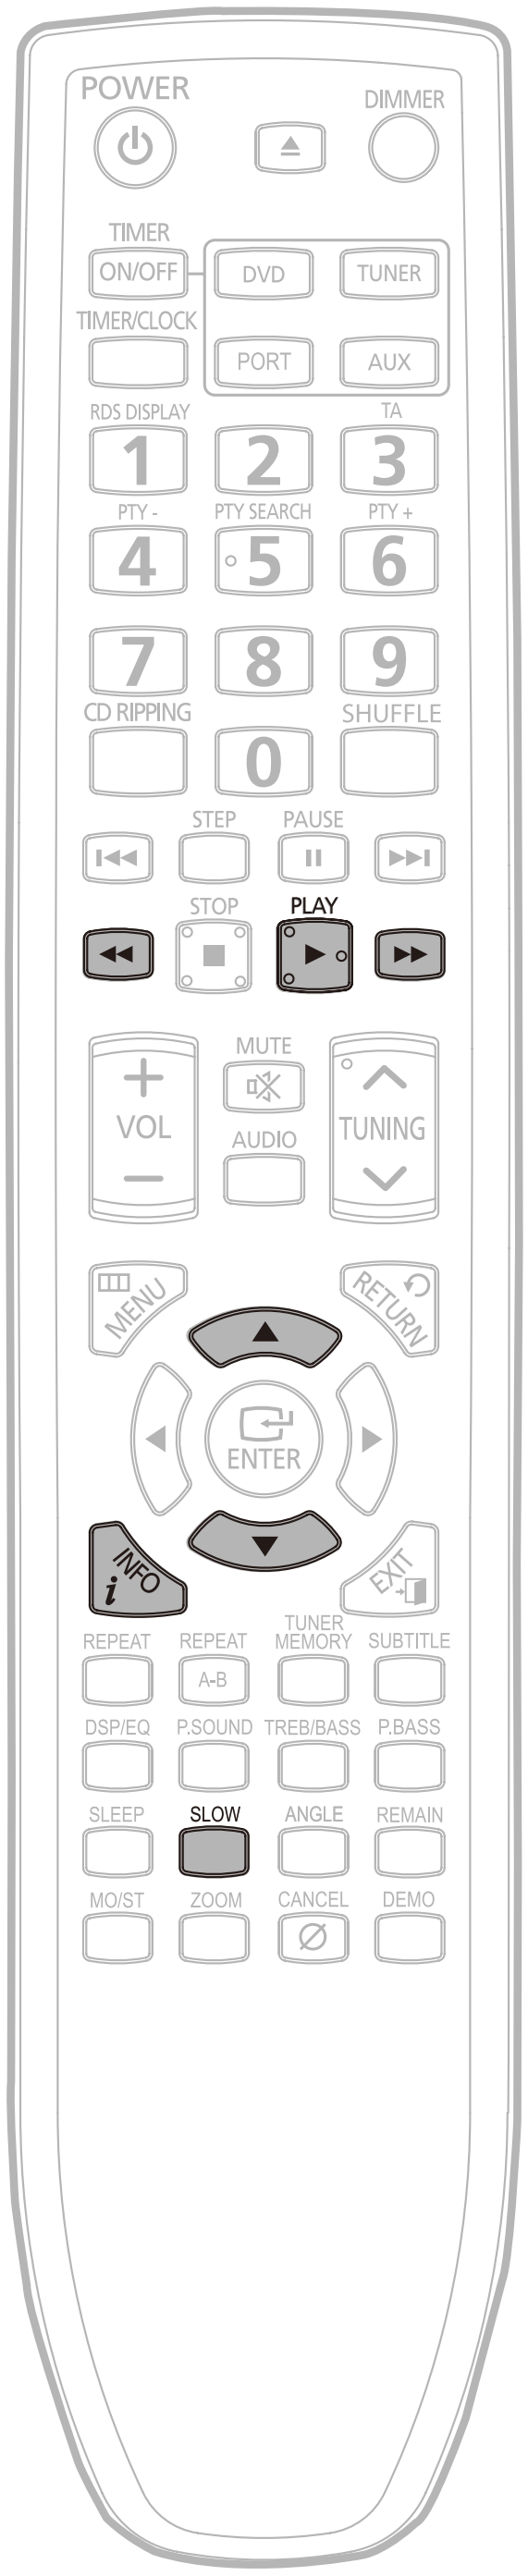
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
PTY -
PTY SEARCH
PTY +
CD RIPPING
SHUFFLE
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
TUNER MEMORY
SUBTITLE
A-B
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

## Fast Playback DVD CD MP3

### Press ◀◀, ▶▶ buttons.

- Each time you press either button during playback, the playback speed changes as follows:

DVD

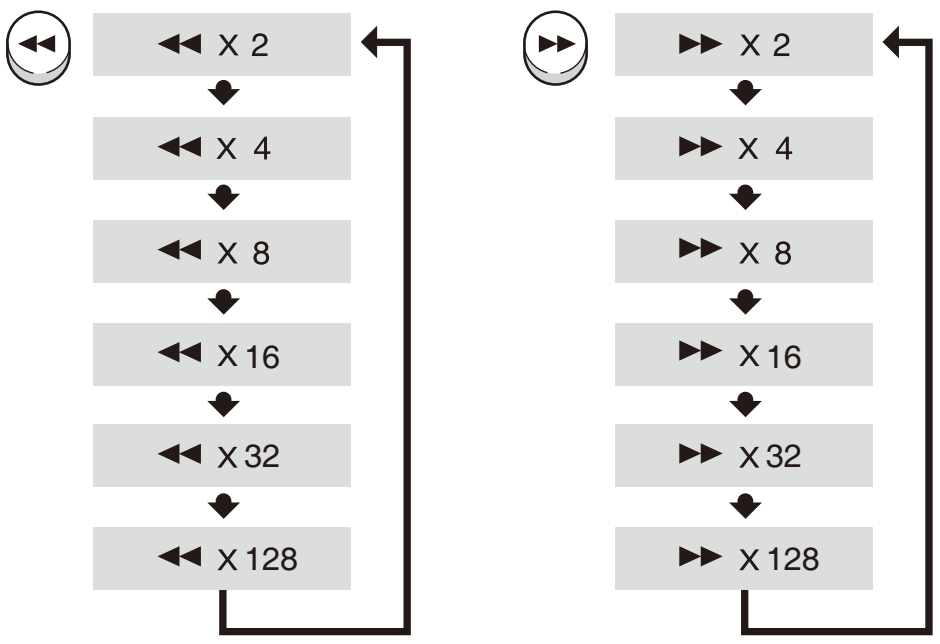
◀◀ X 2
◀◀ X 4
◀◀ X 8
◀◀ X 16
◀◀ X 32
◀◀ X 128
▶▶ X 2
▶▶ X 4
▶▶ X 8
▶▶ X 16
▶▶ X 32
▶▶ X 128

CD MP3

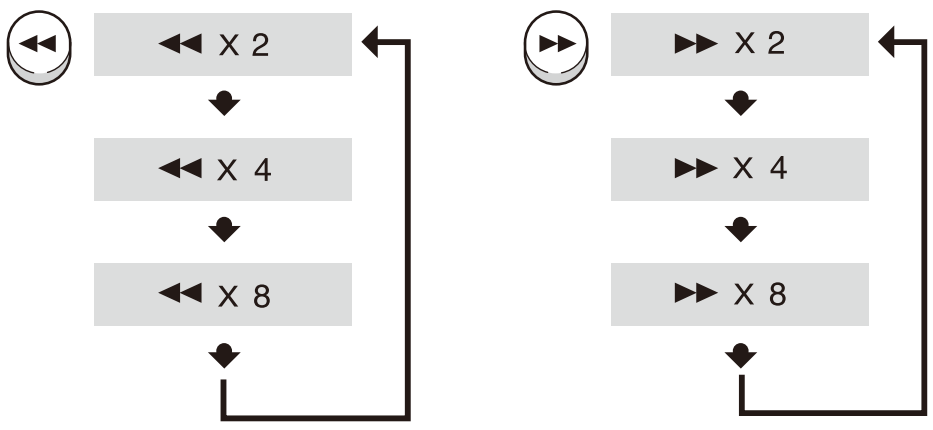
◀◀ X 2
◀◀ X 4
◀◀ X 8
▶▶ X 2
▶▶ X 4
▶▶ X 8

- To resume normal playback, press PLAY ( ▶ ) button.

## Slow Playback

### Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

DVD DivX



- In Pause mode or Slow mode, you can use the ◀◀, ▶▶ button to select as below:

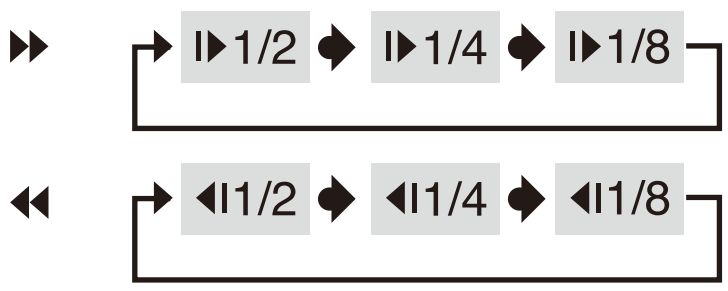
▶▶
I▶1/2
I▶1/4
I▶1/8
◀◀
◀I1/2
◀I1/4
◀I1/8

- To resume normal playback, press PLAY ( ▶ ) button.

**Note**

- During fast playback of a CD or MP3-CD, sound is not heard.
- No sound is heard during slow playback and step motion playback.
- During slow playback of a DIVX, the playback speed maybe abnormal.

# Skipping Scenes/Songs

DVD MP3 JPEG DIVX CD

## Briefly press ⏮, ⏭.

- Each time the button is pressed briefly during playback, the previous or next chapter, track, or directory (file) will be played.

DVD JPEG DIVX

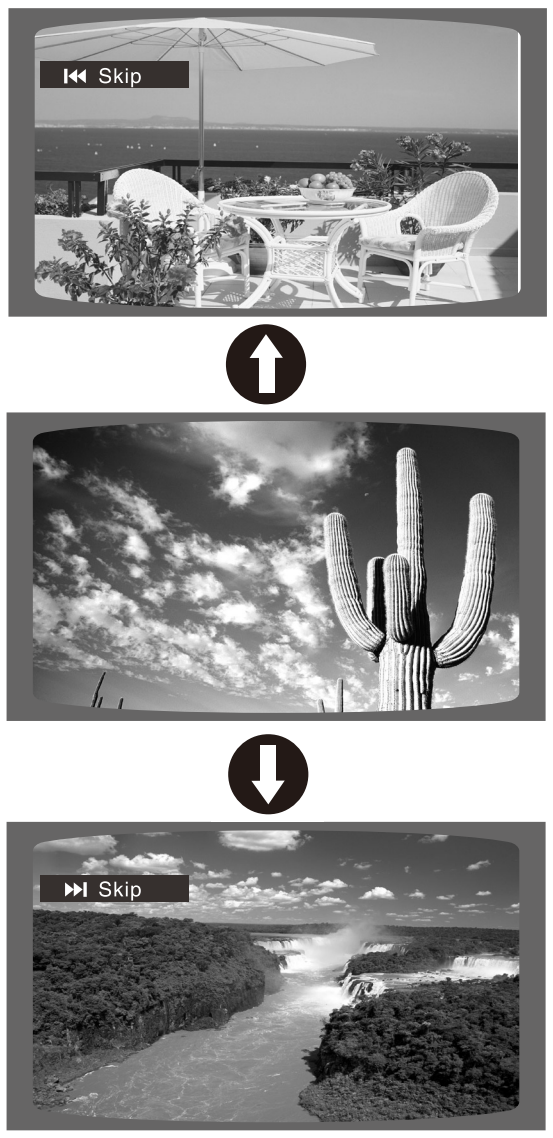

MP3

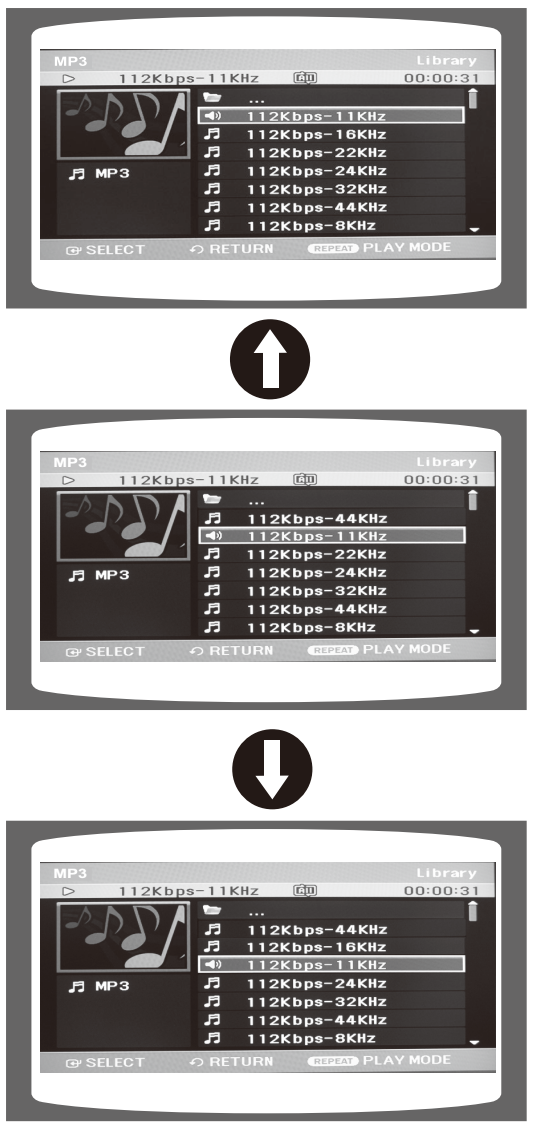

MP3
Library
112Kbps-11KHz
00:00:31
...
112Kbps-11KHz
112Kbps-16KHz
112Kbps-22KHz
112Kbps-24KHz
112Kbps-32KHz
112Kbps-44KHz
112Kbps-8KHz
MP3
SELECT
RETURN
REPEAT PLAY MODE
MP3
Library
112Kbps-11KHz
00:00:31
...
112Kbps-44KHz
112Kbps-11KHz
112Kbps-22KHz
112Kbps-24KHz
112Kbps-32KHz
112Kbps-44KHz
112Kbps-8KHz
MP3
SELECT
RETURN
REPEAT PLAY MODE
MP3
Library
112Kbps-11KHz
00:00:31
...
112Kbps-44KHz
112Kbps-16KHz
112Kbps-11KHz
112Kbps-24KHz
112Kbps-32KHz
112Kbps-44KHz
112Kbps-8KHz
MP3
SELECT
RETURN
REPEAT PLAY MODE

CD

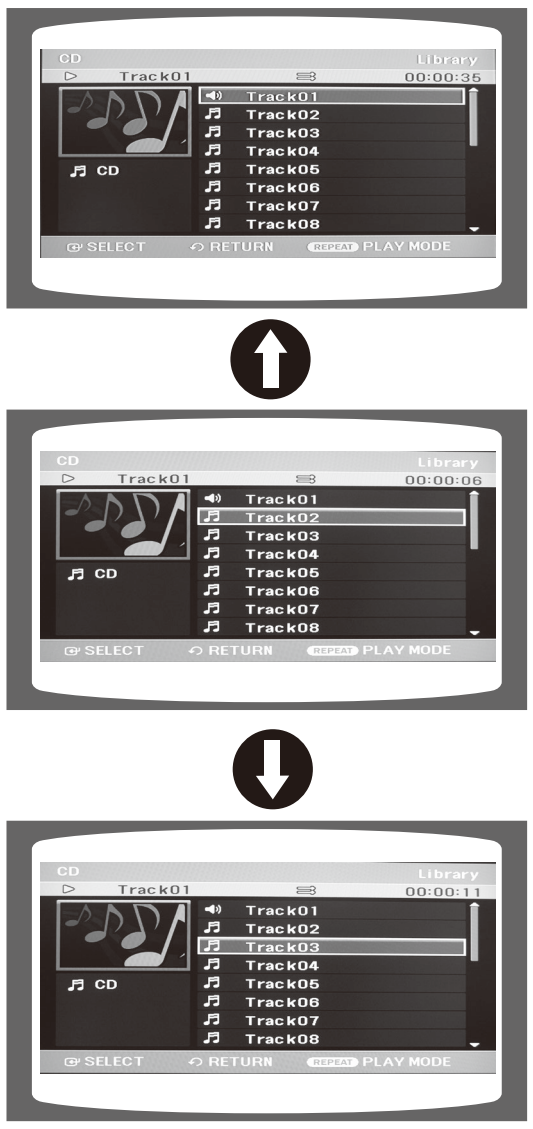

CD
Library
Track01
00:00:35
Track01
Track02
Track03
Track04
Track05
Track06
Track07
Track08
CD
SELECT
RETURN
REPEAT PLAY MODE
CD
Library
Track01
00:00:06
Track01
Track02
Track03
Track04
Track05
Track06
Track07
Track08
CD
SELECT
RETURN
REPEAT PLAY MODE
CD
Library
Track01
00:00:11
Track01
Track02
Track03
Track04
Track05
Track06
Track07
Track08
CD
SELECT
RETURN
REPEAT PLAY MODE

## Playing Frame by Frame DVD DIVX

Press **STEP** button.

- The picture moves forward one frame each time the button is pressed during playback.

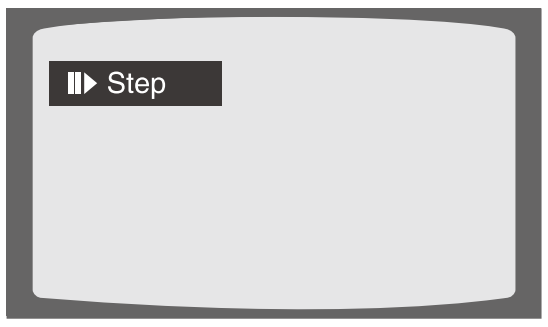

# Angle Function

This function allows you to view the same scene in different angles.

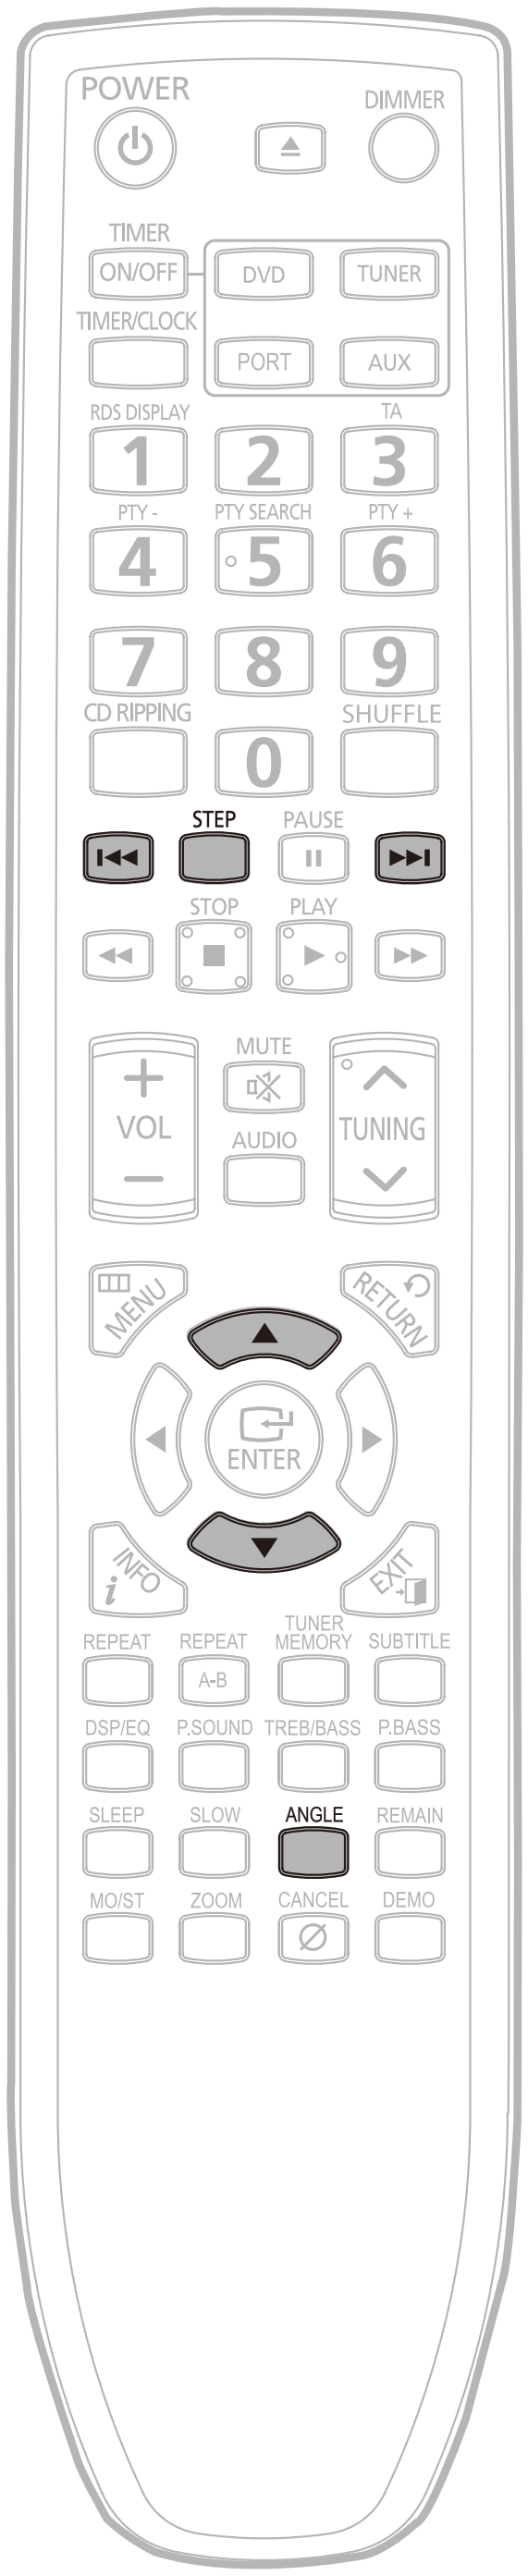
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
PTY -
PTY SEARCH
PTY +
CD RIPPING
SHUFFLE
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

DVD

1 Press **ANGLE** button.

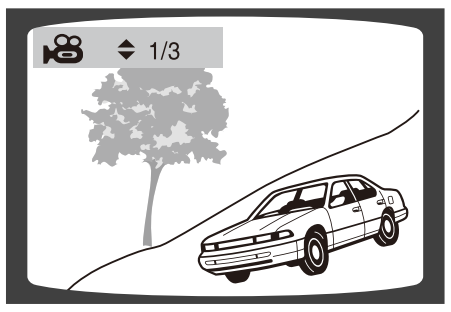

2 Press Cursor ▲ , ▼ buttons to select the desired angle.

- Each time the button is pressed, the angle changes as follows:

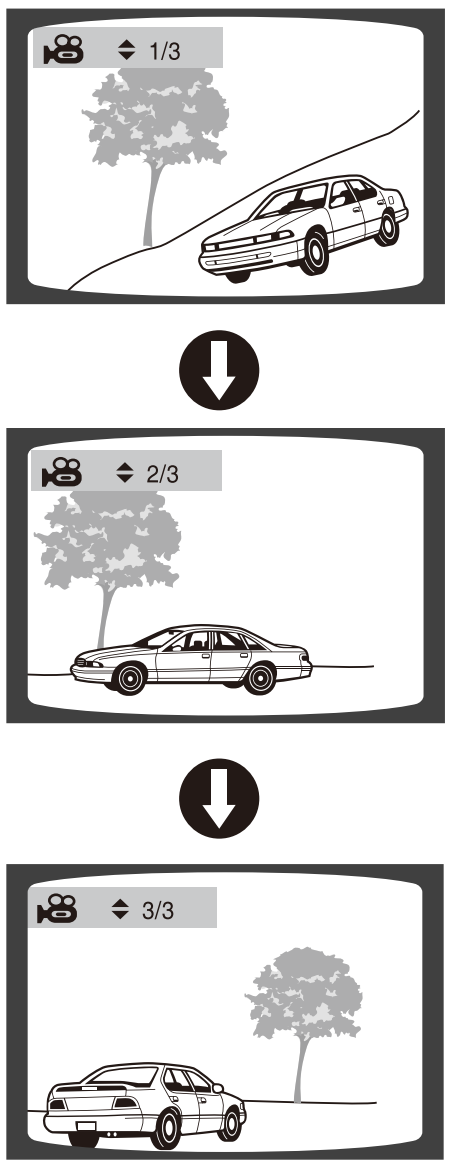

**Note**

- The Angle function works only with discs on which multiple angles have been recorded.

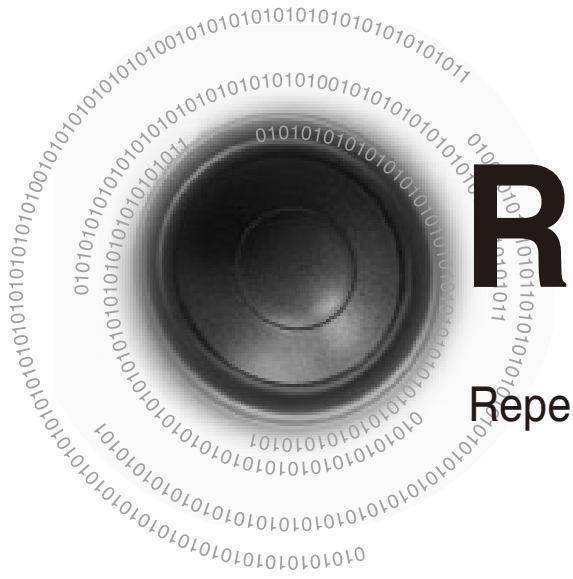

# Repeat Playback

Repeat playback allows you to repeatedly play a chapter, title, track (song), or directory (MP3 file).

DVD CD MP3 DIVX

## Press **REPEAT** button.

- Each time the button is pressed during playback, the repeat playback mode changes as follow:

DVD **Title → Chapter → Off**

DIVX **Track → Folder → Off**

MP3 ⇉ → 🔂 → 📁 → 🔁 → 🔀

CD ⇉ → 🔂 → 🔁 → 🔀

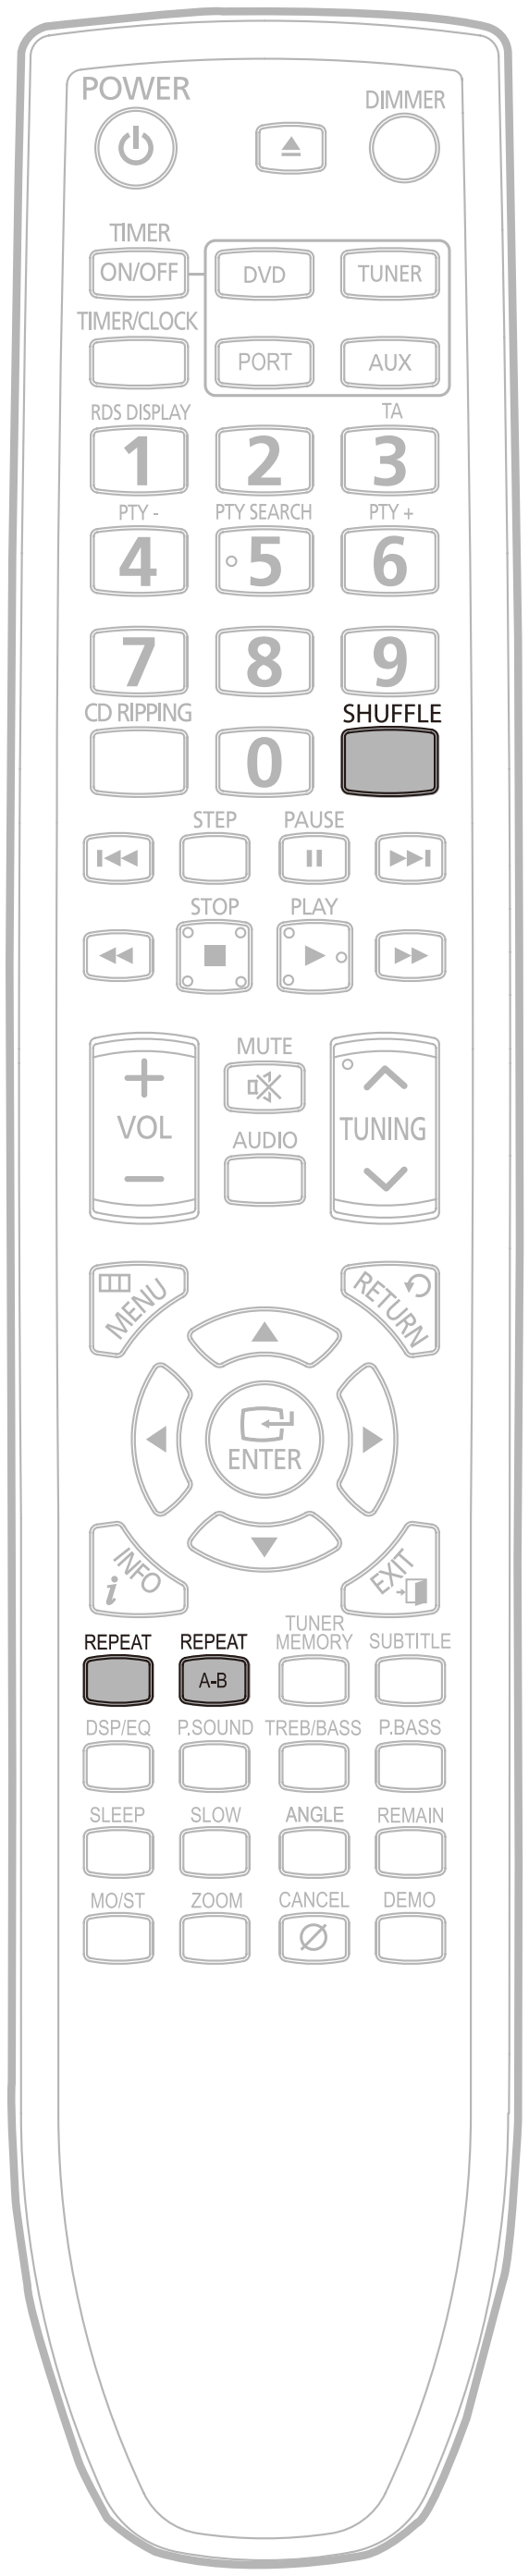
POWER
DIMMER
TIMER ON/OFF
TIMER/CLOCK
DVD
TUNER
PORT
AUX
RDS DISPLAY
TA
PTY -
PTY SEARCH
PTY +
CD RIPPING
SHUFFLE
STEP
PAUSE
STOP
PLAY
VOL
MUTE
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

### Repeat Playback Options

- **Track**: Repeatedly plays the selected track.
- **Folder**: Repeatedly plays all tracks in the selected folder.
- **Title**: Repeatedly plays the selected title.
- **Chapter**: Repeatedly plays the selected chapter.
- **Off**: Cancels Repeat Playback.

- ⇉ Normal (Audio CD(CD-DA)/MP3): Tracks on a disc are played in the order in which they were recorded on the disc.
- 🔂 Repeat track (Audio CD(CD-DA)/MP3)
- 📁 Repeat Folder (MP3)
- 🔁 Repeat All (Audio CD(CD-DA)): All tracks are repeated.
- 🔀 Shuffle (Audio CD(CD-DA)/MP3)(Each track can be played one time.)
  - When playing an Audio CD(CD-DA): The shuffle option plays a disc's tracks in shuffle order.
  - When playing an MP3 disc : The shuffle option plays a folder's file in shuffle order.

- For a CD, MP3 disc, you can press SHUFFLE button to play tracks in random order.(Each track just can be played one time.)

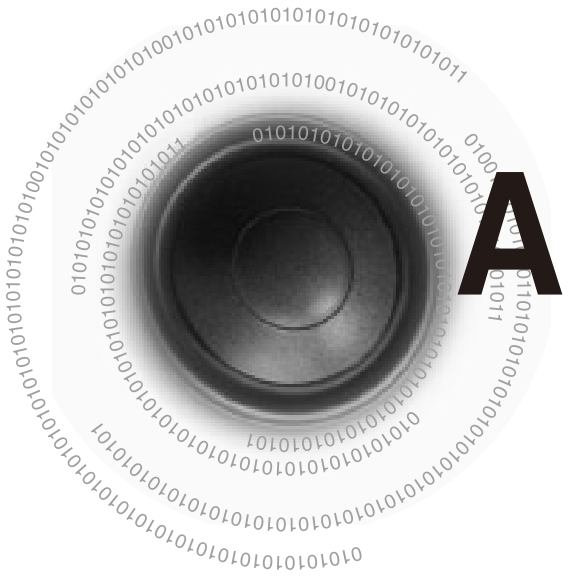

# A↔B Repeat Playback

DVD CD MP3 DIVX

**1** Press the **REPEAT A-B** button at the point where you want repeat play to start (A).

DVD DIVX

| Repeat A-B | A- |
|---|---|

CD MP3

A-B A-

**2** Press the **REPEAT A-B** button at the point where you want repeat play to stop (B).

DVD DIVX

| Repeat A-B | A-B |
|---|---|

CD MP3

A-B A-B

**3** To return to nomal play, press the **REPEAT A-B** button again.

DVD DIVX

| Repeat A-B | Off |
|---|---|

CD MP3

⇉

- The A-B Repeat function does not operate with JPEG disc.
- The time space of point A and B should be more than 5 seconds.

# Zoom Function

This function allows you to enlarge a particular area of the displayed image.

## Zoom (Screen Enlarge) Function

DVD DIVX JPEG

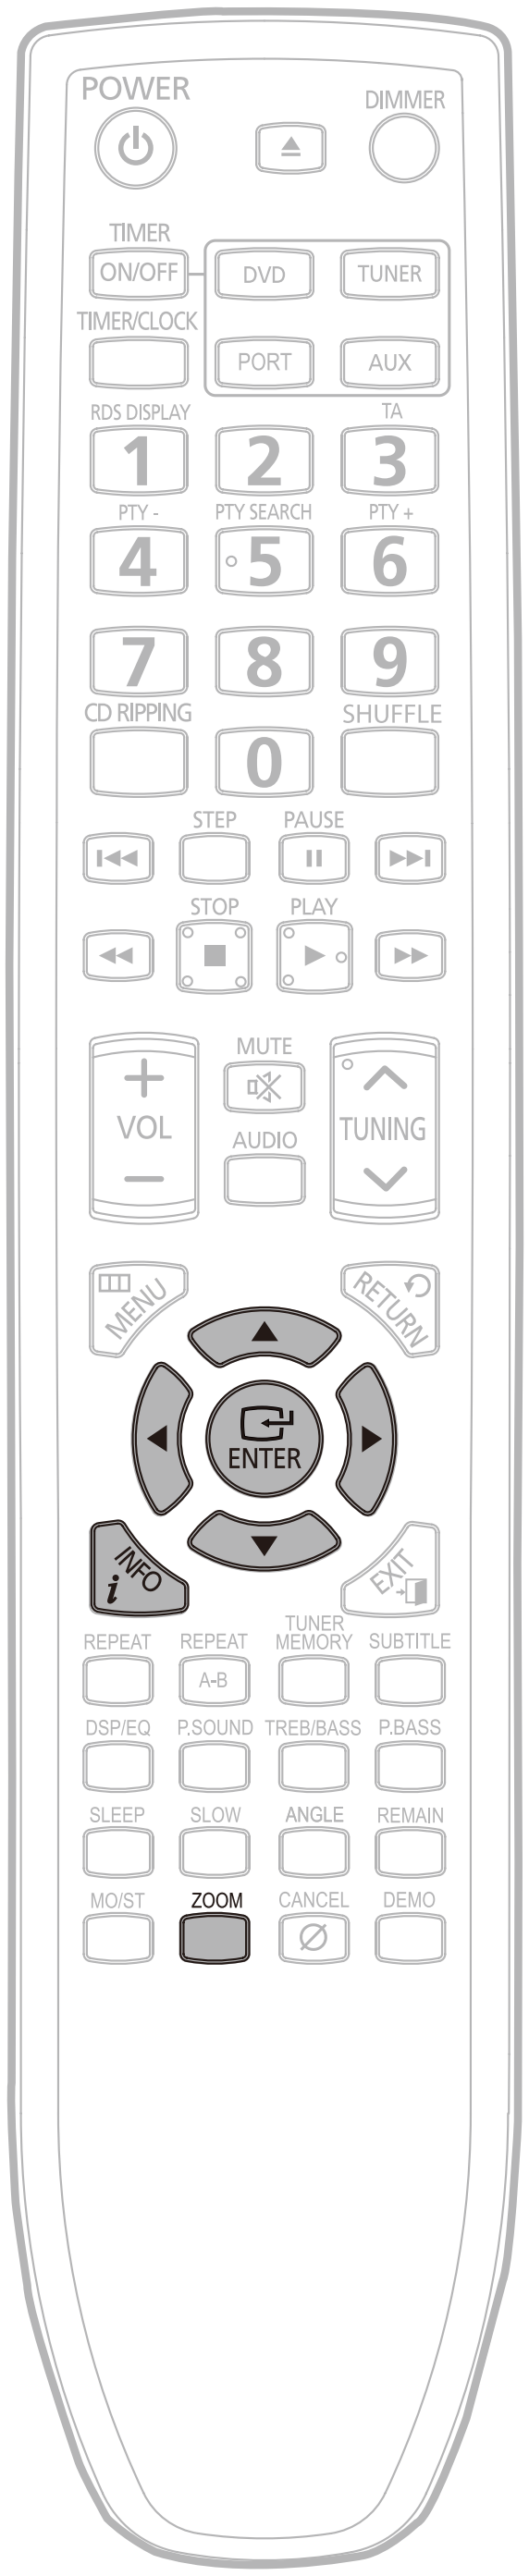
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
SHUFFLE
0
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

**1** Press **ZOOM** button.

Each time the button is pressed, the zoom level changes as follow:
2 x → 4 x → OFF.

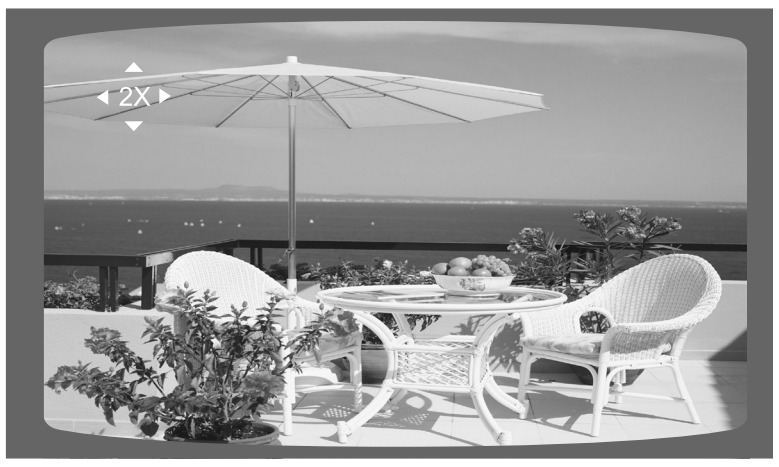

**2** Press Cursor ▲, ▼, ◀, ▶ buttons to move the area.

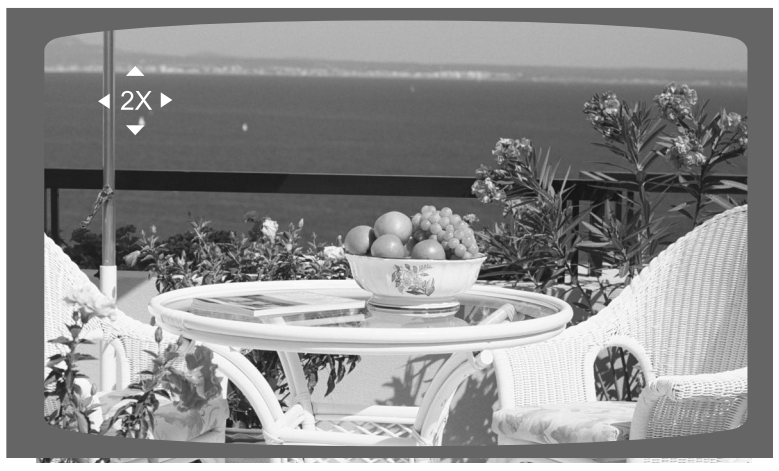

# Selecting Audio/Subtitle Language

## Audio Language Selection Function DVD DIVX

1. Press **INFO** button.
2. Press Cursor ▲ ,▼ buttons to select the **Audio**.
3. Press Cursor ◀ ,▶ buttons to select the desired Audio language.
   - Depending on the number of languages on a DVD disc, a different audio language (ENGLISH, SPAIN,FRENCH, etc.) is selected each time the button is pressed.

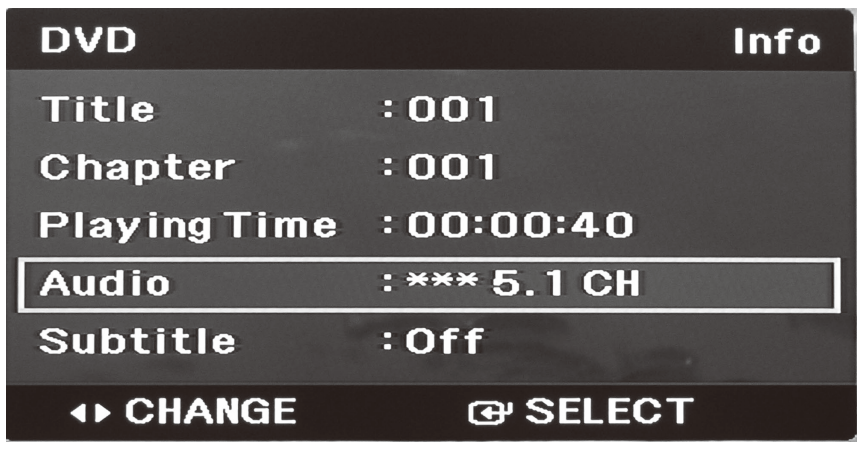

DVD Info
Title : 001
Chapter : 001
Playing Time : 00:00:40
Audio : *** 5.1 CH
Subtitle : Off
◀▶ CHANGE SELECT

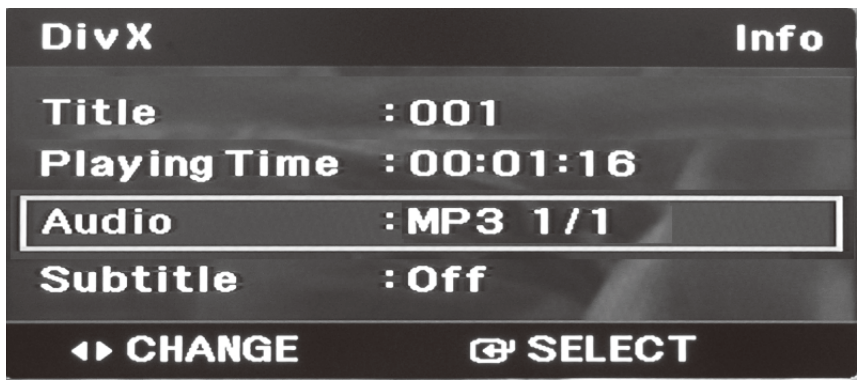

DivX Info
Title : 001
Playing Time : 00:01:16
Audio : MP3 1/1
Subtitle : Off
◀▶ CHANGE SELECT

## Subtitle Language Selection Function DVD DIVX

1. Press **INFO** button.
2. Press Cursor ▲ ,▼ buttons to select the **Subtitle**.
3. Press Cursor ◀ ,▶ buttons to select the desired Subtitle language.

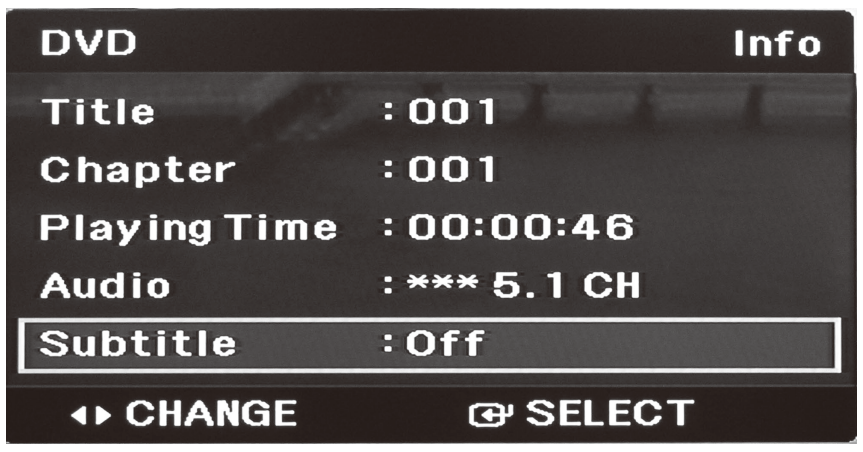

DVD Info
Title : 001
Chapter : 001
Playing Time : 00:00:46
Audio : *** 5.1 CH
Subtitle : Off
◀▶ CHANGE SELECT

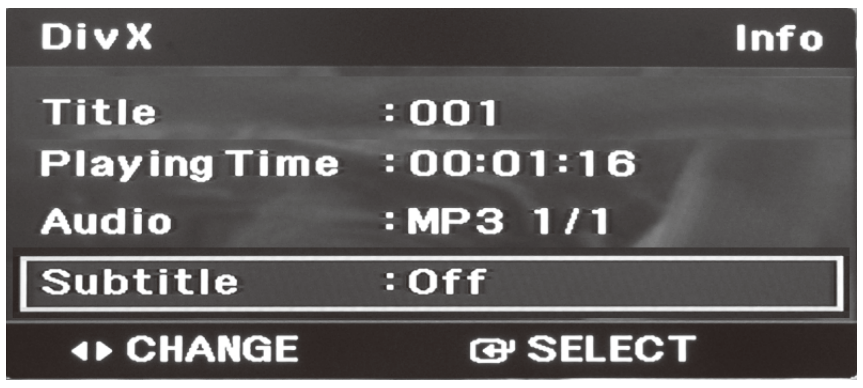

DivX Info
Title : 001
Playing Time : 00:01:16
Audio : MP3 1/1
Subtitle : Off
◀▶ CHANGE SELECT

**Note**

- You can use the AUDIO or SUBTITLE button on the remote control to select an audio or subtitle language.
- Depending on the disc, the Subtitle and Audio Language functions may not work.
- When you use AUDIO button to select "DTS", sound is not heard, and the TV displays as below:

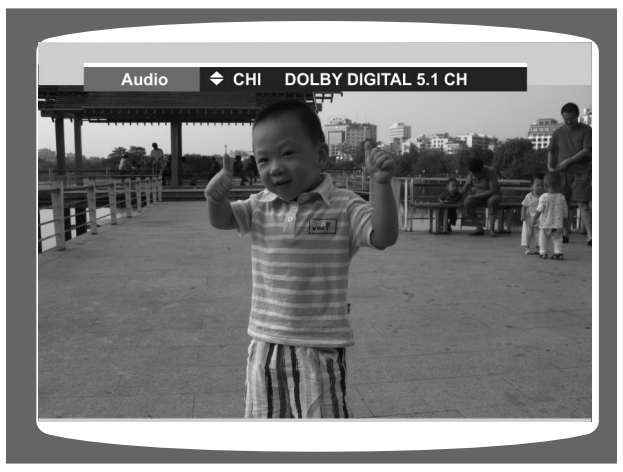

Audio ◆ CHI DOLBY DIGITAL 5.1 CH

➔

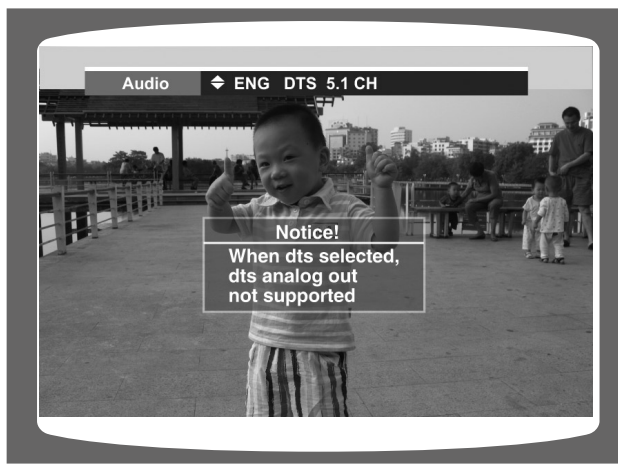

Audio ◆ ENG DTS 5.1 CH

Notice!
When dts selected, dts analog out not supported

# Moving Directly to a Scene /Song

## Moving to a Title DVD DIVX

1. Press **INFO** button.
2. Press Cursor ▲ ,▼ buttons to select the **Title**.
3. Press Cursor ◀,▶ or numeric buttons to select the desired Title and then press **ENTER** button.

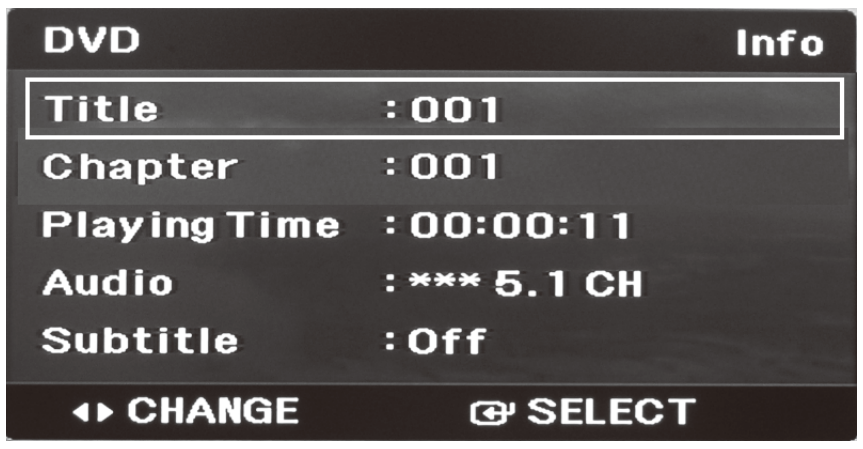

DVD Info
Title : 001
Chapter : 001
Playing Time : 00:00:11
Audio : *** 5.1 CH
Subtitle : Off
◂▸ CHANGE ⏎ SELECT

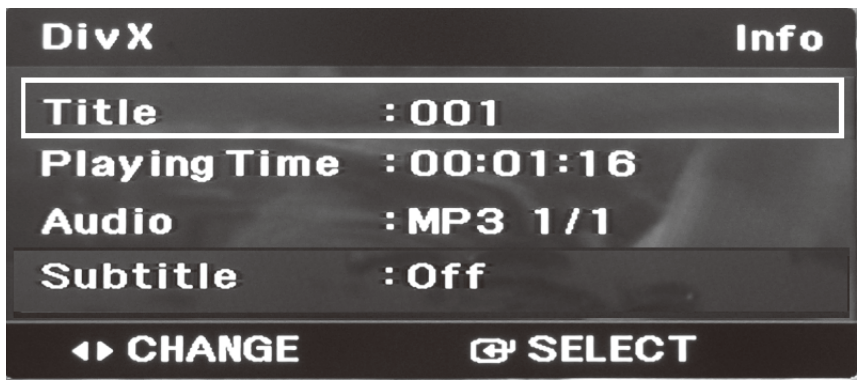

DivX Info
Title : 001
Playing Time : 00:01:16
Audio : MP3 1/1
Subtitle : Off
◂▸ CHANGE ⏎ SELECT

## Moving to a Chapter DVD

1. Press **INFO** button.
2. Press Cursor ▲ ,▼ buttons to select the **Chapter**.
3. Press Cursor ◀,▶ or numeric buttons to select the desired Chapter and then press **ENTER** button.

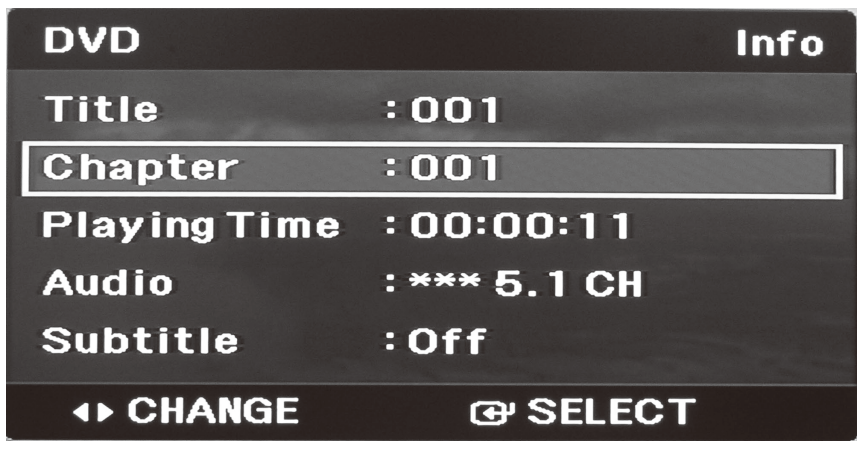

DVD Info
Title : 001
Chapter : 001
Playing Time : 00:00:11
Audio : *** 5.1 CH
Subtitle : Off
◂▸ CHANGE ⏎ SELECT

## Moving to a Time DVD DIVX

1. Press **INFO** button.
2. Press Cursor ▲ ,▼ buttons to select the **Playing Time**.
3. Press numeric buttons to select the desired playing time and then press **ENTER** button.

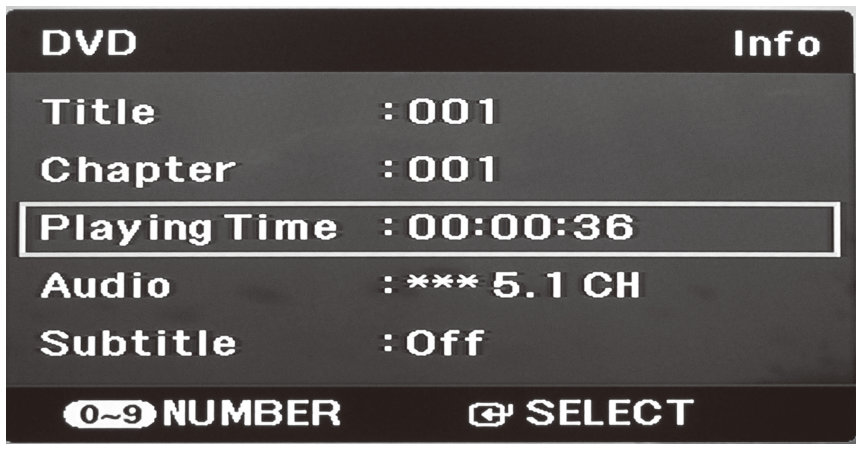

DVD Info
Title : 001
Chapter : 001
Playing Time : 00:00:36
Audio : *** 5.1 CH
Subtitle : Off
0~9 NUMBER ⏎ SELECT

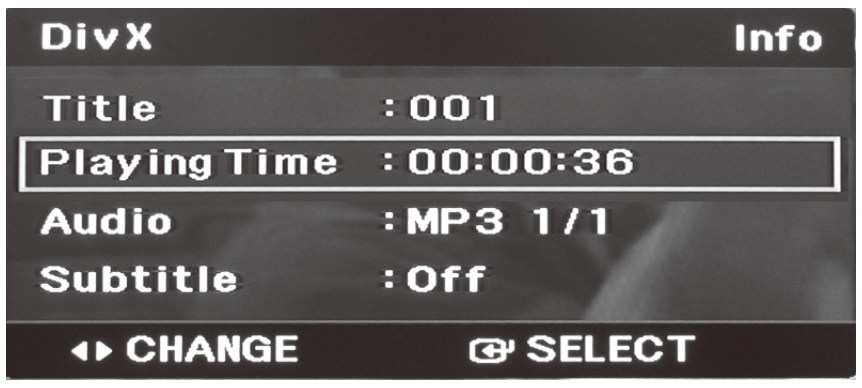

DivX Info
Title : 001
Playing Time : 00:00:36
Audio : MP3 1/1
Subtitle : Off
◂▸ CHANGE ⏎ SELECT

**Note**

- You can press ⏮,⏭ on the remote control to move directly to the desired chapter.
- Depending on the disc, you may not be able to move to the selected title or time.

# Using Disc Menu

You can use the menus for the audio language, subtitle language, profile, etc.
DVD menu contents differ from disc to disc.

DVD

**1** In stop mode, press **MENU** button.

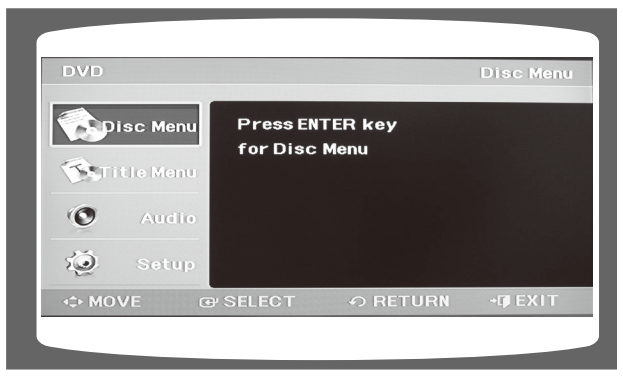
DVD
Disc Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key for Disc Menu

**2** Press Cursor ▲, ▼buttons to move to 'DISC MENU' and then press **ENTER** button.

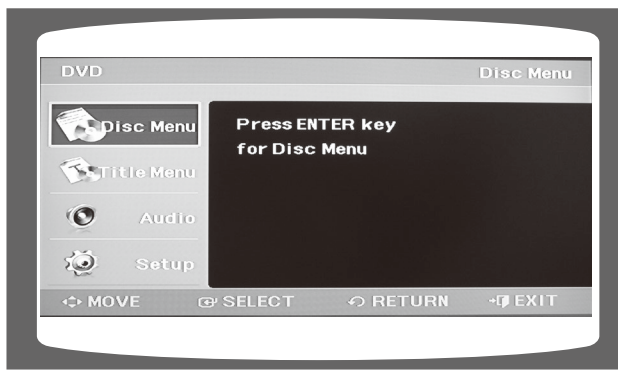
DVD
Disc Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key for Disc Menu

**3** Press Cursor ▲, ▼ buttons to select the desired item and then press **ENTER** button.

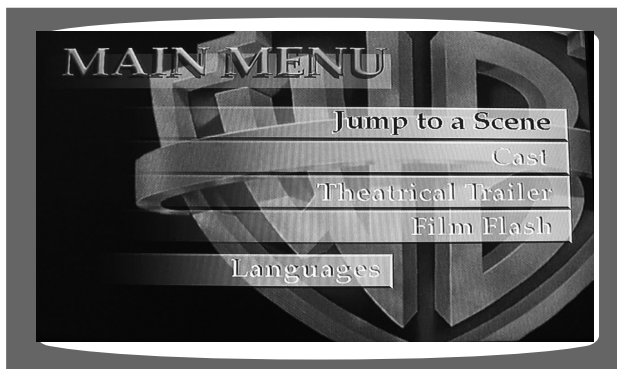
MAIN MENU
Jump to a Scene
Cast
Theatrical Trailer
Film Flash
Languages

**4** Press Cursor ▲, ▼ ◀ , ▶ buttons to select the desired item and then press **ENTER** button.

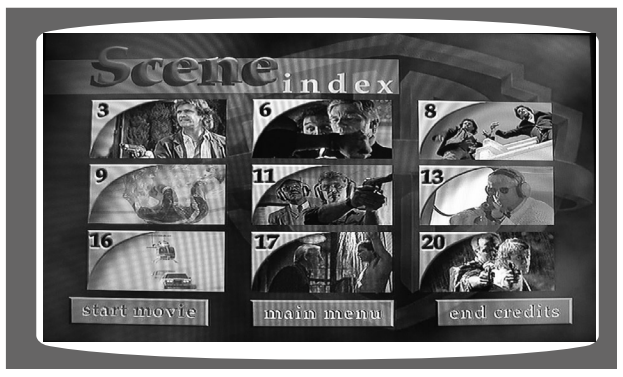
Scene index
3
6
8
9
11
13
16
17
20
start movie
main menu
end credits

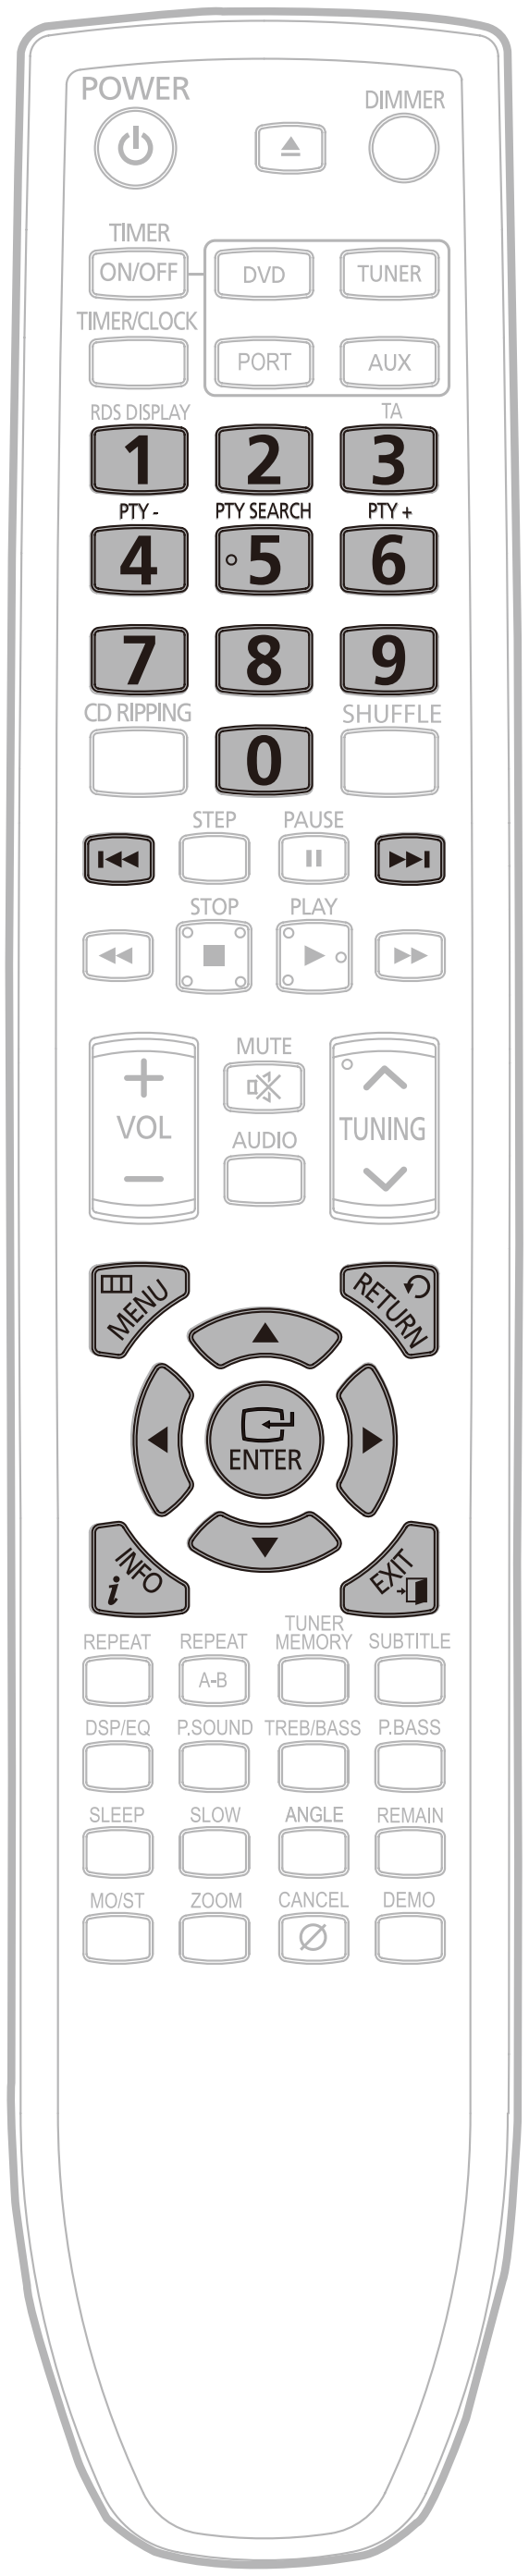
POWER
DIMMER
TIMER ON/OFF
TIMER/CLOCK
DVD
TUNER
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
0
SHUFFLE
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Press **EXIT** button to exit the setup screen.

# Using the Title Menu

For DVDs containing multiple titles, you can view the title of each movie.
Depending on the disc, this function may either not work at all or may work differently.

DVD

1 In stop mode, press **MENU** button.

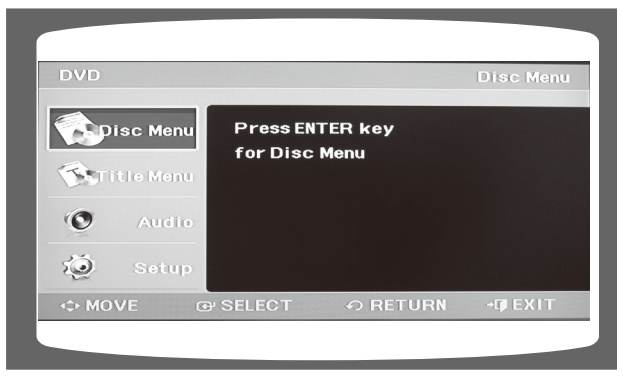
DVD
Disc Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key for Disc Menu

2 Press Cursor ▲, ▼ button to move to 'Title Menu' and then press **ENTER** button.

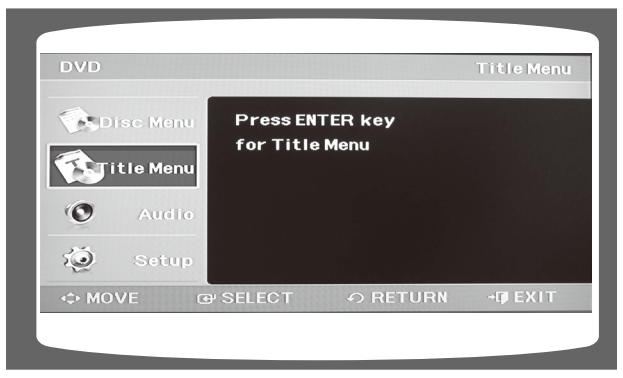
DVD
Title Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key for Title Menu

3 Press Cursor ▲, ▼ buttons to select the desired item and then press **ENTER** button.

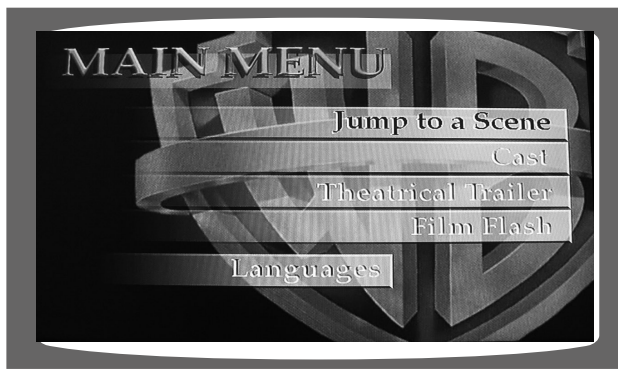
MAIN MENU
Jump to a Scene
Cast
Theatrical Trailer
Film Flash
Languages

4 Press Cursor ▲, ▼ ◀ , ▶ buttons to select the desired item and then press **ENTER** button.

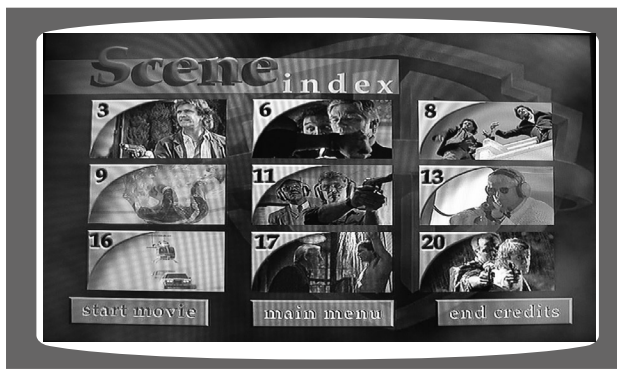
Scene index
3
6
8
9
11
13
16
17
20
start movie
main menu
end credits

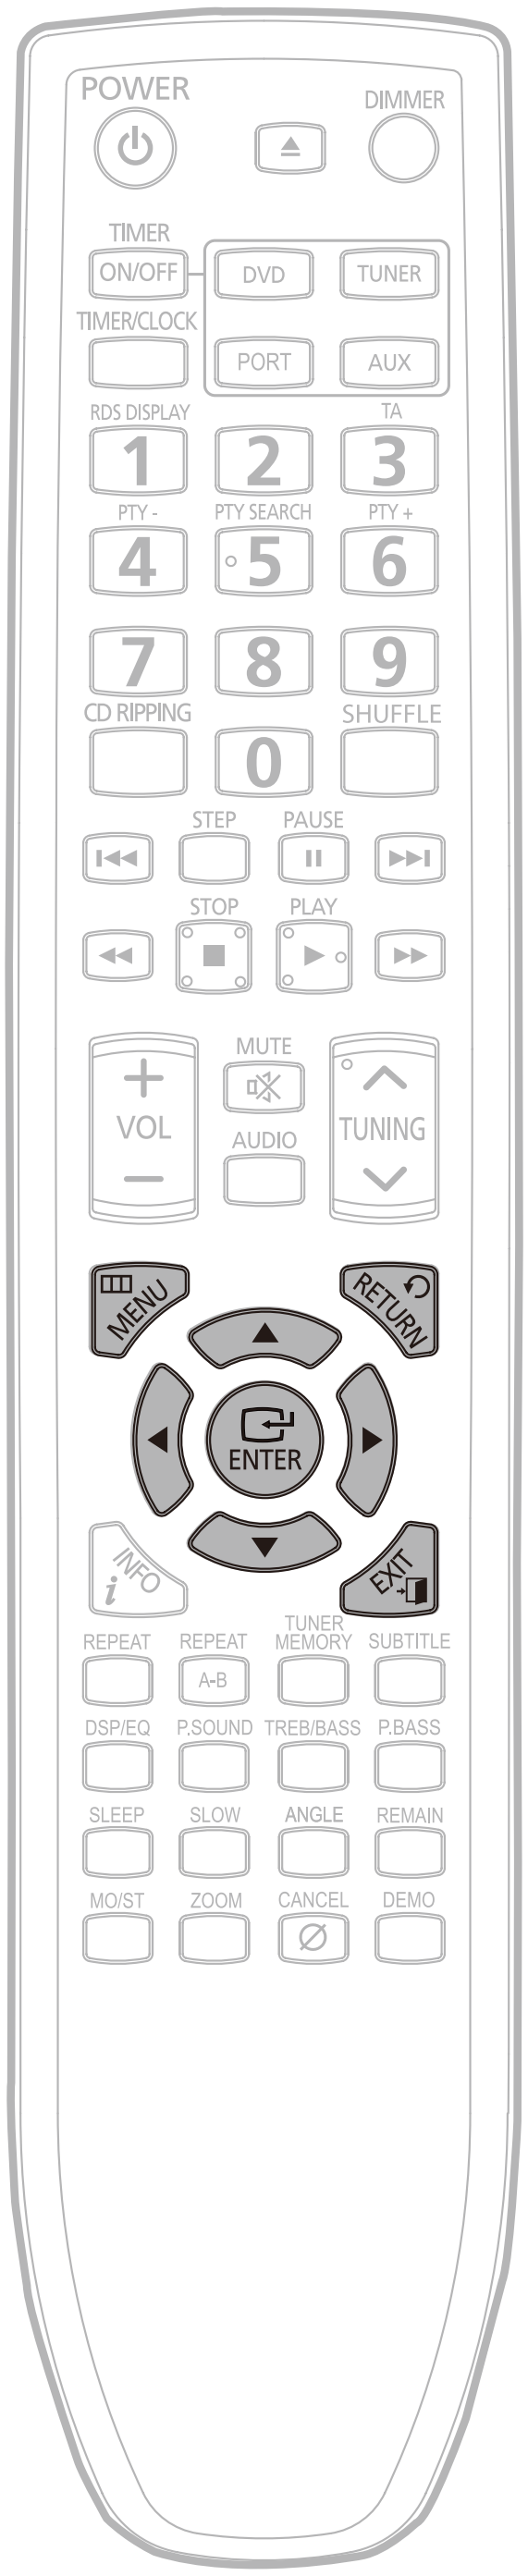
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
0
SHUFFLE
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

Press **MENU** button to exit the setup screen.

Press **EXIT** button to exit the setup screen.

# Setting the Language

OSD language is set to English by default.

**1** In stop mode, press **MENU** button.

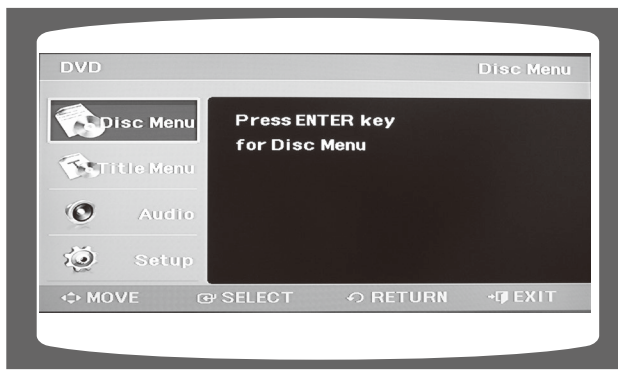
DVD
Disc Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key for Disc Menu

**2** Press Cursor ▲,▼ button to move to 'Setup' and then press **ENTER** button.

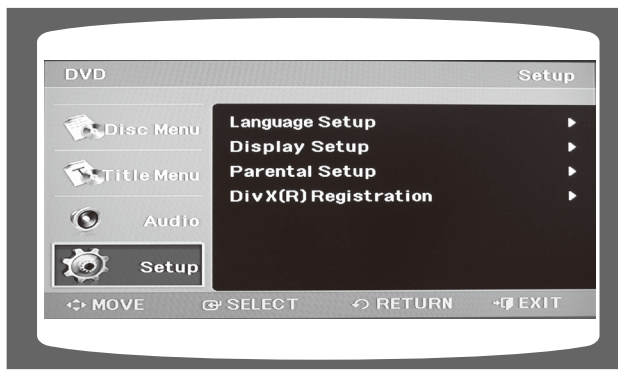
DVD
Setup
Disc Menu
Title Menu
Audio
Setup
Language Setup
Display Setup
Parental Setup
DivX(R) Registration
MOVE
SELECT
RETURN
EXIT

**3** Press Cursor ▲,▼ button to select the 'Language Setup' and then press **ENTER** button.

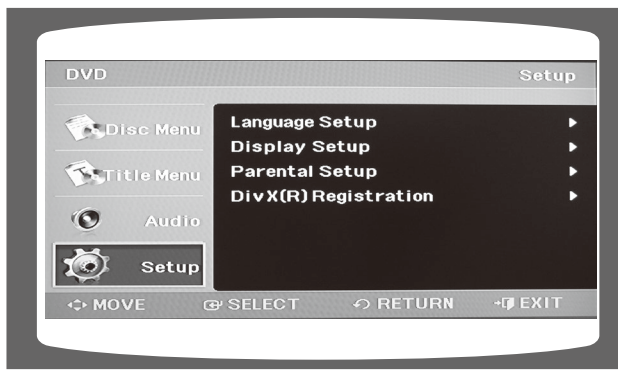
DVD
Setup
Disc Menu
Title Menu
Audio
Setup
Language Setup
Display Setup
Parental Setup
DivX(R) Registration
MOVE
SELECT
RETURN
EXIT

**4** Press Cursor ▲,▼ button to select the desired language and then press **ENTER** button.

- Once the setup is complete, if the language was set to English, OSD will be displayed in English.

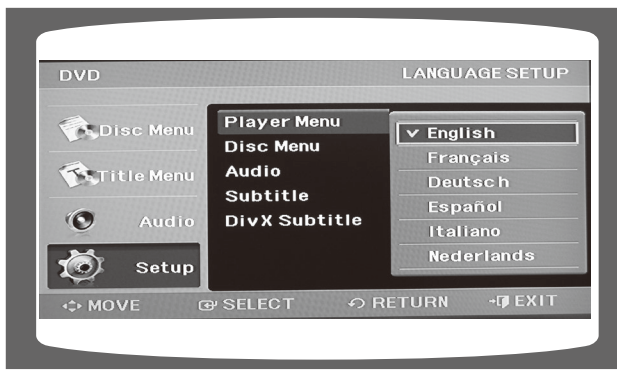
DVD
LANGUAGE SETUP
Player Menu
Disc Menu
Audio
Subtitle
DivX Subtitle
English
Français
Deutsch
Español
Italiano
Nederlands

Selecting the
Player Menu Language

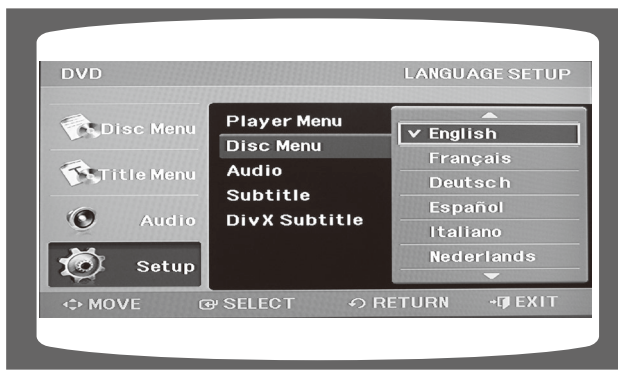
DVD
LANGUAGE SETUP
Player Menu
Disc Menu
Audio
Subtitle
DivX Subtitle
English
Français
Deutsch
Español
Italiano
Nederlands

Selecting the
Disc Menu Language
(recorded on the disc)

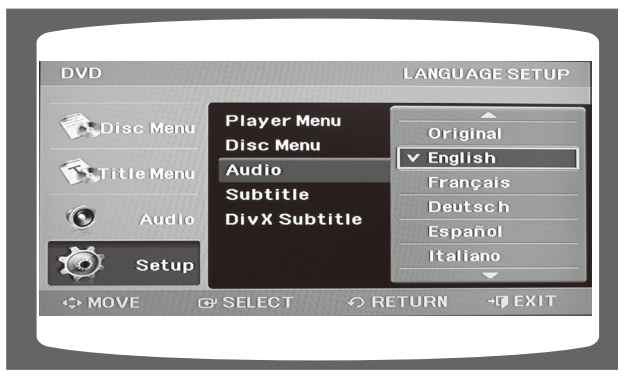
DVD
LANGUAGE SETUP
Player Menu
Disc Menu
Audio
Subtitle
DivX Subtitle
Original
English
Français
Deutsch
Español
Italiano

Selecting the
Audio Language
(recorded on the disc)

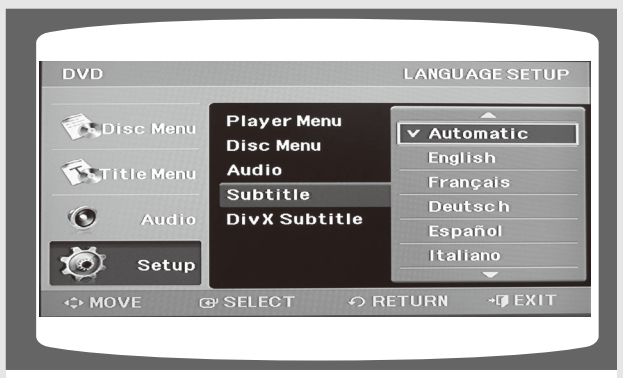
DVD
LANGUAGE SETUP
Player Menu
Disc Menu
Audio
Subtitle
DivX Subtitle
Automatic
English
Français
Deutsch
Español
Italiano

**Selecting the Subtitle Language
(recorded on the disc)**

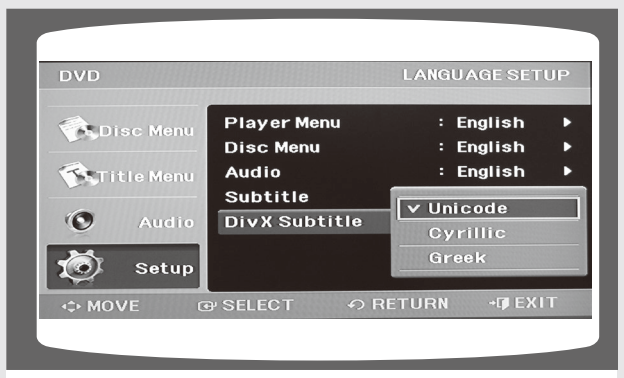
DVD
LANGUAGE SETUP
Player Menu : English
Disc Menu : English
Audio : English
Subtitle
DivX Subtitle
Unicode
Cyrillic
Greek

**Selecting the DivX Subtitle
Language (recorded on the disc)**

* If the language you selected is not recorded on the disc, menu language will not change even if you set it to your desired language.

Press **MENU** or **EXIT** button to exit the setup screen.

Press **RETURN** button to return to the previous level.

# Setting TV Screen type

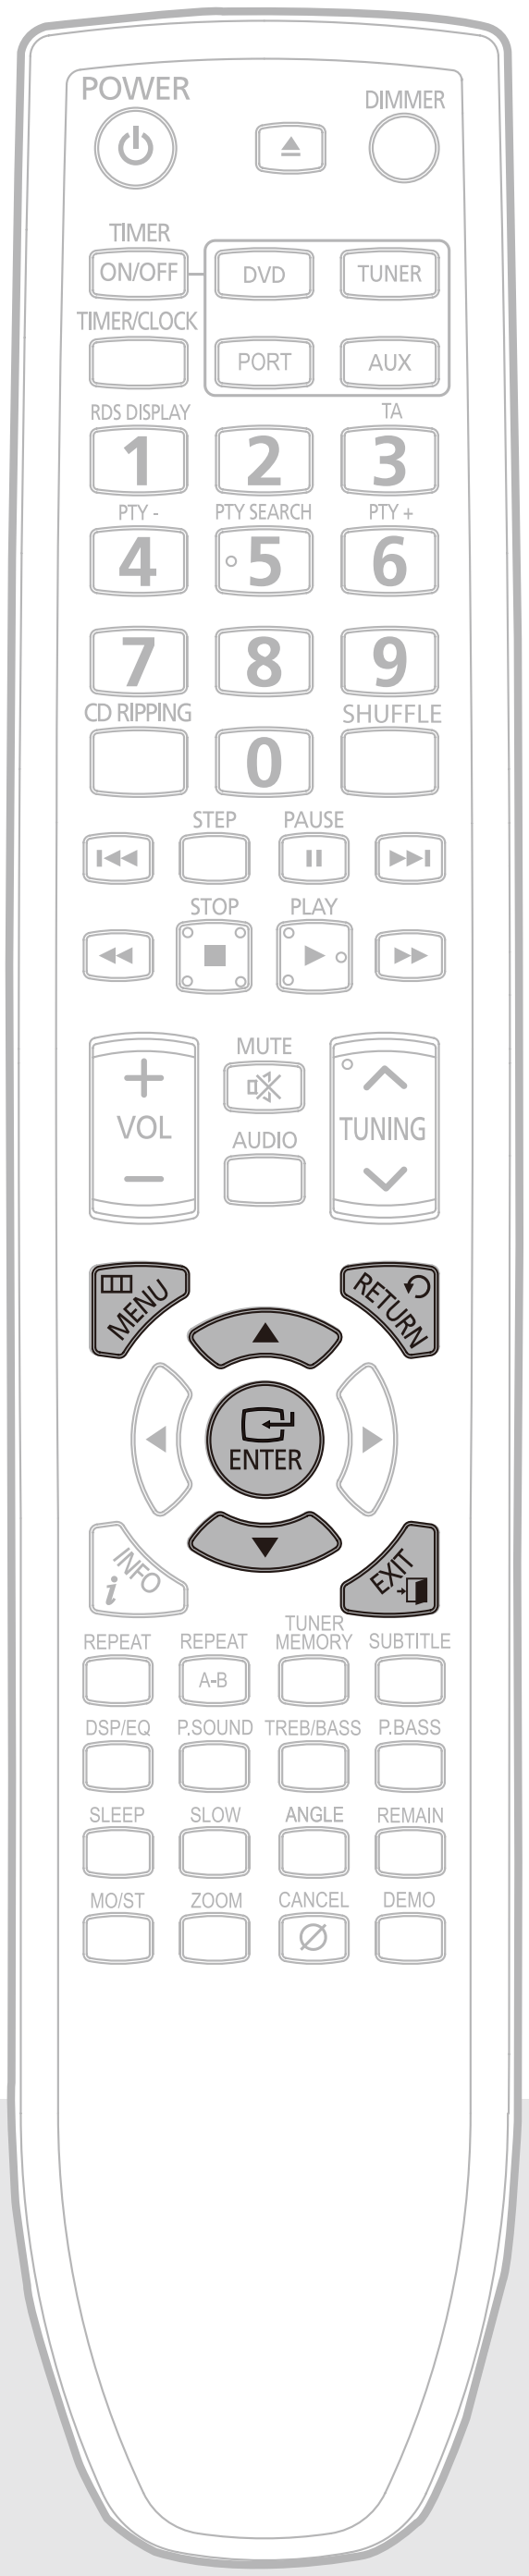
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
0
SHUFFLE
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

**1** In stop mode, press **MENU** button.

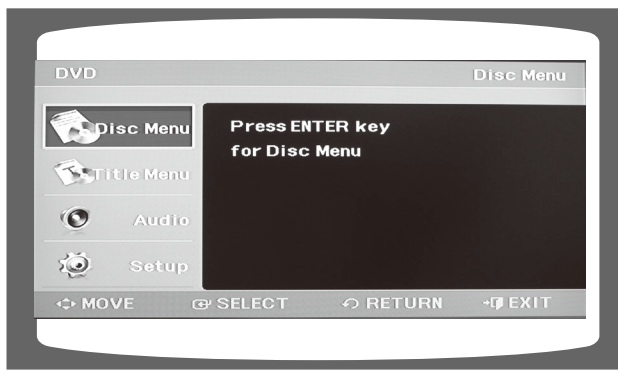
DVD
Disc Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key for Disc Menu

**2** Press Cursor ▲ ▼ button to move to ‘Setup’ and then press **ENTER** button.

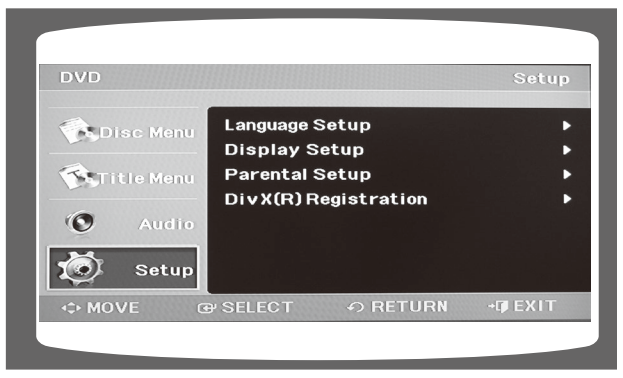
DVD
Setup
Disc Menu
Title Menu
Audio
Setup
Language Setup
Display Setup
Parental Setup
DivX(R) Registration
MOVE
SELECT
RETURN
EXIT

**3** Press Cursor ▲ ,▼ button to move to ‘Display Setup’ and then press **ENTER** button.

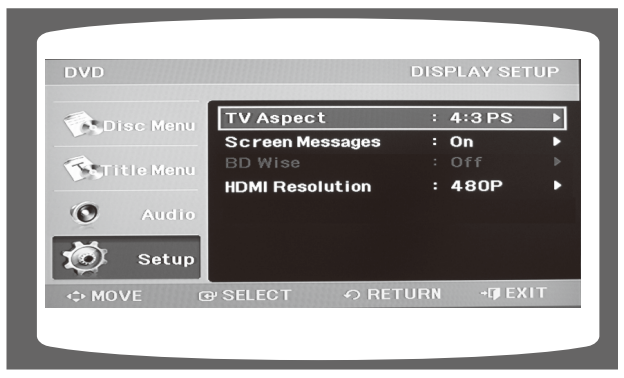
DVD
DISPLAY SETUP
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

TV Aspect : 4:3 PS
Screen Messages : On
BD Wise : Off
HDMI Resolution : 480P

**4** Press Cursor ▲,▼ button to 'Tv Aspect' and then press **ENTER** button.

- You can select '4:3 Letter Box', '4:3 Pan&Scan' or '16:9 Wide' mode for your TV.

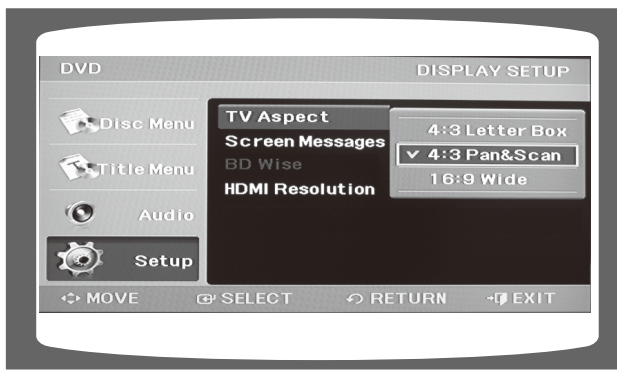
DVD
DISPLAY SETUP
Disc Menu
Title Menu
Audio
Setup
TV Aspect
Screen Messages
BD Wise
HDMI Resolution
4:3 Letter Box
✓ 4:3 Pan&Scan
16:9 Wide
MOVE
SELECT
RETURN
EXIT

**5** Press Cursor ▲ ,▼ button to move to ‘Screen Messages’ and then press **ENTER** button.

- You can select 'On' or 'Off'.
  On: you can see the screen messages.
  Off: you can't see the screen messages.

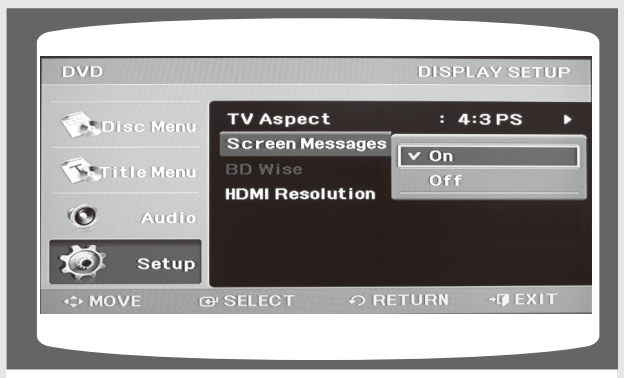
DVD
DISPLAY SETUP
Disc Menu
Title Menu
Audio
Setup
TV Aspect : 4:3 PS
Screen Messages
BD Wise
HDMI Resolution
✓ On
Off
MOVE
SELECT
RETURN
EXIT

## Adjusting the TV Aspect Ratio (Screen Size)

The horizontal to vertical screen size ratio of conventional TVs is 4:3, while that of wide screen and high definition TVs is 16:9. This ratio is called the aspect ratio. When playing DVDs recorded in different screen size, you should adjust the aspect ratio to fit your TV or monitor.

✱ For a standard TV, select either "4:3LB" or "4:3PS" option according to personal preference. Select "16:9" if you have a wide screen TV.

**16:9 Wide**

: Select this to view a 16:9 picture in the full-screen mode on your wide screen TV.
- You can enjoy the wide screen aspect.

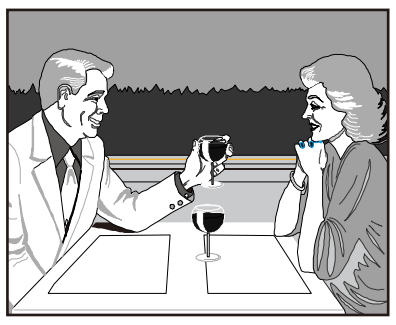

**4:3LB**
**(4:3 Letter box)**

: Select this to play a 16:9 picture in the letter box mode on a conventional TV.
- Black bars will appear at the top and bottom of the screen.

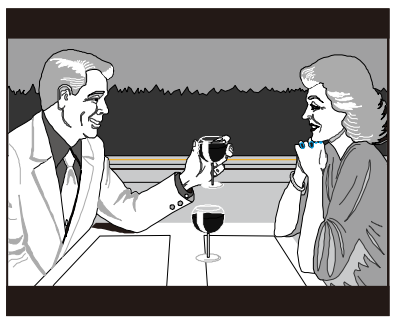

**4:3PS**
**(4:3 Pan&Scan)**

: Select this to play a 16:9 picture in the pan & scan mode on a conventional TV.
- You can see the central portion of the screen only (with the sides of the 16:9 picture cut off).

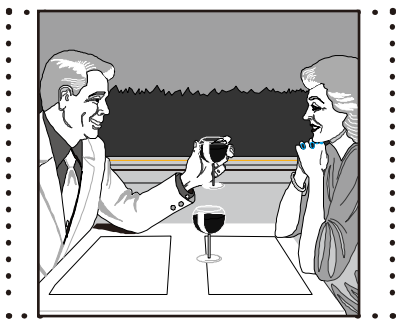

**Note**
- Since DVD discs are recorded in various image formats, they will look different depending on the software, the type of TV, and the TV aspect ratio setting.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Press **EXIT** button to exit the setup screen.

# Setting Parental Controls (Rating Level)

Use this to restrict playback of adult or violent DVDs you do not want children to view.

1 In stop mode, press **MENU** button.

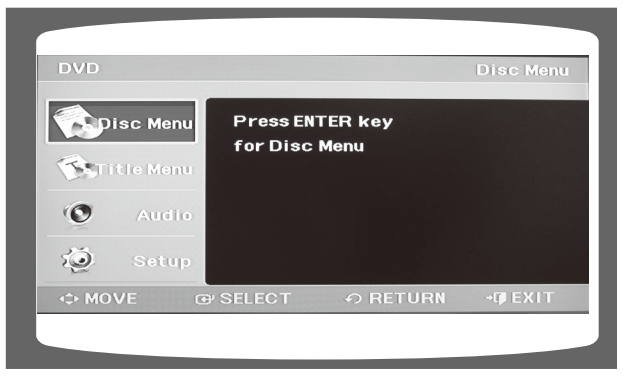
DVD
Disc Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key
for Disc Menu

2 Press Cursor ▲ ▼ button to move to 'Setup' and then press **ENTER** button.

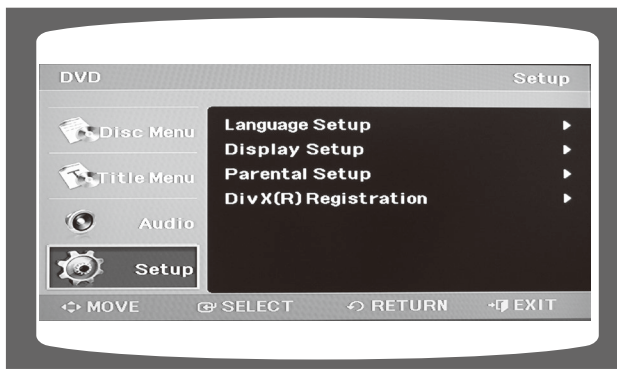
DVD
Setup
Disc Menu
Title Menu
Audio
Setup
Language Setup ▶
Display Setup ▶
Parental Setup ▶
DivX(R) Registration ▶
MOVE
SELECT
RETURN
EXIT

3 Press Cursor ▼ button to move to 'Parental Setup' and then press **ENTER** button.

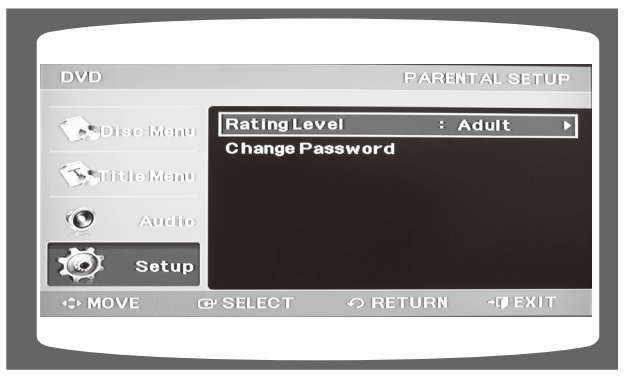
DVD
PARENTAL SETUP
Disc Menu
Title Menu
Audio
Setup
Change Password
MOVE
SELECT
RETURN
EXIT

Rating Level : Adult ▶

4 Press Cursor ▲, ▼ button to select the 'Rating Level' and then press **ENTER** button.

- If you have selected Level 6, you cannot view DVDs with Level 7 or higher.
- The higher the level, the closer the content is to violent or adult material.

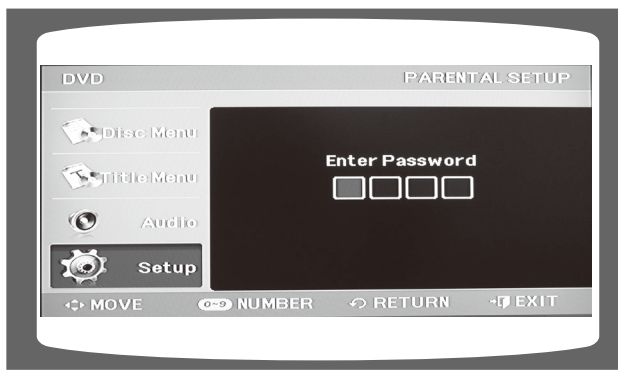
DVD
PARENTAL SETUP
Disc Menu
Title Menu
Audio
Setup
MOVE
0~9 NUMBER
RETURN
EXIT

Enter Password

5 Enter the password and then press **ENTER** button.

- The password is set to "7890" by default.
- Once the setup is complete, you will be taken to the previous screen.

**Note**

- This function works only if a DVD disc contains the rating level information.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Press **EXIT** button to exit the setup screen.

# Setting the Password

You can set the password for the Parental (rating level) setting.

1 In stop mode, press **MENU** button.

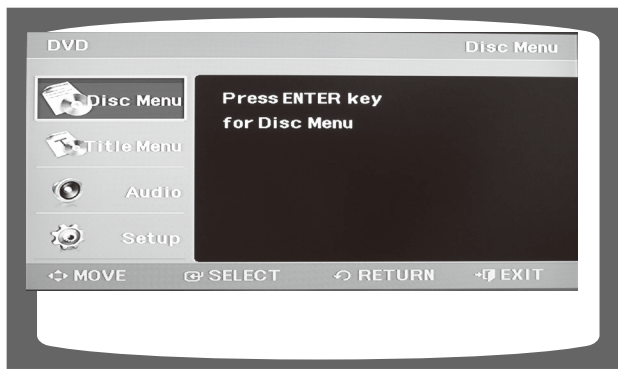
DVD
Disc Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key
for Disc Menu

2 Press Cursor ▲ ▼ button to move to ‘Setup’ and then press **ENTER** button.

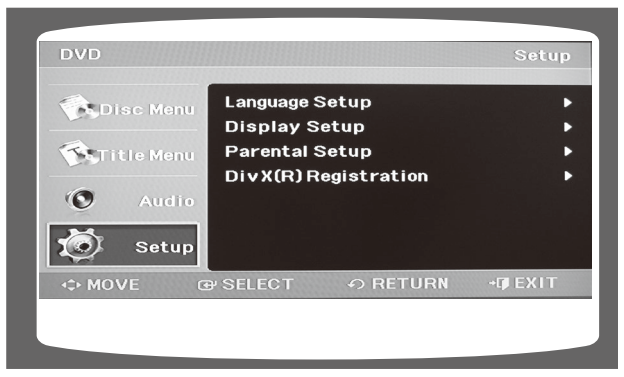
DVD
Setup
Disc Menu
Title Menu
Audio
Setup
Language Setup
Display Setup
Parental Setup
DivX(R) Registration
MOVE
SELECT
RETURN
EXIT

3 Press Cursor ▼ button to move to ‘Parental Setup’ and then press **ENTER** button.

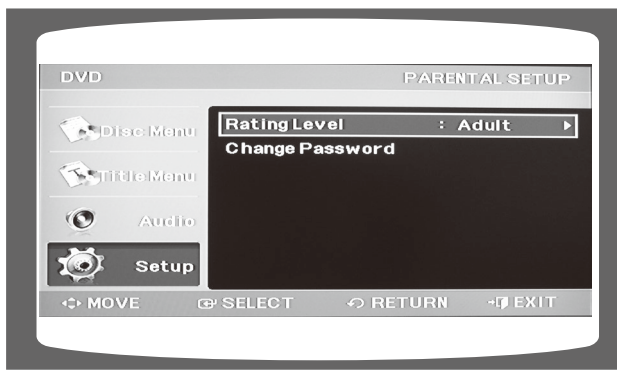
DVD
PARENTAL SETUP
Disc Menu
Title Menu
Audio
Setup
Change Password
MOVE
SELECT
RETURN
EXIT

Rating Level : Adult

4 Press Cursor ▲,▼ button to select the 'Change Password' and then press **ENTER** button.

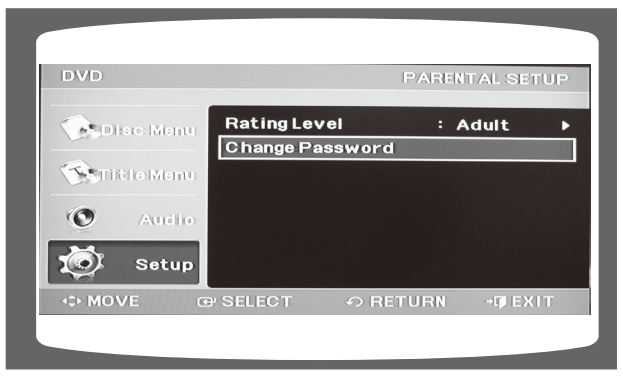
DVD
PARENTAL SETUP
Disc Menu
Title Menu
Audio
Setup
Change Password
MOVE
SELECT
RETURN
EXIT

Rating Level : Adult

5 Enter the password and then press **ENTER** button.

- Enter the old password, a new password.
- The setting is complete.

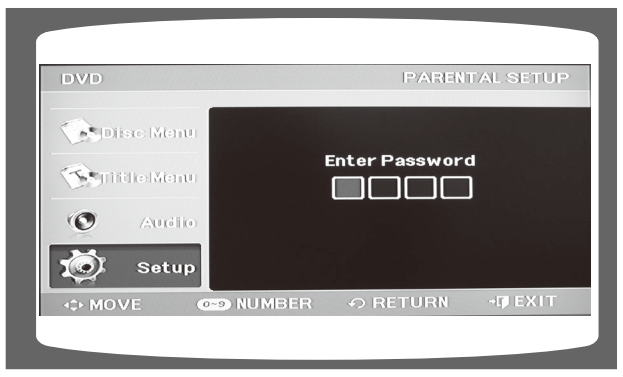
DVD
PARENTAL SETUP
Disc Menu
Title Menu
Audio
Setup
MOVE
NUMBER
RETURN
EXIT

Enter Password
□□□□

Press **RETURN** button to return to the previous level.

Press **CANCEL** button to cancel the error numeric when you inputting password.

Press **MENU** button to exit the setup screen.

# Setting the DRC (Dynamic Range Compression)

You can use this function to enjoy Dolby Digital sound when watching movies at low volume at night.

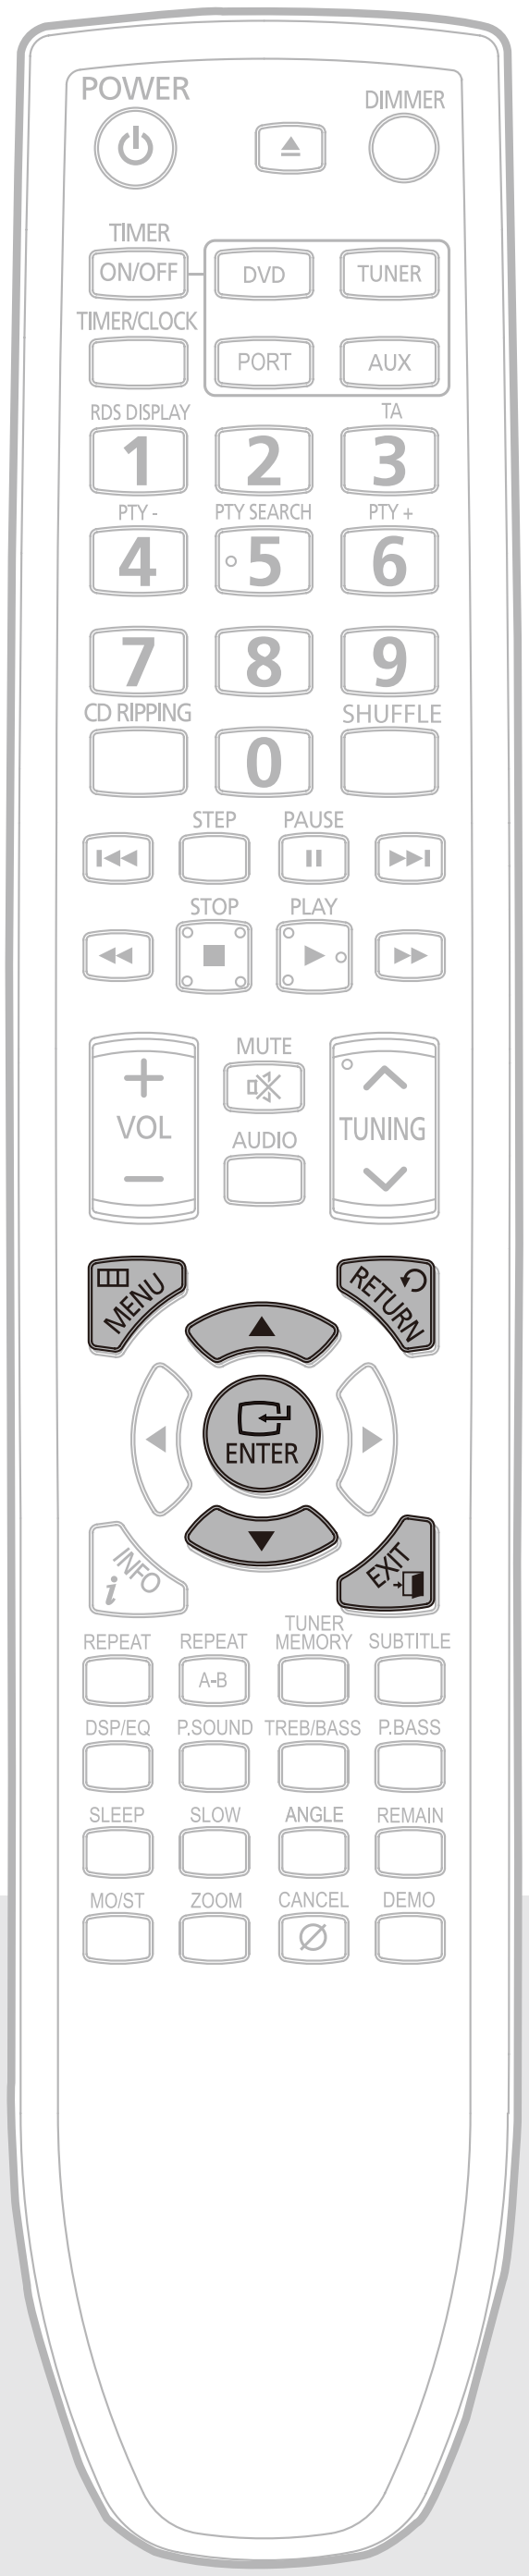
POWER
DIMMER
TIMER ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
SHUFFLE
0
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

**1** In stop mode, press **MENU** button.

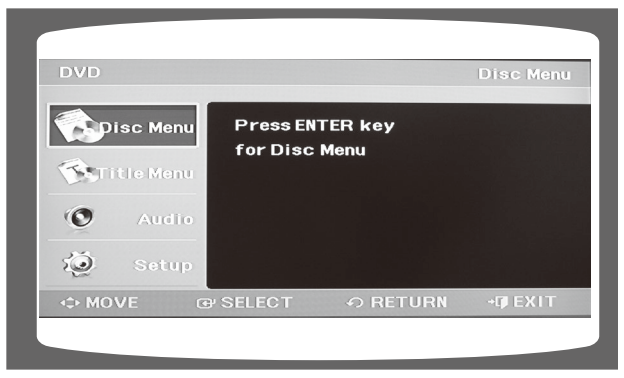
DVD
Disc Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key for Disc Menu

**2** Press Cursor ▲▼ button to move to 'Audio' and then press **ENTER** button.

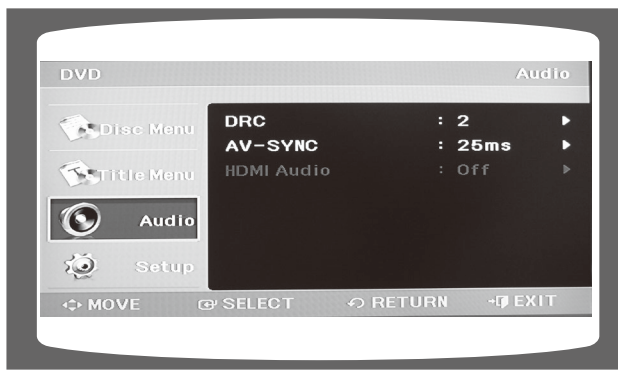
DVD
Audio
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

DRC : 2
AV-SYNC : 25ms
HDMI Audio : Off

**3** Press Cursor ▲,▼ button to select the 'DRC' and then press **ENTER** button.

**4** Press Cursor ▲,▼ to adjust the 'DRC'.

- You can set the DRC between 0 and 8. Set it to the optimal status.

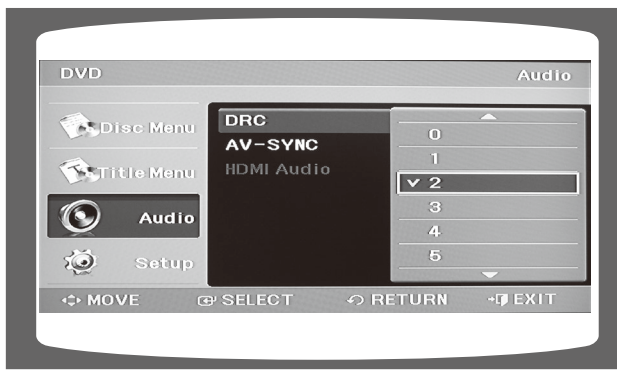
DVD
Audio
Disc Menu
Title Menu
Audio
Setup
DRC
AV-SYNC
HDMI Audio
0
1
✓ 2
3
4
5
MOVE
SELECT
RETURN
EXIT

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Press **EXIT** button to exit the setup screen.

# AV SYNC Setup

Video may look slower than the audio if it is connected with digital TV.
In this case, adjust the delay time of audio to optimal status to fit the video.

**1** In stop mode, press **MENU** button.

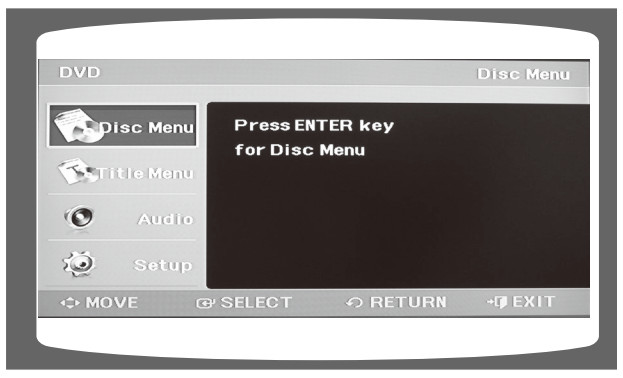
DVD
Disc Menu
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

Press ENTER key
for Disc Menu

**2** Press Cursor ▲ , ▼ buttons to move to ‘Audio’ and then press **ENTER** button.

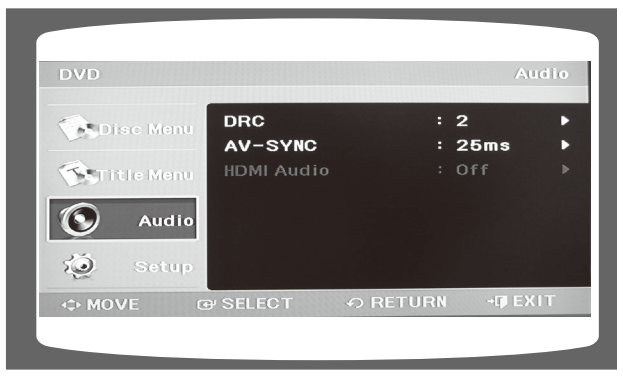
DVD
Audio
Disc Menu
Title Menu
Audio
Setup
MOVE
SELECT
RETURN
EXIT

DRC : 2
AV-SYNC : 25ms
HDMI Audio : Off

**3** Press Cursor ▲ , ▼ buttons to move to ‘AV-SYNC’ and then press **ENTER** button.

**4** Press Cursor ▲ , ▼ buttons to select the Delay Time of AV-SYNC and then press the **ENTER** button.

- You can set the audio delay time between 0 ms and 300 ms. Set it to the optimal status.

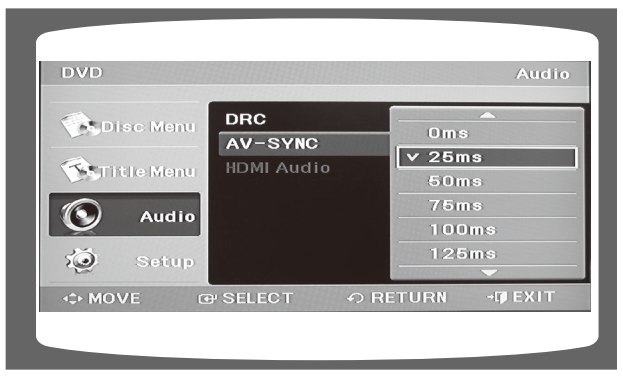
DVD
Audio
Disc Menu
Title Menu
Audio
Setup
DRC
AV-SYNC
HDMI Audio
MOVE
SELECT
RETURN
EXIT

0ms
✓ 25ms
50ms
75ms
100ms
125ms

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Press **EXIT** button to exit the setup screen.

# About RDS broadcasting

## Using the RDS (Radio Data System) to receive FM stations

*RDS allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast, such as sports or music, etc.*

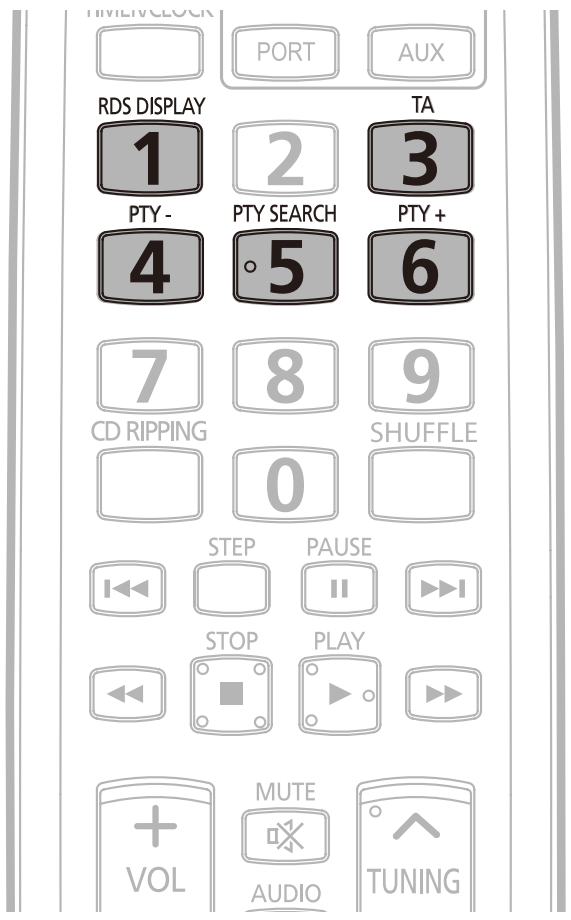

**When tuned to an FM station which provides the RDS service,the RDS indicator lights up on the display.**

**Description on RDS function**

- PTY (Program Type) : Displays the type of programme currently being broadcast
- PS NAME (Program Service Name) : Indicates the name of broadcasting station and is composed of 8 characters.
- RT (Radio Text) : Decodes the text broadcast by a station (if any) and is composed of maximum 64 characters.
- CT (Clock Time) : Decodes the real time clock from the FM frequency. Some stations may not transmit PTY, RT or CT information therefore this may not be displayed in all cases.
- TA (Traffic Announcement) : When this symbol flashes it shows that the traffic announcement is in progress.

- RDS may not operate correctly if the station tuned is not transmitting RDS signal properly or if the signal strength is weak.

## TO show the RDS signals

*You can see the RDS signals the station sends on the display.*

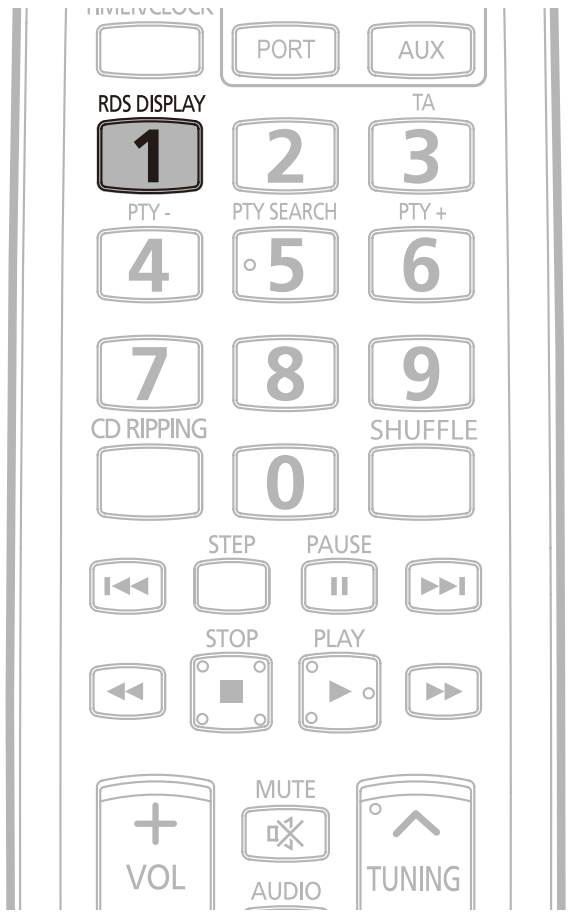

Press the **RDS DISPLAY** button while listening to an FM station.

- Each time you press the button, the display change to show you the following information:

PS NAME → RT → CT → Frequency

- PS (Program Service) : While searching, "PS" appears and then the station names will be displayed. "NO PS" appears if no signal is sent.
- RT(RadioText) : while searching, "RT" appears and then text messages the station sends will be displayed. "NO RT" appears if no signal is sent.
- Frequency : station frequency (non-RDS service)

### About characters shown in the display

When the display shows PS,or RT signals,the following characters are used.

- The display window cannot differentiate upper case and lower case letters and always uses upper case letters.
- The display window cannot show accented letters, “A,” for instance, may stands for accented “A’s” like “À, Â, Ä, Á, Å and Ã.”

- If searching finishes at once, “PS”, and “RT” will not appear on the display.

## PTY (Program Type) indication and PTY-SEARCH function

*One of the advantages of the RDS service is that you can locate a particular kind of program from the preset channels by specifying the PTY codes.*

### To search for a program using the PTY codes

**Before you start, remember...**

- The PTY Search is only applicable to preset stations.

- To stop searching any time during the process, press STOP while searching.
- There is a time limit in doing the following steps. If the setting is cancelled before you finish, start from step 1 again.

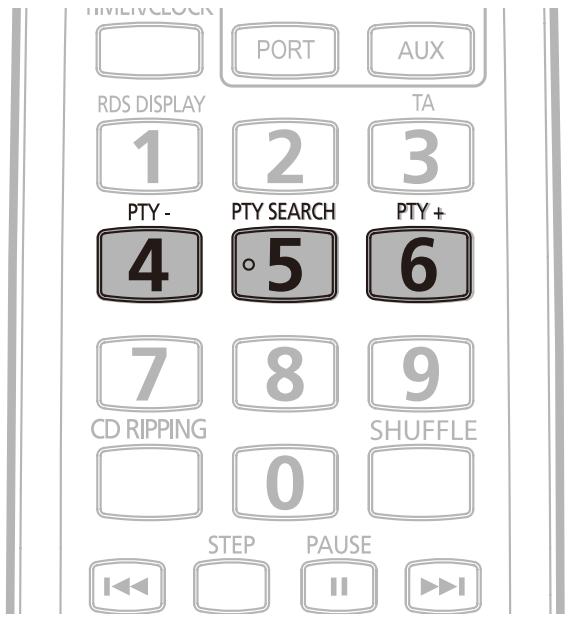

1 Press the PTY SEARCH while listening to an FM station.

2 Press the PTY- or PTY+ until the PTY code you want appears on the display.
- The display gives you the PTY codes described to the right.

3 Press the PTY SEARCH again, while the PTY code selected in the auto Frequency is still on the display.
- If search the same "PTY" , it will stop. If there is no the same "PTY", it will search a round then stop at the beginning.

| Display | Program Type |
|---|---|
| **NEWS** | News including an announced opinion and report |
| **AFFAIRS** | Several matters including a current incident, documentary, discussion and analysis. |
| **INFO** | Information including weights and measures, returns and forecast, matters interesting the customer, medical information, etc. |
| **SPORT** | Sports |
| **EDUCATE** | Education |
| **DRAMA** | Drama-Radio serial, etc. |
| **CULTURE** | Culture-National or local culture including the religious problem, social science, language, theater,etc. |
| **SCIENCE** | Natural science and technology |
| **VARIED** | Others-Speech, amusing program (quiz, game), interview, comedy and satirical play, etc. |
| **POP M** | Pop music |
| **ROCK M** | Rock music |
| **M.O.R.M** | Current contemporary music considered to be "easy listening." |
| **LIGHT M** | Light classical music- Classical music and instrumental and chorus music |

| Display | Program Type |
|---|---|
| **CLASSICS** | Heavy classical music-Orchestra music, symphony, chamber music and opera |
| **OTHER M** | Other music - Jazz, R&B country music |
| **WEATHER** | Weather |
| **FINANCE** | Finance |
| **CHILDREN** | Children's programmes |
| **SOCIAL A** | Social affairs |
| **RELIGION** | Religion |
| **PHONE IN** | Phone in |
| **TRAVEL** | Travel |
| **LEISURE** | Leisure |
| **JAZZ** | Jazz Music |
| **COUNTRY** | Country Music |
| **NATION M** | National Music |
| **OLDIES** | Oldies Music |
| **FOLK M** | Folk Music |
| **DOCUMENT** | Documentary |

# Listening to Radio

You can listen to the chosen band (FM broadcast stations) by using either the automatic or manual tuning operation.

## Remote Control Unit

**1** Press **TUNER** button.

**2** **Tune into the desired station.**

**Preset Tuning 1** Press the **STOP** (■) button to select PRESET and then press **TUNING** ∧, ∨ button to select the preset station.

**Automatic Tuning 2** Press the **STOP** (■) button to select "**AUTO**" and then press **TUNING** ∧, ∨ button to automatically search the band.

**Manual Tuning** Press **STOP** (■) to select MANUAL and then briefly press **TUNING** ∧, ∨ to tune into a lower or higher frequency.

## Main Unit

**1** Press the **FUNC.** button to select the FM band.

**2** Select a broadcast station.

**Preset Tuning 1** Press the **STOP** (■) button to select PRESET and then press ⏮, ⏭ button to select the preset station.

**Automatic Tuning 2** Press the **STOP** (■) button to select "**AUTO**" and then press ⏮, ⏭ button to automatically search the band.

**Manual Tuning** Press **STOP** (■) to select MANUAL and then briefly press ⏮, ⏭ to tune into a lower or higher frequency.

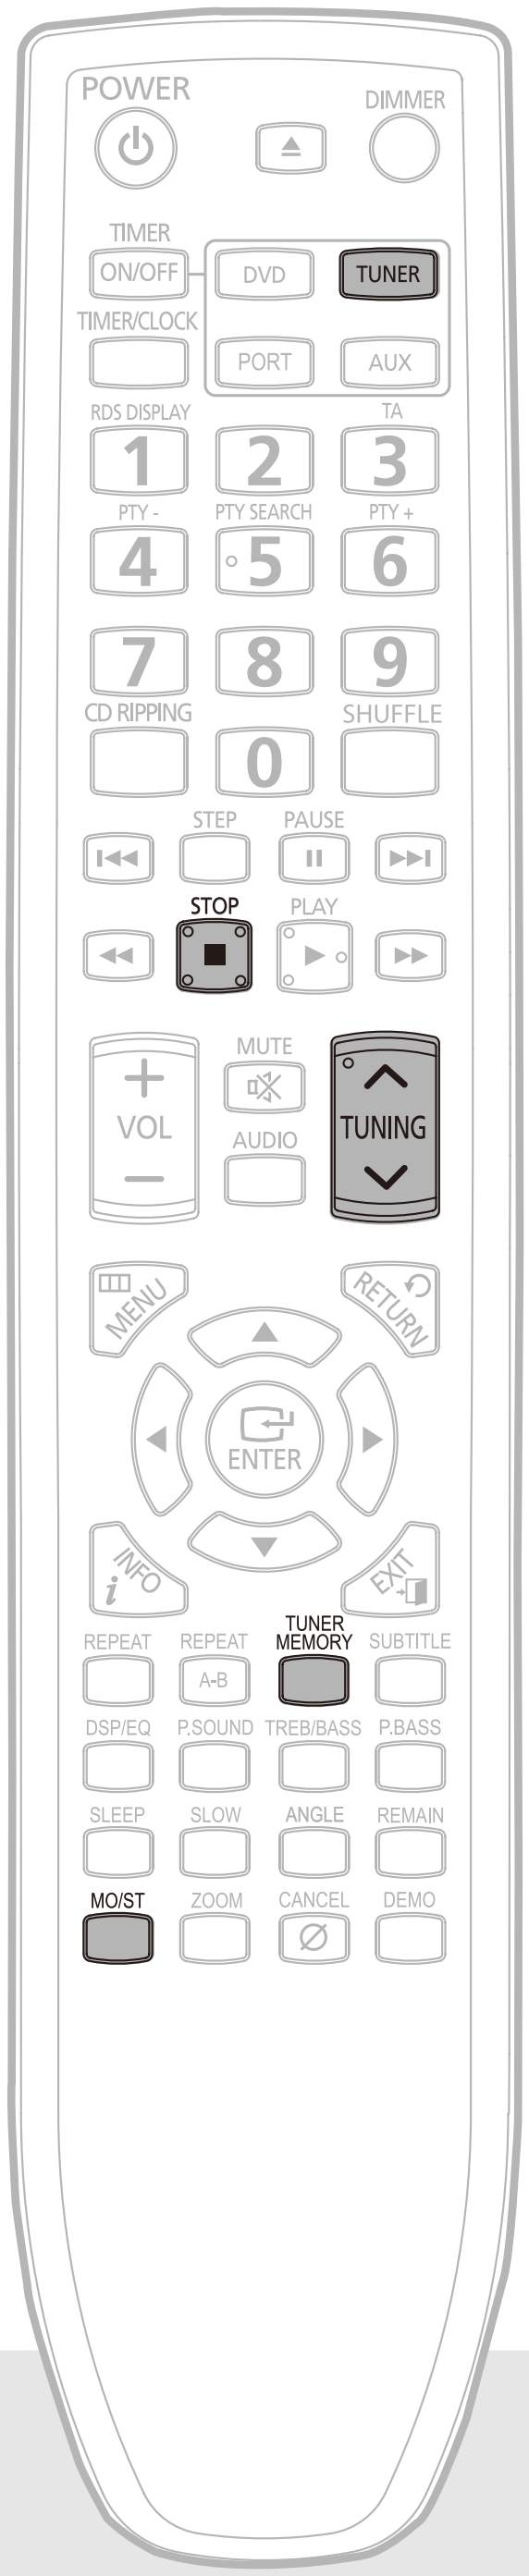
POWER
DIMMER
TIMER
ON/OFF
TIMER/CLOCK
DVD
TUNER
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
0
SHUFFLE
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

Press **MO/ST** button to listen in Mono/Stereo.
(This applies only when listening to an FM station.)

- Each time the button is pressed, the sound switches between "STEREO" and "MONO".
- In a poor reception area, select MONO for a clear, interference-free broadcast.

# Presetting Stations

**You can store up to:**

- 15 FM stations

**Example: Presetting FM 89.1 in the memory**

## 1

Press the **TUNER** button and select the FM band.

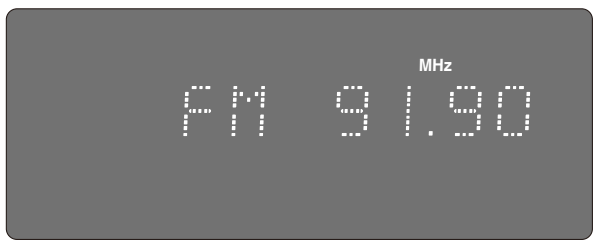

## 2

Press TUNING ∧, ∨ to select "89.10".

- Refer to Step 2 on page 47 to automatically or manually tune in to a station.

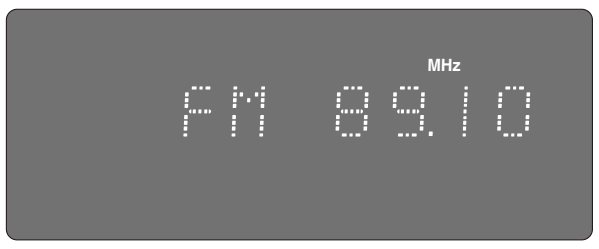

## 3

Press the **TUNER MEMORY** button.

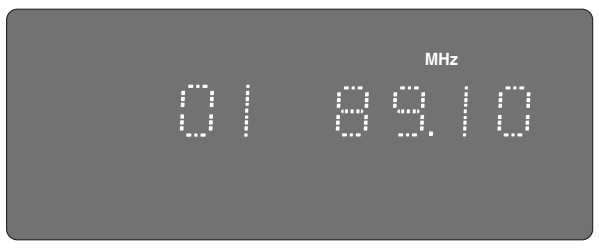

## 4

Press TUNING ∧, ∨ to select preset number.

- You can select between 1 and 15.

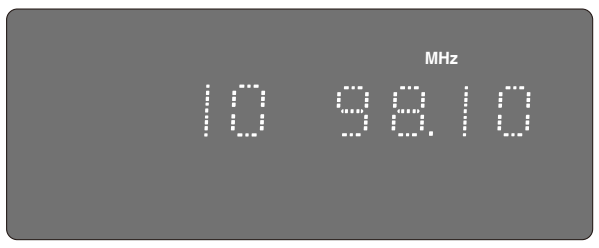

## 5

Press the **TUNER MEMORY** button.

- If you can't press "TUNER MEMORY" in 5 seconds, the preset disappears and "FM" displays.

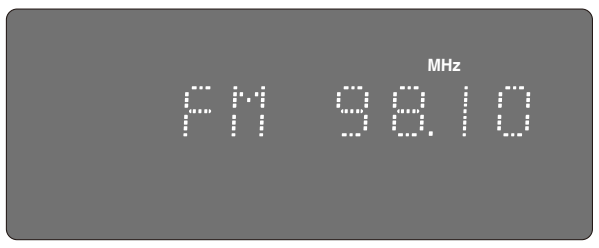

## 6

To preset another station, repeat steps 2 to 5.

# CD RIPPING Function

**You can rip a compact disc as a MP3 file on the USB**
**This feature enables you to ripping with the start of the disc or track of your choice.**

## 1 Switch the system on by pressing **POWER**.

## 2 Connect the USB.

## 3 Load a compact disc(Digital Audio).

- ♦ Press the **OPEN/CLOSE** button to open the CD door.
- ♦ Insert a CD and press the **OPEN/CLOSE** button to close the CD door.
- ♦ Use the CD selection (|◀◀, ▶▶|) buttons to select the desired song.

## 4 Press CD RIPPING button on remote control to starting ripping.

- ◆ If the system is playing state, press this button, “TRACK RIPPING” is displayed and CD RIPPING starts.
- ◆ If the system is playing state, press and hold this button, “FULL CD RIPPING” is displayed and CD RIPPING starts.
- ◆ During CD ripping, do not disconnect USB device.

## 5 To stop ripping, press STOP(■)button.and then automatically create and save as the MP3 file.

After CD-Ripping,a directory named “RIPPING FOLDER” will be created in your device.The file name is same with the disc.

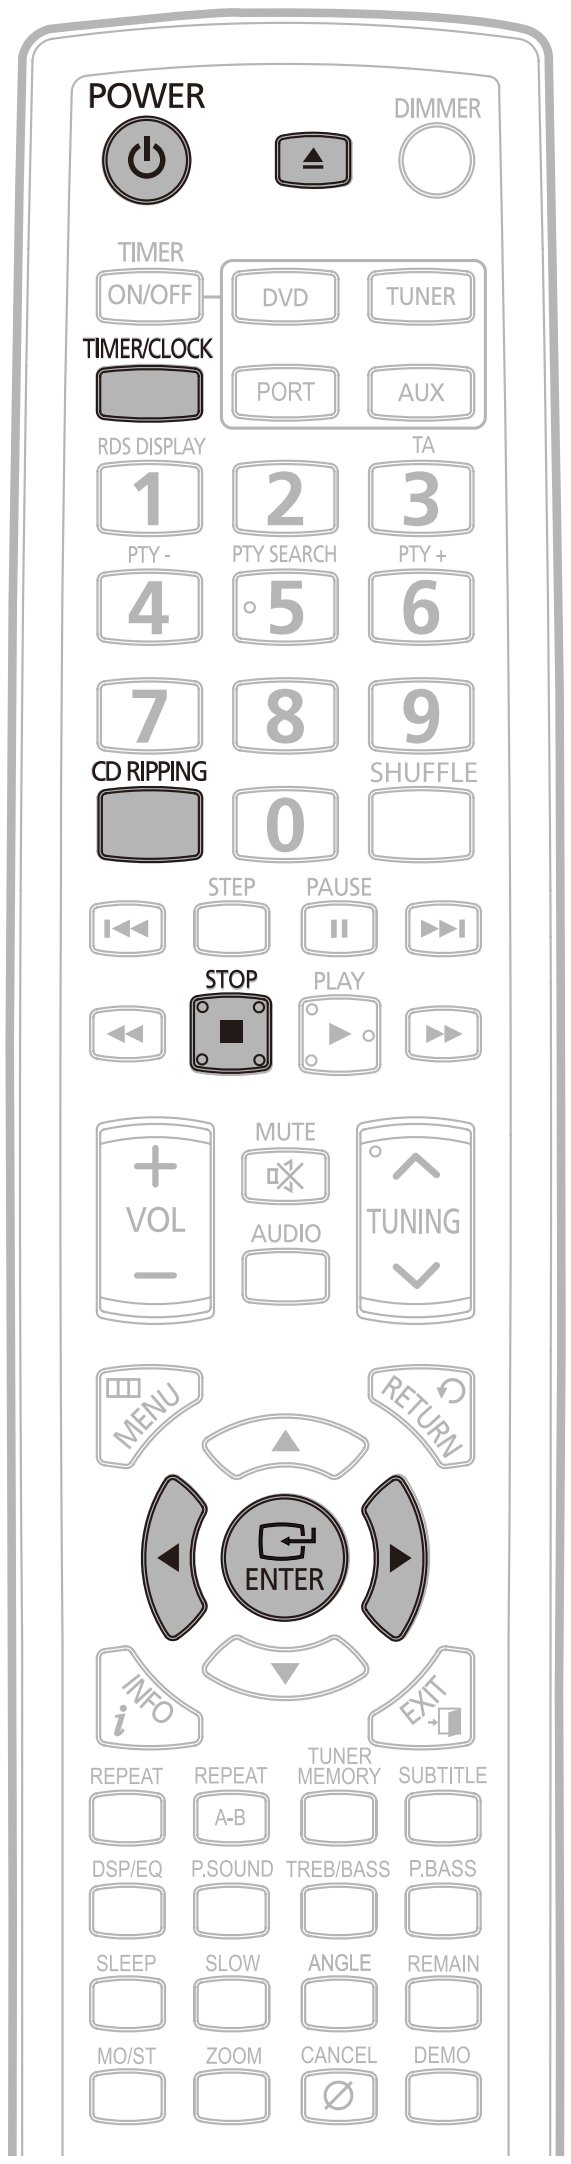
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
0
SHUFFLE
STEP
PAUSE
STOP
PLAY
VOL
MUTE
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

### Note

- ◆ Don’t disconnected USB and AC Cord during CD-Ripping. This may cause the file damage. If you want to stop CD-Ripping during CD-Ripping, you must press stop Key first and after the CD Stopped, then you can remove the USB device.
- ◆ If you disconnected USB device when CD Ripping, the main unit will be power off and you may not delete the ripped file, In this case, please connect the USB on the PC and backup the USB data on the PC first and then formate the USB device .
- ◆ When the USB memory is not enough, it will be displayed “RIPPING ERROR”.
- ◆ DTS-CD can’t for CD Ripping.
- ◆ With external HDD, FAT format the USB can be CD Ripping, but not NTFS. The CD Ripping function of this product does not support all USB devices.
- ◆ When you use CD high speed search function or in the Pause or Stop mode, the CD Ripping can’t work.
- ◆ During CD Ripping, do not deal impact. If is shocked while CD Ripping, CD Ripping maybe disengage.
- ◆ Sometimes, some of USB devices, CD Ripping time is long.
- ◆ When CD Ripping completes or Stops, the CD will reload.
- ◆ When HDMI audio on, the CD RIPPING can’t work.

# Timer Function

- The timer enables you to switch the system on or off at specific times.
- If you no longer want the system to be switched on or off automatically, you must cancel the timer.
- Before setting the timer, check that the current time is correct.
- For each step, you have a few seconds to set the required options.
  If you exceed this time, you must start again.

**Example:** You wish to wake up to music every morning.

### 1 Switch the system on by pressing **POWER**.

### 2 Press **TIMER/CLOCK** until **TIMER** is displayed.

### 3 Press the **ENTER** button.

- **TIME ON** is displayed for a few seconds, followed by any switch-on time already set; you can set the timer switch-on time.

### 4 Set the timer switch-on time.

**a**. Set the hour by pressing ◀ or ▶ button.
**b.** Press **ENTER** .
- The minutes flash.

**c.** Set the minutes by pressing ◀ or ▶ button.
**d.** Press **ENTER**.
- **TIME OFF** is displayed for a few seconds, followed by any switch-off time already set; you can now set the timer switch-off time.

### 5 Set the timer switch-off time.

**a**. Set the hour by pressing ◀ or ▶ button.
**b.** Press **ENTER**.
- The minutes flash.

**c.** Set the minutes by pressing ◀ or ▶ button.
**d.** Press **ENTER**.
- **VOL 10** is displayed, where 10 corresponds to the volume already set.

### 6 Press ◀ or ▶ button to adjust the volume level and press **ENTER**.

- The source to be selected is displayed.

### 7 Press ◀ or ▶ button to select the source to be played when the system switches on.

- TUNER (radio) :
  **a** Press **ENTER**.
  **b** Select a preset station by pressing ◀ or ▶ .
- DVD/CD (compact disc) :
  Load on or more compact disc.
- USB :Insert a USB.

### 8 Press **ENTER** to confirm the timer.

### 9 Press **POWER** to set the system to standby mode.

- 🕒 is displayed to the top right of the time, indicating that the timer has been set.
- The system will switch on and off automatically at the required times.

**Note**

- If the timer switch on and off times are identical, the word **ERROR** is displayed.
- If there is no disc or usb, when you select the “DVD, USB, it will automatically change to “TUNER”.

# Canceling the Timer

After having set the timer, it will start automatically as shown by the TIMER indication on the display. If you no longer wish to use the timer, you must cancel it.

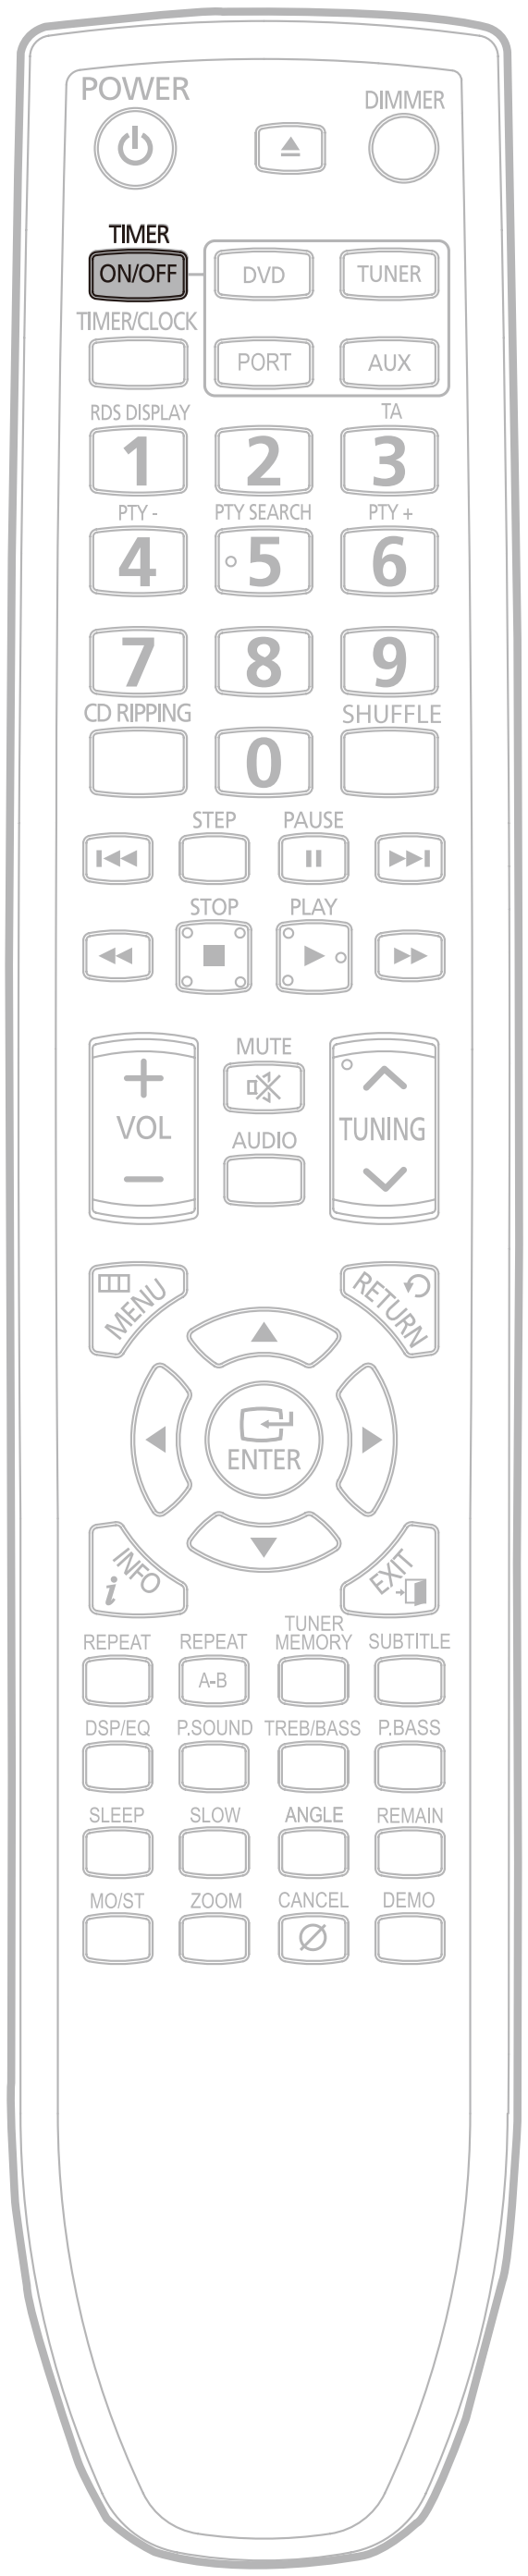
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
SHUFFLE
0
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

To cancel the timer, press **TIMER ON/OFF** once.

- ◷ is no longer displayed.

To resume the timer, press **TIMER ON/OFF** again.

- ◷ is displayed again.

**Note**

- You can cancel the timer while the power is on or while the player is in standby.

# Power Sound / Power Bass/ Treble Level / Bass Level Function

## POWER SOUND Function

**Your micro-compact system is equipped with the function of POWER SOUND mode . The function of POWER SOUND mode amplifies bass and improves high key or bass twice as much for you to appreciate powerful real sound.**

Press the **P.SOUND** button.

Result: "**P.SOUND**" is displayed for a few seconds.

To cancel this function, press **P.SOUND** again, "**OFF**" is displayed for a few seconds.

➢ When CD Ripping,the P.SOUND function can't work and the P.SOUND automatically covert to "OFF" mode.

## POWER BASS Function

**Your micro-compact system has a bass amplification function called Power Bass. This function makes the sound more powerful and real.**

Press the **P.BASS** button.

Result: "**P,BASS**" is displayed for a few seconds.
To cancel this function, press **P.BASS** again,
"**OFF**" is displayed for a few seconds.

➢ When CD Ripping,the P.BASS function can't work and the P.BASS automatically covert to "OFF" mode.

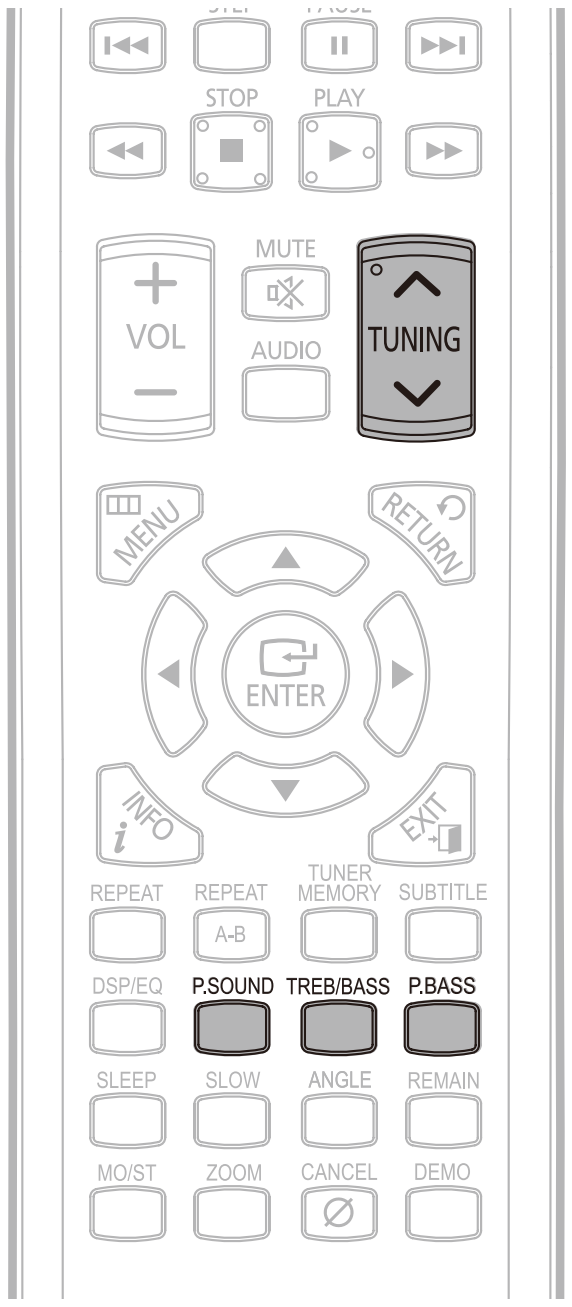
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

## Treble Level Function

Treble Control function stresses high tones providing thudding sound effects.

Press **TREB/BASS** button , TREB 00 is displayed.

- Press the TUNING ︿ , ﹀ button to select from TREB -08 to TREB 08.
- You can select the level of high tones you desire.

## Bass Level Function

BASS function stresses low tones providing thudding sound effects.

Press **TREB/BASS** button , **BASS 00** is displayed.

- Press the TUNING ︿ , ﹀ button to select from **BASS -08** to **BASS 08.**
- You can select the level of low tones you desire.

# DSP/EQ Function

DSP(Digital Signal Processor) : DSP modes have been designed to simulate different acoustic environments.

EQ : You can select ROCK, POP, or CLASSIC to optimize the sound for the genre of music you are playing.

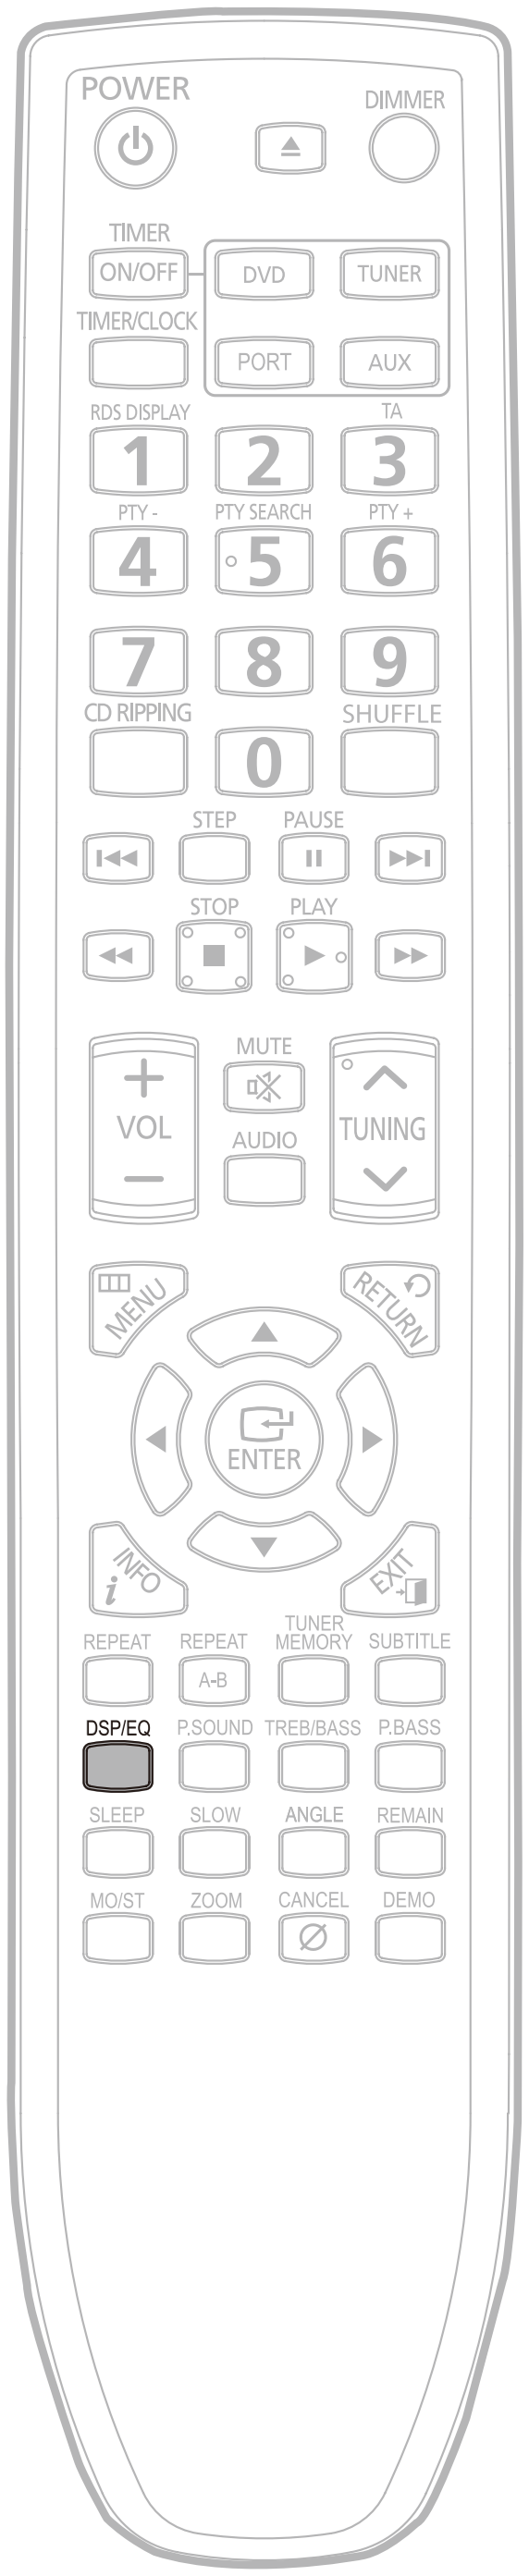
POWER
DIMMER
TIMER
ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
SHUFFLE
0
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

## Press the **DSP/EQ** button.

Each time the button is pressed, the selection changes as follows:

**PASS → ROCK → JAZZ → POP → CLASSIC → DANCE → PARTY → HIP-HOP → DNSE → WIDE 3D**

- **POP, JAZZ, ROCK** : Depending on the genre of music, you can select POP, JAZZ, and ROCK.
- **CLASSIC** : Select this when listening to classical music.
- **DANCE** : Simulates the sound of a dance club with a throbbing bass beat.
- **PARTY** : Provides the feeling of a party club.
- **HIP-HOP** : Provides a clear vocal as if listening HIP-HOP music.
- **DNSE** : Provides various sound settings to enhance the type of music you’re listening to.
- **WIDE 3D** : Provides various sound settings to enhance the type of music you’re listening to.
- **PASS** : Select this for normal listening.

▶ When CD Ripping,the DSP/EQ function can’t work and the DSP/EQ automatically covert to “PASS” mode.

# Sleep Timer Function / Mute Function

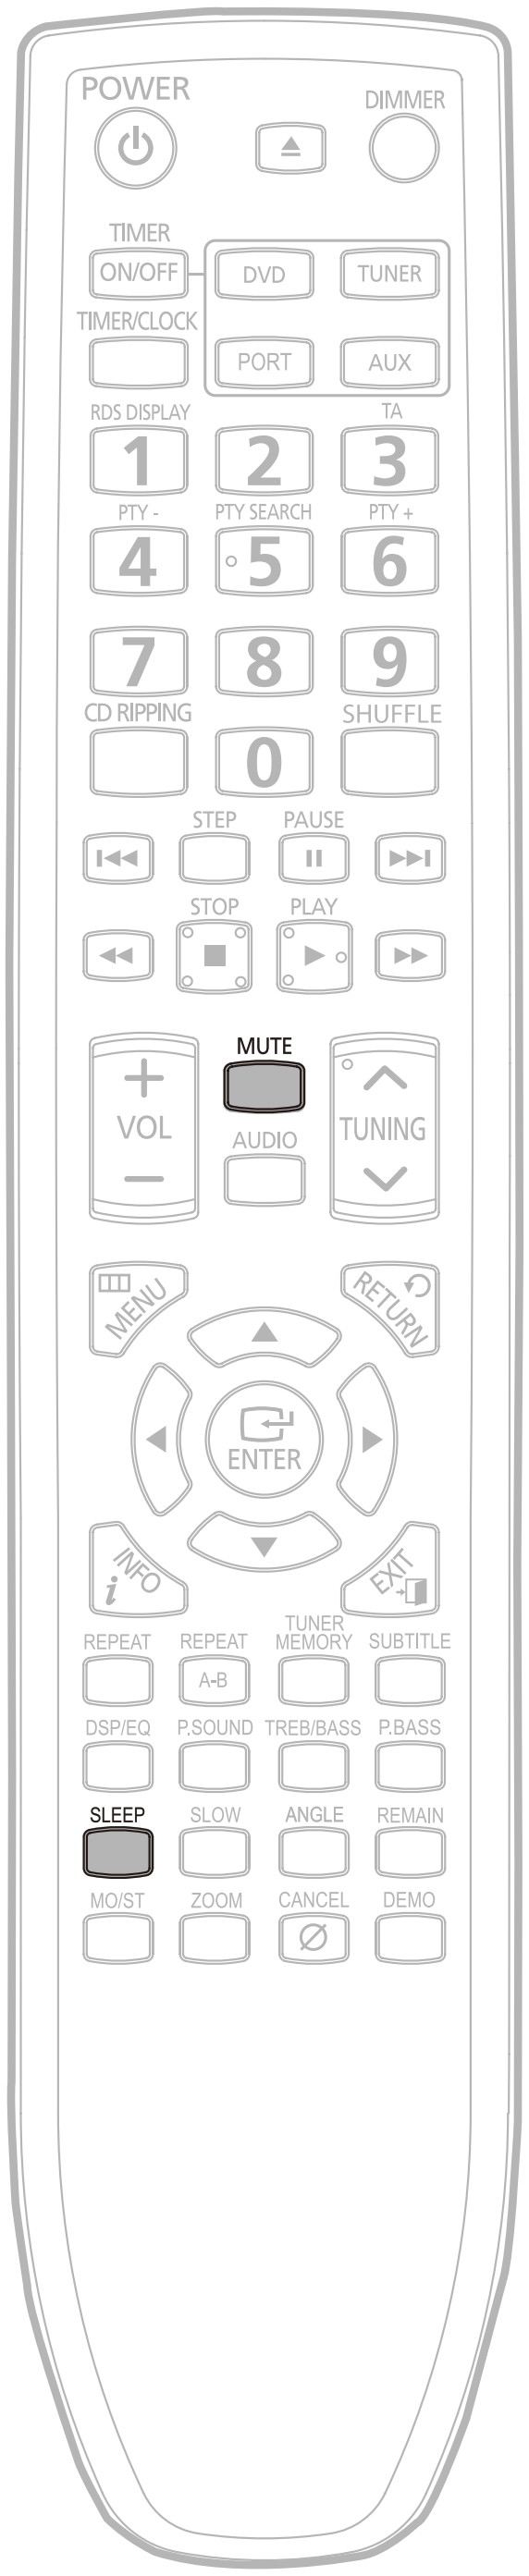
POWER
DIMMER
TIMER ON/OFF
DVD
TUNER
TIMER/CLOCK
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
SHUFFLE
0
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

## Sleep Timer Function

You can set the time that the DVD player will shut itself off.

Press **SLEEP** button.

- Each time the button is pressed, the selection changes as follows:
  90 MIN → 60 MIN → 45 MIN → 30 MIN → 15 MIN → OFF.

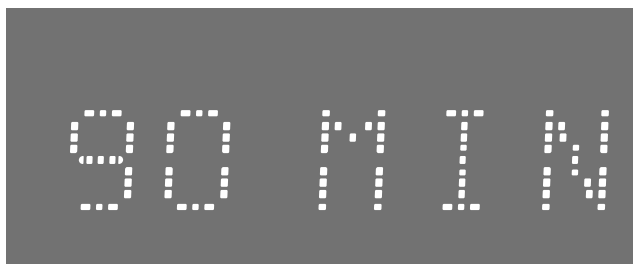

To confirm the sleep timer setting, press **SLEEP** button.

- The remaining time before the DVD player will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

To cancel the sleep timer, press **SLEEP** button until OFF appears on the display.

## Mute Function

This is useful when answering a doorbell or telephone call.

Press **MUTE** button.

- 'MUTE' appears in the display.
- To turn off mute, press this button again.



# DEMO Function / DIMMER Function / ECO Function

## DEMO Function

You can view the various functions available on your system.

### Press **DEMO** button.

- The various functions available are listed in turn on the display.
- All these functions are described in detail in this booklet.
  For instructions on how to use them, refer to the appropriate sections.

## DIMMER Function

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.

### Press **DIMMER** button.

- Each time the button is press, the brightness changes as follows:
  **DIMMER ON(Dim) → DIMMER OFF(Bright)**.

**Note**

Press any buttons to cancel DEMO function.
When you turn off the main unit, DEMO function will be auto start after 10 senconds. if you want to cancel this DEMO function, press DEMO button again.

## ECO Function

**You can save the power consumption while the unit is turned off (on standby)**

### In Standby mode, press and hold the **POWER** button for longer than 3 seconds.

- Result: ECO displays and the main set automatically switches itself into the power saving mode.

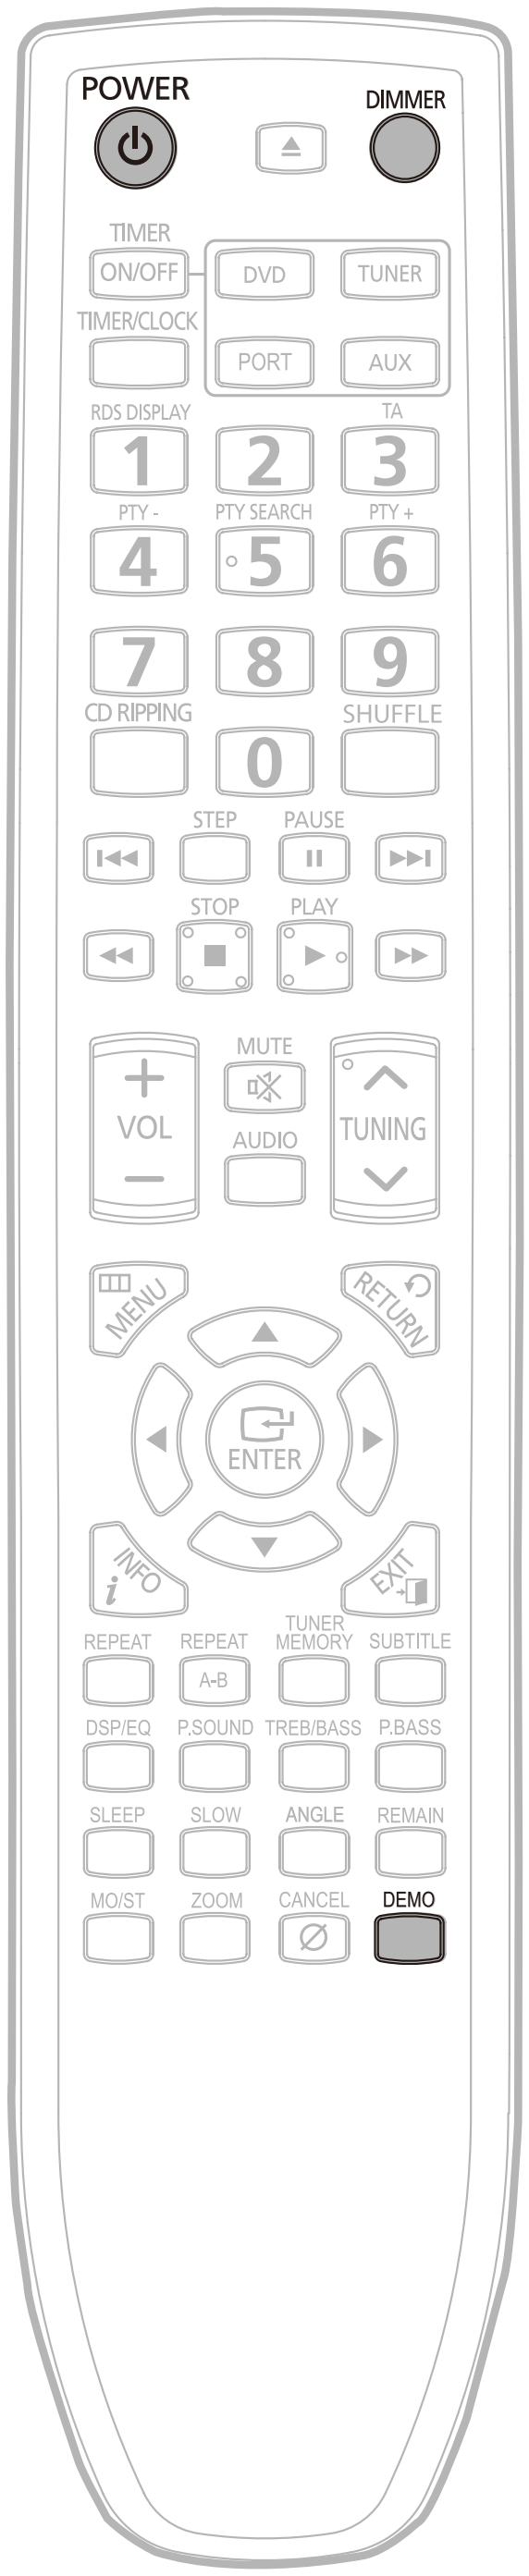
POWER
DIMMER
TIMER
ON/OFF
TIMER/CLOCK
DVD
TUNER
PORT
AUX
RDS DISPLAY
TA
1
2
3
PTY -
PTY SEARCH
PTY +
4
5
6
7
8
9
CD RIPPING
SHUFFLE
0
STEP
PAUSE
STOP
PLAY
MUTE
VOL
AUDIO
TUNING
MENU
RETURN
ENTER
INFO
EXIT
REPEAT
REPEAT
A-B
TUNER MEMORY
SUBTITLE
DSP/EQ
P.SOUND
TREB/BASS
P.BASS
SLEEP
SLOW
ANGLE
REMAIN
MO/ST
ZOOM
CANCEL
DEMO

# Connecting Headphones

You can connect a set of headphones to your micro component system so that you can listen to music or radio programmers without disturbing other people in the room. The headphones must have a 3.5ø jack or an appropriate adapter.

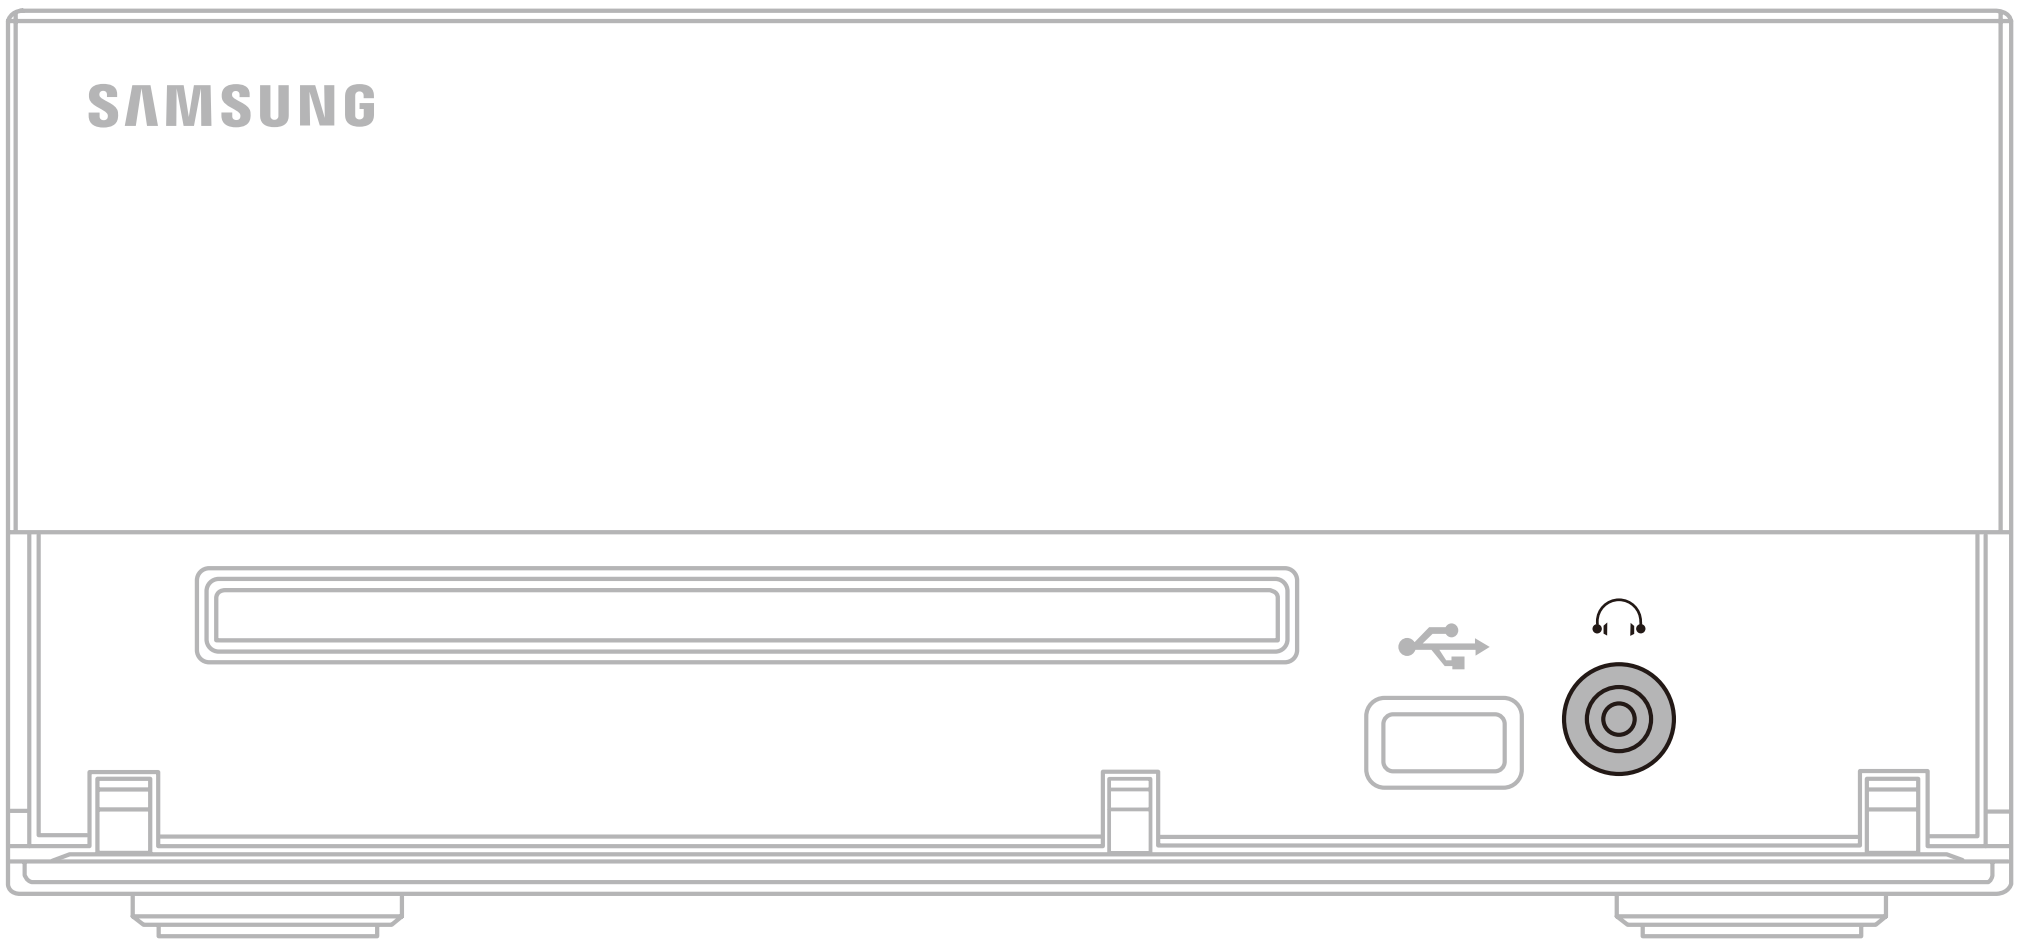

## Connect the headphones to the **headphones** jack on the front panel.

- The loudspeakers are no longer used to output the sound.

**Note**

- Prolonged use of headphones at a high volume may damage your hearing.

# Cautions on Handling and Storing Discs

Small scratches on the disc may reduce sound and picture quality or cause breaks in playback. Be especially careful not to scratch discs when handling them.

## Handling discs

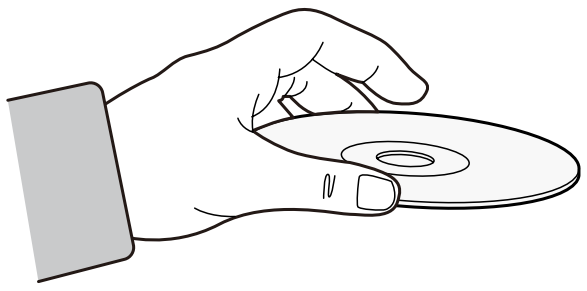

**Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface.**
**Do not stick paper or tape on the disc.**

## Handling and Storing Discs

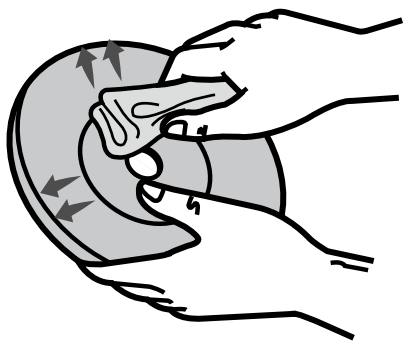

**When you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.**

- When cleaning, wipe gently from the inside to the outside of the disc.

**Note**

- Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.

# Before Calling for Service

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Center.

| Symptom | Check/Remedy |
|---|---|
| **Disc tray does not open.** | • Is the power cord plugged securely into the outlet?<br>• Turn off the power and then turn it back on. |
| **Playback does not start.** | • Check the region number of the DVD. DVD discs purchased from abroad may not be playable.<br>• CD-ROMs and DVD-ROMs cannot be played on this DVD player.<br>• Make sure that the rating level is correct. |
| **The remote control does not work.** | • Is the remote control being operated within its operation range of angle and distance?<br>• Are the batteries exhausted? |
| **Playback does not start immediately when the Play/Pause button is pressed.** | • Are you using a deformed disc or a disc with scratches on the surface?<br>• Wipe the disc clean. |
| **Sound is not produced.** | • No sound is heard during fast playback, slow playback, and step motion playback.<br>• Are the speakers connected properly? Is the speaker setup correctly customized?<br>• Is the disc severely damaged? |
| **Picture does not appear, sound is not produced, or the disc tray opens 2 to 5 seconds later.** | • Was the DVD player suddenly moved from a cold place to a warm one? When condensation forms inside the player, remove the disc and let the player stand for 1 or 2 hours with the power on. (You can use the player again after condensation disappears.) |
| **• Disc is rotating but no picture is produced.**<br>**• Picture quality is poor and picture is shaking.** | • Is the TV power on?<br>• Are the video cables connected properly?<br>• Is the disc dirty or damaged?<br>• A poorly manufactured disc may not be playable. |

| Symptom | Check/Remedy |
|---|---|
| **Audio language and subtitles do not work.** | ● Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently. |
| **Menu screen does not appear even when the menu function is selected.** | ● Are you using a disc that does not contain menus? |
| **Aspect ratio cannot be changed.** | ● You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode. Refer to the DVD disc jacket and then select the appropriate function. |
| **Can't receive radio broadcast.** | ● Is the antenna connected properly?<br>● If the antenna's input signal is weak, install an external FM antenna in an area with good reception. |
| **• The main unit is not working.**<br>**(Example: The power goes out or strange noise is heard.)**<br>**• The DVD player is not working normally.** | ● Turn off the power and hold the **STOP ■** button on the main unit or on the remote control for longer than 5 seconds.<br>Using the RESET function will erase all stored settings.<br>Do not use this unless necessary. |
| **The password for rating level has been forgotten.** | ● While the player is in the No Disc mode, hold the main unit's **STOP ■** button for longer than 5 seconds. “INITIAL” appears on the display and all settings will return to the default values.<br>● Press the POWER button.<br>**Using the RESET function will erase all stored settings.**<br>**Do not use this unless necessary.** |

# Notes on Terminology

| | |
|---|---|
| **ANGLE** | Recorded onto some DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left , from the right , etc.).<br>With such discs, the Angle button can be used to change the angle of view for specific scenes. |
| **CHAPTER NUMBER** | These numbers are recorded on DVD discs. A Title is subdivided into many sections, each of which is numbered, and specific parts of the video can be searched quickly using these numbers. |
| **DVD** | A high-density optical disc on which high-quality pictures and sound have been recorded by means of digital signals. Incorporating a new video compression technology (MPEG-2) and high-density recording technology, a DVD disc comprises two 0.6 mm thick discs bonded together. |
| **PCM** | An acronym for Pulse Code Modulation - another name for digital audio. |
| **PBC (PLAYBACK CONTROL)** | This is recorded on a video CD (version 2.0). Selected scenes or information can be chosen from the menu displayed on the TV monitor. |
| **REGION NUMBER** | Both the DVD player and DVD discs are encoded with a region number.<br>If the region number on the DVD disc does not correspond to the region number of the DVD player, the player cannot play the disc. |
| **SUBTITLES** | Translated appearing at the bottom of the screen. A DVD disc can contain up to 32 subtitle languages. |
| **TITLE NUMBER** | These numbers are recorded on DVD discs. When a disc contains two or more movies, these movies are numbered as Title 1, Title 2, etc. |
| **TRACK NUMBER** | These numbers are assigned to the tracks which are recorded on video and audio CDs. They enable specific tracks to be located quickly. |
| **VIDEO CD** | Contains recordings of pictures and sound whose quality is roughly comparable to that of video tape.<br>This player also supports video CDs with playback control (version 2.0). |
| **DOLBY DIGITAL** | 5.1 (or 6) Channel Digital Surround sound reproduced from DVDs and LDs recorded as a digital signals (with DOLBY DIGITAL disc marking). With better sound quality, dynamic range, and directionality than traditional Dolby surround technology, you can enjoy dynamic, realistic sound. |

# Specifications

## RADIO

### FM

| | |
|---|---|
| Signal/noise ratio | 55 dB |
| Usable sensitivity | 12 dB |
| Total harmonic distortion | 0.5 % |

## COMPACT DISC PLAYER

| | |
|---|---|
| Capacity | 1 disc |
| Frequency range | 20 Hz - 20 KHz (± 1 dB) |
| Signal/noise ratio | 90 dB (at 1 KHz) with filter |
| Distortion | 0.05 % (at 1 KHz) |
| Channel separation | 60 dB |
| Disc sizes | Diameter: 120 or 80 mm. Thickness: 1.2 mm |

## AMPLIFIER

| | |
|---|---|
| Output power | |
| Front Speaker(6 Ω) | 80W/CH RMS,IEC (total harmonic distortion: 10 %)(MAX-DG35/DG36) |
| Subwoofer Speaker(4 Ω) | 120W/CH RMS,IEC (total harmonic distortion: 10 %)(MAX-DG36) |
| Channel separation | 60 dB |
| Signal/noise ratio | 70 dB |

## GENERAL

| | |
|---|---|
| Power consumption | 40W |
| Dimensions | 230(D) x 105 (H) x 230 (W)  mm |
| Weight | 2.3 Kg |

## Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

| Region | Country | Customer Care Center ☎ | Web Site |
|---|---|---|---|
| North America | CANADA | 1-800-SAMSUNG(726-7864) | www.samsung.com/ca |
| | MEXICO | 01-800-SAMSUNG(726-7864) | www.samsung.com/mx |
| | U.S.A | 1-800-SAMSUNG(726-7864) | www.samsung.com/us |
| Latin America | ARGENTINE | 0800-333-3733 | www.samsung.com/ar |
| | BRAZIL | 0800-124-421, 4004-0000 | www.samsung.com/br |
| | CHILE | 800-SAMSUNG(726-7864) | www.samsung.com/cl |
| | NICARAGUA | 00-1800-5077267 | www.samsung.com/latin |
| | HONDURAS | 800-7919267 | www.samsung.com/latin |
| | COSTA RICA | 0-800-507-7267 | www.samsung.com/latin |
| | ECUADOR | 1-800-10-7267 | www.samsung.com/latin |
| | EL SALVADOR | 800-6225 | www.samsung.com/latin |
| | GUATEMALA | 1-800-299-0013 | www.samsung.com/latin |
| | JAMAICA | 1-800-234-7267 | www.samsung.com/latin |
| | PANAMA | 800-7267 | www.samsung.com/latin |
| | PUERTO RICO | 1-800-682-3180 | www.samsung.com/latin |
| | REP. DOMINICA | 1-800-751-2676 | www.samsung.com/latin |
| | TRINIDAD & TOBAGO | 1-800-SAMSUNG(726-7864) | www.samsung.com/latin |
| | VENEZUELA | 0-800-100-5303 | www.samsung.com/latin |
| | COLOMBIA | 01-8000112112 | www.samsung.com.co |
| Europe | BELGIUM | 02 201 2418 | www.samsung.com/be |
| | CZECH REPUBLIC | 800-726-786 (800 - SAMSUNG) | www.samsung.com/cz |
| | DENMARK | 70 70 19 70 | www.samsung.com/dk |
| | FINLAND | 030-6227 515 | www.samsung.com/fi |
| | FRANCE | 01 48 63 00 00 | www.samsung.com/fr |
| | GERMANY | 01805 - SAMSUNG(726-7864) (€ 0,14/Min) | www.samsung.de |
| | HUNGARY | 06-80-SAMSUNG(726-7864) | www.samsung.com/hu |
| | ITALIA | 800-SAMSUNG(726-7864) | www.samsung.com/it |
| | LUXEMBURG | 02 261 03 710 | www.samsung.com/lu |
| | NETHERLANDS | 0900-SAMSUNG (726-7864) (€ 0,10/Min) | www.samsung.com/nl |
| | NORWAY | 815-56 480 | www.samsung.com/no |
| | POLAND | 0 801 1SAMSUNG(0-801172 678) | www.samsung.com/pl |
| | PORTUGAL | 80820-SAMSUNG(726-7864) | www.samsung.com/pt |
| | SLOVAKIA | 0800-SAMSUNG(726-7864) | www.samsung.com/sk |
| | SPAIN | 902-1-SAMSU(72678) | www.samsung.com/es |
| | SWEDEN | 0771-400 200 | www.samsung.com/se |
| | U.K | 0845 SAMSUNG (7267864) | www.samsung.com/uk |
| | EIRE | 0818 717 100 | www.samsung.com/ie |
| | AUSTRIA | 0800-SAMSUNG(726-7864) | www.samsung.com/at |
| | SWITZERLAND | 0800-SAMSUNG(726-7864) | www.samsung.com/ch |
| CIS | RUSSIA | 8-800-555-55-55 | www.samsung.ru |
| | KAZAKHSTAN | 8-10-800-500-55-500 | www.samsung.com/kz_ru |
| | UZBEKISTAN | 8-10-800-500-55-500 | www.samsung.com/kz_ru |
| | KYRGYZSTAN | 00-800-500-55-500 | |
| | TADJIKISTAN | 8-10-800-500-55-500 | |
| | UKRAINE | 8-800-502-0000 | www.samsung.ua |
| | LITHUANIA | 8-800-77777 | www.samsung.lt |
| | LATVIA | 8000-7267 | www.samsung.com/lv |
| | ESTONIA | 800-7267 | www.samsung.ee |
| Asia Pacific | AUSTRALIA | 1300 362 603 | www.samsung.com/au |
| | NEW ZEALAND | 0800 SAMSUNG (0800 726 786) | www.samsung.com/nz |
| | CHINA | 800-810-5858, 400-810-5858, 010-6475 1880 | www.samsung.com/cn |
| | HONG KONG | 3698-4698 | www.samsung.com/hk |
| | INDIA | 3030 8282, 1800 110011, 1-800-3000-8282 | www.samsung.com/in |
| | INDONESIA | 0800-112-8888 | www.samsung.com/id |
| | JAPAN | 0120-327-527 | www.samsung.com/jp |
| | MALAYSIA | 1800-88-9999 | www.samsung.com/my |
| | PHILIPPINES | 1800-10-SAMSUNG(726-7864) | www.samsung.com/ph |
| | SINGAPORE | 1800-SAMSUNG(726-7864) | www.samsung.com/sg |
| | THAILAND | 1800-29-3232, 02-689-3232 | www.samsung.com/th |
| | TAIWAN | 0800-329-999 | www.samsung.com/tw |
| | VIETNAM | 1 800 588 889 | www.samsung.com/vn |
| Middle East & Africa | TURKEY | 444 77 11 | www.samsung.com/tr |
| | SOUTH AFRICA | 0860-SAMSUNG(726-7864 ) | www.samsung.com/za |
| | U.A.E | 800-SAMSUNG (726-7864), 8000-4726 | www.samsung.com/ae |